

Manuals.plus /

› LG /

› LG DP132H DVD Player User Manual

LG DP132H

LG DP132H DVD Player User Manual

Model: DP132H



INTRODUCTION

The LG DP132H is a compact DVD player designed for traditional DVD and CD playback, featuring Full HD upscaling and convenient USB playback. This manual provides essential information for setting up, operating, and maintaining your device.

WHAT'S IN THE BOX

- LG DP132H DVD Player
- Remote Control
- AV Cables (for standard definition connection)
- User Manual (this document)

SETUP

Connecting to Your TV

The LG DP132H offers flexible connection options to your television:

- **HDMI Connection (Recommended for Full HD Upscaling):** For the best picture quality, connect an HDMI cable (not included) from the HDMI OUT port on the DVD player to an available HDMI IN port on your TV. Select the corresponding HDMI input on your TV.
- **AV (Composite) Connection:** If your TV does not have an HDMI port, or if you prefer a standard definition connection, use the included AV cables. Match the colored plugs (Yellow for Video, White for Left Audio, Red for Right Audio) from the DVD player's AV OUT ports to the corresponding AV IN ports on your TV. Select the AV input on your TV.

Power Connection

Connect the power cord from the DVD player to a standard electrical outlet.



Figure 1: Front view of the LG DP132H DVD Player with the disc tray open, showing the LG logo, disc tray, control buttons, and USB port.

OPERATING INSTRUCTIONS

Disc Playback

1. Ensure the DVD player is powered on and connected to your TV.
2. Press the **OPEN/CLOSE** button on the player or remote control to open the disc tray.
3. Place a DVD or CD disc gently onto the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. The player will automatically begin playback. If not, press the **PLAY** button on the remote control.

Supported Disc Formats: The player supports various DVD and CD disc types, including DVD+R, DVD+RW, DVD-R, DVD-ROM, DVD-RW, Dual Disc (DVD + CD), CD, CD+G, CD-R, and CD-RW.

USB Playback

The LG DP132H features a USB port for playing media files directly from a USB flash drive.

1. Insert your USB flash drive into the USB port on the front of the DVD player.
2. Use the remote control to navigate to the USB input source.
3. Browse your files (videos, music, photos) and select the desired content for playback.



Figure 2: Front view of the LG DP132H DVD Player, highlighting the USB port on the right side.

Remote Control Functions

The included remote control provides full functionality for operating the DVD player. Key functions include:

- Power ON/OFF
- Play, Pause, Stop, Fast Forward, Rewind
- Chapter/Track Skip
- Volume Control (if connected directly to an audio system or TV via player's audio out)
- Menu Navigation

- USB Source Selection

FEATURES

- Full HD Upscaling: Enhances standard definition content to near Full HD quality.
- USB Playback: Directly play videos, music, and view photos from a USB flash drive.
- HDMI Port: Provides a high-quality digital connection for audio and video.
- Wide Media Format Support: Compatible with DVD+R, DVD+RW, DVD-R, DVD-ROM, DVD-RW, Dual Disc (DVD + CD), CD, CD+G, CD-R, CD-RW.

SPECIFICATIONS

Feature	Detail
Brand	LG
Model Number	DP132H
Item Weight	2 pounds
Product Dimensions	9.8 x 8 x 1.5 inches
Color	Black
Special Features	Upscaling
Resolution	1920 x 1080 pixels (Full HD Upscaling)
Connector Type	USB 2.0, HDMI, Composite Video Output
Power Source	AC Power
Remote Control Batteries	2 AAA batteries (included)

MAINTENANCE

- **Cleaning the Player:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid or aerosol cleaners.
- **Cleaning Discs:** Wipe discs from the center outwards with a soft, lint-free cloth. Avoid touching the playback surface.
- **Ventilation:** Ensure adequate ventilation around the player to prevent overheating. Do not block ventilation openings.

TROUBLESHOOTING

- **No Power:** Check if the power cord is securely connected to both the player and the electrical outlet.
- **No Picture/Sound:** Verify that the HDMI or AV cables are correctly connected to both the player and the TV, and that the correct input source is selected on your TV.
- **Disc Not Playing:** Ensure the disc is clean and free of scratches. Check that the disc is placed correctly in the disc tray with the label side up. Verify the disc format is supported by the player.
- **USB Device Not Recognized:** Ensure the USB device is properly inserted. Check that the file formats on the

USB device are supported by the player.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official LG website. You can also contact LG customer service for assistance.

Note: Extended protection plans may be available for purchase separately.

