

TOUCHBeauty TB-1458

TOUCHBeauty TB-1458 All-in-One Hair Trimmer Instruction Manual

Model: TB-1458

For Face, Eyebrow, Nose, Ear, and Body Hair Trimming

1. INTRODUCTION

The TOUCHBeauty TB-1458 is a versatile, battery-powered hair trimmer designed for precise and comfortable removal of unwanted hair from various areas including the face, eyebrows, nose, ears, and body. Featuring dual replaceable trimmer blades, this device offers an efficient and gentle grooming experience. Its compact and lightweight design ensures portability for use at home or while traveling.



Image: The TOUCHBeauty TB-1458 Hair Trimmer with its two interchangeable heads and protective cap.

2. SAFETY INFORMATION

WARNING:

- KEEP AWAY FROM WATER SOURCES TO PREVENT ELECTRICAL HAZARDS.
- BE CAREFUL WHEN HANDLING AND REPLACING SHARP BLADES.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your TOUCHBeauty TB-1458 hair trimmer:

PRODUCT STRUCTURE



Image: Detailed view of the trimmer's structure and included accessories.

- **Eyebrow Blade:** Precision blade for eyebrow shaping and facial hair trimming (3.5mm, 1.5mm).
- **Nose Hair Blade:** Rotary blade for safe and effective nose and ear hair removal.
- **ON/OFF Switch:** Controls the power of the device.
- **Protective Cover:** Shields the blade when not in use.
- **Lower Cover:** Houses the battery compartment.
- **Cleaning Brush:** For maintaining the blades.

4. SETUP

4.1 Battery Installation

1. Twist the lower cover counter-clockwise to open the battery compartment.
2. Insert 1 AAA battery (not included) into the compartment, ensuring the correct polarity (+/-).
3. Twist the lower cover clockwise to securely close the compartment.

4.2 Attaching and Switching Blade Heads

The trimmer comes with two replaceable heads: a nose trimmer head and a precision facial/eyebrow trimmer head.

HOW TO SWITCH BLADE HEADS

Comes with 2 replaceable heads



Image: Visual guide for changing trimmer heads.

1. To remove a head, gently pull it upwards from the main body.
2. To attach a head, align the head with the main body and push it down until it clicks into place.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the ON/OFF switch located on the body of the trimmer to turn the device on or off.

5.2 Using the Nose Hair Trimmer Head

NOSE HAIR TRIMMER HEAD

- Fast, safe and quiet trimming
- Easy clean with additional brush
- Curved, hypoallergenic, durable blade



360° Rotary



Image: Demonstrating the use of the nose hair trimmer head.

- Attach the nose hair trimmer head.
- Gently insert the trimmer tip into your nostril or ear canal.
- Move the trimmer in a circular motion to trim unwanted hair. The 360-degree rotary action ensures efficient trimming.
- Avoid inserting the trimmer too deeply to prevent discomfort or injury.

5.3 Using the Precision Facial/Eyebrow Trimmer Head



ALL IN 1 PRECISION HAIR TRIMMER

- Shaves quickly and painlessly
- 2 blades head for convenience
- Pen-sized body, compact and handy



Image: Demonstrating the use of the precision eyebrow trimmer head.

SAFE & SKIN-FRIENDLY TRIMMING

Ideal for the face, body, eyebrow, ear or nose hair removal



Image: The trimmer is suitable for various body areas including face, eyebrows, ears, nose, arms, and legs.

- Attach the precision facial/eyebrow trimmer head.
- For eyebrows, gently glide the trimmer against the direction of hair growth to shape and remove stray hairs. Use the smaller blade for fine detailing.
- For facial or body hair, hold the trimmer at a slight angle against the skin and move it slowly to trim hair.
- The dual-edge blades are designed for effective and gentle trimming on sensitive areas.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your trimmer.

- After each use, turn off the trimmer and remove the blade head.
- Use the provided cleaning brush to remove any trapped hairs from the blade and the trimmer body.
- The trimmer is IPX6 water-resistant, allowing for convenient cleaning under running water. Ensure the battery compartment is securely closed before rinsing.
- Allow all parts to air dry completely before reassembling or storing the trimmer.
- Store the trimmer with its protective cover on in a dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly inserted.	Replace with a new AAA battery, ensuring correct polarity.
Trimmer is not cutting effectively.	Blades are clogged with hair or dull.	Clean the blades thoroughly with the brush. If blades are dull, consider replacing the head (contact manufacturer for availability).
Trimmer makes unusual noise.	Blade head is not properly attached or internal component issue.	Ensure the blade head is securely attached. If the issue persists, contact customer support.

8. SPECIFICATIONS

- Model Number:** TB-1458
- Power Source:** 1 AAA battery (not included)
- Product Dimensions:** 5.83 x 0.75 x 0.75 inches
- Item Weight:** 2.47 ounces (0.07 Kilograms)
- Water Resistance:** IPX6
- Blade Material:** Stainless Steel
- Recommended Uses:** Eyebrows, Nose, Ear, Body, Face, Head, Arms, Legs
- Color:** Pink

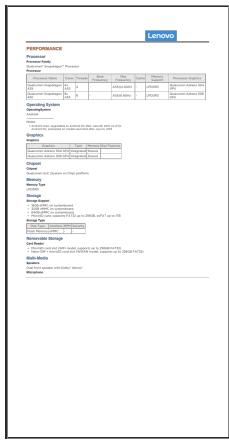
9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the product packaging or contact TOUCHBeauty customer service directly. Contact details can typically be found on the official TOUCHBeauty website or through your point of purchase.

© 2025 TOUCHBeauty. All rights reserved.

Related Documents - TB-1458

	<p>TB-2035 Manicure/Pedicure Nail Set - Instruction Manual & User Guide TOUCHBeauty</p> <p>Official instruction manual for the TOUCHBeauty TB-2035 Manicure/Pedicure Nail Set. Learn how to use, clean, maintain, and troubleshoot your nail care device. Includes specifications and safety information.</p>
	<p>TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set User Manual</p> <p>Explore the TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set with this comprehensive user manual. Learn about its features, attachments, safe operation, maintenance, and troubleshooting for achieving professional nail care at home.</p>
	<p>TOUCHBeauty TB-14838 Rotary Facial Cleanser Set: Instruction Manual</p> <p>Comprehensive instruction manual for the TOUCHBeauty TB-14838 Rotary Facial Cleanser Set, detailing safety instructions, product specifications, operating procedures, cleaning, maintenance, and troubleshooting.</p>
	<p>TB-2035 Manicure/Pedicure Nail Set - Instruction Manual & User Guide TOUCHBeauty</p> <p>Official instruction manual for the TOUCHBeauty TB-2035 Manicure/Pedicure Nail Set. Learn how to use, clean, maintain, and troubleshoot your nail care device. Includes specifications and safety information.</p>
	<p>TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set User Manual</p> <p>Explore the TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set with this comprehensive user manual. Learn about its features, attachments, safe operation, maintenance, and troubleshooting for achieving professional nail care at home.</p>

	<p>Lenovo Tab M10 Tablet Specifications and Features</p> <p>Comprehensive product specifications for the Lenovo Tab M10 tablet, detailing its performance, display, connectivity, storage, battery life, design, and pre-installed software.</p>
---------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Documents - TOUCHBeauty – TB-1458



[\[pdf\] Accessories](#)

PowerPoint Presentation SZSS001user K1184401213 p globalsources IMAGES PDT SPEC 213 |||

2 in 1 Electric Shaver and Trimmer Model **TB-1458 PRODUCT FEATURES** 1. Comes with 2 replaceable heads for convenient use. 2. Good for removing nose/ear hair, eyebrow, facial hair and body hair. 3. Arched blade, removes nose/ear hair quickly and safely 4. Water resistant IPX5 Size: 14.8 X Dia 1.9CM Pow...

lang: score:18 filesize: 409.66 K page_count: 1 document date: 2021-03-02