### Manuals+

Q & A | Deep Search | Upload

### manuals.plus /

- iPlay, iLearn /
- › iPlay, iLearn 3-in-1 Baby Walker and Activity Center Instruction Manual

# iPlay, iLearn Y5-I4KX-M0BL

# iPlay, iLearn 3-in-1 Baby Walker and Activity Center Instruction Manual

Model: Y5-I4KX-M0BL

#### INTRODUCTION

Thank you for choosing the iPlay, iLearn 3-in-1 Baby Walker and Activity Center. This versatile product is designed to support your child's development through various stages, functioning as an activity table, a sit-to-stand walker, and a drawing board. Please read this manual carefully before assembly and use to ensure safe and proper operation.



Image: The iPlay, iLearn 3-in-1 Baby Walker in both walker and activity table configurations.

## SAFETY INFORMATION

- Always supervise your child when using this product.
- Ensure all parts are securely assembled before each use.
- Do not use on uneven surfaces or near stairs.
- Keep small parts away from children under 3 years old to prevent choking hazards.
- Batteries should be installed and replaced by an adult. Do not mix old and new batteries or different types of batteries.
- This product is intended for children aged 9 months to 6 years.

## **C**OMPONENTS

The iPlay, iLearn 3-in-1 Baby Walker and Activity Center includes the following main components:

- Main Activity Panel (with steering wheel, phone, beads, etc.)
- Two Side Support Legs
- Drawing Board (integrated into the back of the activity panel)

• Drawing Pens and Stamps

## SETUP AND ASSEMBLY

## 1. Battery Installation

- 1. Locate the battery compartment on the main activity panel.
- 2. Using a screwdriver, open the battery compartment cover.
- 3. Insert 3 AA batteries, ensuring correct polarity (+/-).
- 4. Replace the cover and secure with the screw.

# 2. Assembling the Walker Mode

- 1. Attach the two side support legs to the main activity panel. Ensure they click securely into place.
- 2. Verify that the triangular structure is stable.

## 3. Converting to Activity Table Mode

- 1. Gently detach the side support legs from their walker configuration.
- 2. Re-attach the legs to the designated slots on the main activity panel to form a stable table base.

## 4. Converting to Drawing Board Mode

- 1. In activity table mode, the drawing board is accessible on the reverse side of the main panel.
- 2. Ensure the table is stable for drawing activities.



Image: Visual guide demonstrating the product's evolution through Activity Table, Walker, and Drawing modes.

## **OPERATING INSTRUCTIONS**

## **Activity Panel Features**

The main activity panel offers various interactive elements:

- Mode Switch: Located on the top right, this switch changes between different sound and music modes.
- Rolling Beads: Interactive beads for tactile stimulation.
- **Happy Town:** A central interactive area with lights and sounds.
- Small Mobile Phone: A detachable toy phone with numbers and sounds.
- Power/Volume Control: Adjust the sound level or turn the unit on/off.
- Steering Wheel: Rotates and activates sounds.
- Speed Handle: Adjusts the resistance of the walker wheels (see 'Adjustable Speed Control' below).
- Image Page: Flippable pages with images and corresponding sounds.

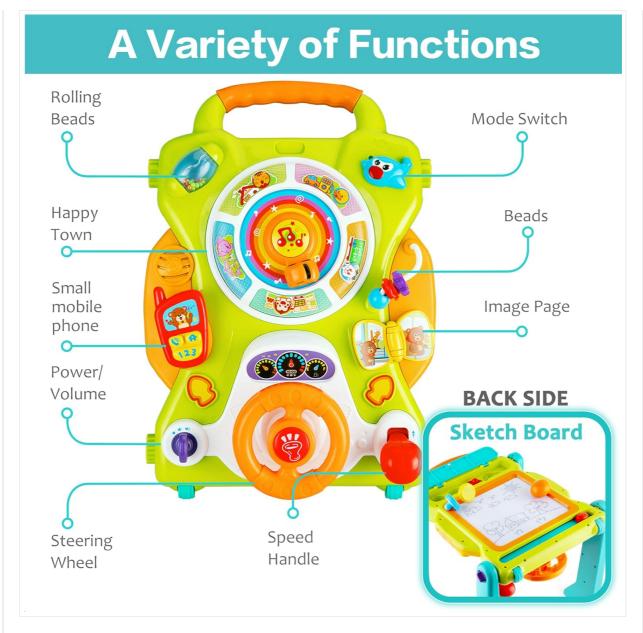


Image: Labeled diagram of the activity panel's interactive components.

## **Using the Walker Mode (10-18 Months)**

The walker mode is designed to assist children in taking their first steps. The ergonomic handle provides a comfortable grip.

- Adjustable Speed Control: Use the speed handle to increase or decrease the resistance of the wheels. This helps prevent the walker from moving too quickly for new walkers, promoting safer steps.
- **Stable Structure:** The triangular design and low center of gravity enhance stability, reducing the risk of tipping.
- **Prevents Bow Legs:** The 14-inch width between the wheels is designed to encourage a natural walking posture, helping to prevent bow-legged development.

# Why Choose Our Walker









Image: Features highlighting the walker's stable structure, low center of gravity, adjustable speed, and ergonomic handle.



Image: Illustration of the walker's design to promote healthy leg development.

## **Using the Drawing Board Mode (18-36 Months)**

The magnetic drawing board allows children to draw, stamp, and scribble, fostering creativity.

- Use the provided drawing pens and stamps on the magnetic surface.
- To erase, slide the eraser lever at the bottom of the board.
- Pens and stamps can be stored in the designated slots on the board.



Image: Close-up of the magnetic drawing board with its features.

### MAINTENANCE

- Clean the product with a damp cloth and mild soap. Do not immerse in water.
- · Avoid using abrasive cleaners or solvents.
- Regularly check for loose parts or damage. Discontinue use if any damage is found.
- Store in a dry place away from direct sunlight.

## **TROUBLESHOOTING**

- No Sound/Lights: Check battery installation and replace batteries if necessary. Ensure the
  power/volume switch is in the 'on' position and volume is adjusted.
- Walker Not Moving Smoothly: Check for debris in the wheels. Ensure the speed adjustment handle is not set to maximum resistance if smooth movement is desired.
- Parts Not Fitting: Refer to the assembly instructions. Ensure correct orientation and apply gentle pressure until parts click into place. Do not force components.

# **S**PECIFICATIONS

Feature	Detail
Product Dimensions	18 x 6 x 13 inches
Item Weight	5 ounces
Model Number	Y5-I4KX-M0BL
ASIN	B07D792CL3
Recommended Age	9 months - 6 years
Batteries Required	3 AA batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Green

## WARRANTY AND SUPPORT

iPlay, iLearn products are manufactured with quality and safety in mind. For any questions, concerns, or support needs regarding your 3-in-1 Baby Walker and Activity Center, please refer to the contact information provided with your purchase or visit the official iPlay, iLearn website for customer service details.

Please retain your proof of purchase for any warranty claims.

© 2025 iPlay, iLearn. All rights reserved.

### Related Documents - Y5-I4KX-M0BL



### Axia iPlay Network Audio Stream Player User Manual

User manual for Axia iPlay, a software application by The Telos Alliance for monitoring Livewire audio streams on Windows PCs. Features include source detection, filtering, presets, and access control.



### Y5 Karaoke Microphone Speaker Set Instruction Manual

User manual for the Y5 Karaoke Microphone Speaker Set, detailing features, functions, specifications, precautions, and FCC compliance. Enjoy mobile karaoke with advanced wireless connectivity.



### NIVIEW Y5 Smart Solar Camera Quick Start Guide

A comprehensive quick start guide for the NIVIEW Y5 Smart Solar Camera, detailing its features, setup, installation, app usage, and troubleshooting.



## Illy Coffee Machines and Blends: A Guide to Perfect Coffee at Home

Discover the world of Illy coffee, from their unique Arabica blends to a range of iperEspresso machines. Learn about the meticulous process of creating Illy's signature coffee, available in various roasts and formats like capsules, E.S.E. pods, and ground coffee. Explore the features and specifications of Illy's iperEspresso machine collection, including the X1 Anniversary, X7.1, X9, Y3.2, Y5, and Y5 Milk models, designed to deliver a perfect cup of coffee every time.



#### Y5 Karaoke Microphone User Manual - Shenzhen Shiwei Industrial Co., Ltd.

User manual for the Y5 Karaoke Microphone by Shenzhen Shiwei Industrial Co., Ltd., covering product introduction, components, usage instructions, precautions, and FCC compliance information.



## How to Use Global Caché IR Learners with the iLearn Application

A guide on using Global Caché IR learners with the iLearn application to capture, save, and manage IR commands for home automation and control.