

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER 3-in-1 Morning Meal Station WM2000SD Instruction Manual](#)

BLACK+DECKER WM2000SD

BLACK+DECKER 3-in-1 Morning Meal Station WM2000SD Instruction Manual

Model: WM2000SD
Brand: BLACK+DECKER

INTRODUCTION

The BLACK+DECKER 3-in-1 Morning Meal Station is a versatile appliance designed to prepare a variety of breakfast classics and more. Its compact design features interchangeable cooking plates, allowing it to function as a waffle maker, grill, or sandwich maker. The non-stick, dishwasher-safe plates ensure easy cleanup, while the temperature indicator and cool-touch handles provide safe and convenient operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.

PARTS AND FEATURES

Your BLACK+DECKER 3-in-1 Morning Meal Station includes the following components:

- **Main Unit:** The base appliance with heating elements and control lights.
- **Interchangeable Plates:**
 - Waffle Plates (2)
 - Grill Plates (2)
 - Sandwich Plates (2)
- **Cool-Touch Handles:** For safe opening and closing.
- **Preheat Indicator Light:** Signals when optimal cooking temperature is reached.
- **Grease Run-Off Channels:** Integrated into the plates for healthier cooking and easy cleaning.
- **Cord Storage:** Convenient wrap-around storage for the power cord.



**3-in-1 Compact
Design**

Removable and reversible plates
easily change to use as grill,
sandwich maker or waffle maker

The BLACK+DECKER 3-in-1 Morning Meal Station comes with three sets of interchangeable plates: waffle, grill, and sandwich plates, allowing for versatile cooking options.

SETUP AND FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and plastic bands from the appliance.
2. **Clean Plates:** Before first use, wash the interchangeable plates in warm, soapy water, rinse thoroughly, and dry completely. The plates are also dishwasher-safe.
3. **Install Plates:** Select the desired cooking plates (waffle, grill, or sandwich). Align the tabs on the plates with the slots in the appliance base and gently press down until they click securely into place. Ensure both top and bottom plates are correctly installed.
4. **Position:** Place the appliance on a flat, stable, heat-resistant surface.
5. **Preheat:** Close the lid and plug the appliance into a standard 120V AC electrical outlet. The red indicator light will illuminate, signaling that the appliance is heating.
6. **Ready Indicator:** Once the appliance reaches the optimal cooking temperature, the green indicator light will illuminate. The red and green lights will cycle on and off during cooking to maintain temperature.
7. **Initial Burn-Off (Optional):** For the first use, it is recommended to allow the appliance to preheat and run for 5-10 minutes without food to burn off any manufacturing residues. A slight odor or smoke is normal during this process.



**Space-Saving
Compact Design**

For easy storage

Installing the interchangeable plates is simple: align the tabs with the slots and press until they click into position. Ensure both top and bottom plates are securely fastened before use.

OPERATING INSTRUCTIONS

Always ensure the appliance is preheated before adding food. The green indicator light signals readiness.

Waffle Maker Function

1. Install the waffle plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly grease the waffle plates with cooking oil or butter. Avoid aerosol cooking sprays as they can damage the non-stick coating over time.
4. Pour your waffle batter onto the bottom plate, distributing it evenly. Do not overfill.
5. Close the lid gently. The cool-touch handle allows for safe closing.
6. Cook for 5-7 minutes, or until the waffles are golden brown and the green light illuminates again (indicating cooking completion). Cooking time may vary based on batter and desired crispness.
7. Carefully remove waffles using a heat-resistant, non-metallic utensil to avoid scratching the non-stick

surface.

Your browser does not support the video tag.

This video demonstrates the waffle maker function, showing how to prepare and cook waffles using the BLACK+DECKER 3-in-1 Morning Meal Station. It highlights the ease of use and the resulting golden-brown waffles.



Two square waffles cooking on the waffle plates, showing the grid pattern and golden-brown texture. The appliance is open, revealing the cooked waffles.

Grill Function

1. Install the grill plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly grease the grill plates with cooking oil or butter.
4. Place food items (e.g., sausages, vegetables, panini sandwiches) onto the bottom grill plate.
5. Close the lid. For thicker items, the floating hinge design allows the top plate to adjust.
6. Cook until desired doneness is achieved. Cooking times will vary based on food type and thickness.
7. Use the cool-touch handle to open the lid and carefully remove food with a heat-resistant, non-metallic utensil.



Grease Run-Off Channels

For healthy cooking

Three sausages grilling on the ribbed grill plates of the appliance, demonstrating the grill function. The grease run-off channels are visible.

Sandwich Maker Function

1. Install the sandwich plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly grease the sandwich plates with cooking oil or butter.
4. Place bread with fillings into the sandwich plate cavities.
5. Close the lid and latch the handle to seal the sandwiches.
6. Cook for 3-5 minutes, or until the sandwiches are golden brown and sealed.
7. Carefully unlatch the handle, open the lid, and remove the sealed sandwiches using a heat-resistant, non-metallic utensil.



Grill, Sandwich and Waffle Maker Plates Included

A close-up view of the sandwich plates, showing the triangular compartments designed to seal sandwich edges. These plates are interchangeable with the waffle and grill plates.

MAINTENANCE AND CLEANING

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates:** Press the release buttons (if applicable) and carefully remove the cooking plates.
3. **Wash Plates:** The non-stick cooking plates are dishwasher-safe for convenient cleaning. Alternatively, they can be hand-washed in warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
4. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Grease Tray:** Empty and clean any grease collected in the grease run-off channels.
6. **Storage:** Once clean and dry, store the appliance with the cord wrapped around the designated storage area. The handle can be latched for compact vertical storage.



3-in-1 Compact Design

Removable and reversible plates easily change to use as grill, sandwich maker or waffle maker

The removable cooking plates are designed for easy cleaning, either by hand or in a dishwasher, ensuring hygiene and longevity of the non-stick surface.

TROUBLESHOOTING

Appliance Not Heating

- Ensure the appliance is properly plugged into a working electrical outlet.
- Check if the power outlet is functional by plugging in another appliance.
- Verify that the plates are correctly installed and the lid is closed.

Food Sticking to Plates

- Ensure plates are adequately greased before each use.
- Avoid using metal utensils that can scratch the non-stick coating.
- Ensure the appliance is fully preheated (green light on) before adding food.

Uneven Cooking

- Ensure food is evenly distributed on the plates.

- Allow sufficient preheating time.
- Check that the plates are securely locked into place.

SPECIFICATIONS

Feature	Detail
Model	WM2000SD
Brand	BLACK+DECKER
Special Feature	3-in-1 (Waffle, Grill, Sandwich)
Color	Black/Silver
Material	Stainless Steel, Lead Free, PFAS Free, PFOA Free
Product Dimensions	9"D x 9"W x 4"H
Item Weight	6.2 Pounds
Wattage	700 watts
Voltage	120V
Included Components	Grill Plates, Sandwich Plates, Waffle Maker Plates
UPC/GTIN	050875822290

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official BLACK+DECKER website or contact their customer service directly. The product typically comes with a limited warranty.

For more information, visit: www.blackanddecker.com