

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm X-T100 Mirrorless Digital Camera User Manual

Fujifilm X-T100 w/XC15-45mm Lens Kit Dark Silver

Fujifilm X-T100 Mirrorless Digital Camera User Manual

Model: X-T100 w/XC15-45mm Lens Kit Dark Silver

Brand: Fujifilm

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Fujifilm X-T100 Mirrorless Digital Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference.



Image: Fujifilm X-T100 Mirrorless Digital Camera in Dark Silver, equipped with the XC15-45mmF3.5-5.6 OIS PZ lens. The camera features a classic, retro-inspired design with a textured grip and prominent dials on the top plate.

SETUP

Unpacking and Initial Inspection

Carefully unpack all components and verify that the following items are included:

- Camera Body
- Lens (XC15-45mmF3.5-5.6 OIS PZ)
- Strap
- Battery
- Charger
- USB Cable
- User Manual (this document)
- U.S.A. Warranty

Attaching the Lens

1. Remove the body cap from the camera and the rear lens cap from the lens.

2. Align the white dot on the lens with the white dot on the camera body.
3. Mount the lens by rotating it clockwise until it clicks into place.

Inserting the Battery and Memory Card

1. Open the battery/memory card cover on the bottom of the camera.
2. Insert the battery with the correct orientation until it locks into place.
3. Insert an SDXC memory card into the slot until it clicks.
4. Close the cover securely.

Charging the Battery

Connect the camera to the charger using the supplied USB cable. The charging indicator will illuminate. A full charge takes approximately 4 hours.

OPERATING THE CAMERA

Power On/Off

To power on the camera, slide the power switch located on the top plate. To power off, slide it again.

Basic Photography Modes

The Fujifilm X-T100 offers various shooting modes:

- **SR+ AUTO:** Automatically optimizes settings for the scene.
- **P (Program AE):** Camera sets aperture and shutter speed for optimal exposure.
- **A (Aperture Priority AE):** You set the aperture, camera sets shutter speed.
- **S (Shutter Priority AE):** You set the shutter speed, camera sets aperture.
- **M (Manual):** You control both aperture and shutter speed.

Using the Electronic Viewfinder (EVF)

The high-resolution (2.36 million dots) electronic viewfinder provides a clear and accurate preview of your shot. Bring the camera to your eye to activate the EVF.

Using the Tilting LCD Monitor

The 3-inch tilting LCD monitor (1,040,000 dots) can be adjusted for various shooting angles, including high and low angles. It is also touch-sensitive for precise AF positioning and menu navigation.

Autofocus System

The camera features a Phase Detection Autofocus system with 91 autofocus points. You can select focus points manually via the touch screen or allow the camera to select automatically.

Film Simulation Modes

Fujifilm's renowned film simulation modes allow you to apply various color and tonal characteristics to your images, mimicking classic film stocks. Access these modes through the camera's menu.

Video Recording

The X-T100 supports Full HD (1080p) video recording at up to 60 frames per second (fps) and 4K video recording at 15 fps.

For optimal video quality and smoother playback, Full HD is generally recommended.

The camera has a built-in stereo microphone. An external 2.5mm microphone jack is also available for enhanced audio recording.

MAINTENANCE

Cleaning the Camera and Lens

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens brush or blower to remove dust, then gently wipe with a microfiber lens cloth. Avoid touching the lens surface with your fingers.
- Do not use organic solvents or strong cleaning agents.

Battery Care

- Store batteries in a cool, dry place when not in use.
- Do not expose batteries to extreme temperatures.
- Fully charge batteries before extended storage.

Storage

When storing the camera for extended periods, remove the battery and store it separately. Keep the camera in a dry, well-ventilated area, away from direct sunlight and high humidity.

TROUBLESHOOTING

Problem	Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted.
Images are blurry.	Check focus settings. Ensure sufficient lighting. Use a tripod if necessary.
Memory card error.	Reinsert the memory card. Try a different compatible memory card.
Video recording stops unexpectedly.	Ensure sufficient battery charge and free space on the memory card. Use a high-speed memory card.

SPECIFICATIONS

- **Sensor:** 24.2 Megapixel APS-C size CMOS
- **Lens Mount:** Fujifilm X Mount
- **Viewfinder:** Electronic (0.62x magnification, 2.36M-dot)
- **LCD Monitor:** 3-inch Tilting Touch Screen LCD (1.04M-dot)
- **Autofocus:** Phase Detection AF (91 points)
- **ISO Sensitivity:** Expanded ISO 100-12800
- **Shutter Speed:** Up to 1/32000 seconds
- **Continuous Shooting:** 6 fps
- **Video Resolution:** 4K (15 fps), Full HD 1080p (60 fps)
- **Connectivity:** Bluetooth, USB, HDMI
- **Battery Life:** Approximately 430 frames per charge
- **Weight:** 3.2 Pounds (with battery and memory card)

WARRANTY AND SUPPORT

This product comes with a U.S.A. Warranty. For detailed warranty information and terms, please refer to the included warranty card.

For technical support, service, or additional inquiries, please visit the official Fujifilm support website or contact their customer service.

Official Fujifilm Store: [Fujifilm Store on Amazon](#)

User Manual (PDF): [Download PDF Manual](#)