

## Trexonic 210104741M

# Trexonic 3-Speed Turntable System User Manual

Model: 210104741M

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Trexonic 3-Speed Turntable System. This versatile home stereo system integrates a turntable, CD player, dual cassette player, Bluetooth connectivity, FM radio, and USB/SD recording capabilities, complete with wired shelf speakers.

Please read this manual thoroughly before using the product to ensure proper operation and to maximize your enjoyment of its features.



Image: The Trexonic 3-Speed Turntable System, showcasing the main unit with an open turntable lid and two detached wired shelf speakers.

## 2. PRODUCT COMPONENTS AND CONTROLS

Familiarize yourself with the various parts and controls of your Trexonic system.



Image: A detailed diagram labeling key components of the Trexonic system, including the record player, power button & volume knob, USB & SD card reader, tweeter speaker, base speaker, CD player, and tape cassette player.

- **Main Unit:** Central console housing the turntable, CD player, cassette decks, and control panel.
- **Wired Shelf Speakers:** Two external speakers for stereo audio output.
- **Turntable:** For playing vinyl records at 33, 45, or 78 RPM.
- **CD Player:** Front-loading tray for audio CDs.
- **Dual Cassette Player:** Two cassette decks (Deck A for recording/playback, Deck B for playback).
- **USB/SD Card Slots:** For MP3 playback and recording.
- **Control Panel:** Includes LCD display, volume knob, function buttons (Function, Timer/Sleep, Rec/Del, Album/Preset/Dubbing, Mode/Clock, Play/Scan, Stop, Fast Forward, Rewind).
- **AUX In:** 3.5mm input for connecting external audio devices.
- **Headphone Jack:** 3.5mm output for private listening.
- **RCA Line-Out:** For connecting to external amplifiers or speakers.
- **Remote Control:** For convenient operation from a distance.

### 3. SETUP

#### 3.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging materials for future transport or storage.

#### 3.2 Speaker Connection

Connect the wired shelf speakers to the main unit using the provided speaker cables. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality.

### 3.3 Power Connection

Plug the power cord into a standard AC outlet. The unit is designed for 120V AC, 60Hz power supply.

### 3.4 Placement

Place the system on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.



Image: The Trexonic 3-Speed Turntable System positioned on a mantelpiece, demonstrating a typical home setup.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

- **Power On/Off:** Press the Power button on the front panel or remote control.
- **Volume Control:** Rotate the Volume knob on the main unit or use the volume buttons on the remote.
- **Function Selection:** Press the "Function" button to cycle through modes: Turntable, CD, Cassette, Bluetooth, FM Radio, USB, SD, AUX In.



Image: A close-up view of the Trexonic system's control panel, showing the volume knob, function buttons, and input ports.

## 4.2 Turntable Operation

- Open the dust cover.
- Place a vinyl record on the platter.
- Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included adapter on the spindle.
- Gently lift the tone arm and position the stylus over the desired track on the record. Lower the tone arm slowly onto the record.
- At the end of the record, manually lift the tone arm and return it to its rest.





Image: A close-up view of the Trexonic turntable's platter and stylus, ready for playing a vinyl record.

### 4.3 CD Player Operation

- Press the "CD" function button.
- Press the Eject button to open the CD tray.
- Place a CD with the label side facing up.
- Press the Eject button again to close the tray. Playback will begin automatically or can be started with the Play button.

### 4.4 Cassette Player Operation

- Press the "Cassette" function button.
- Press the Stop/Eject button on either Deck A or Deck B to open the cassette door.
- Insert a cassette tape.
- Use the Play, Pause, Fast-forward, Rewind, and Stop buttons for playback control.
- Deck A supports recording and high-speed dubbing.



Image: A close-up view of the Trexonic system's dual cassette deck, showing the open door of Deck A.

#### 4.5 Bluetooth Connectivity

- Press the "Function" button until "BT" appears on the LCD display. The unit will enter pairing mode.
- Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for "Trexonic".
- Select "Trexonic" to pair. Once connected, you can stream audio wirelessly to the system.

#### 4.6 FM Radio Operation

- Press the "Function" button until "FM" appears on the LCD display.
- Use the Tune buttons to manually tune to a station or press and hold for automatic scanning.

#### 4.7 USB/SD Playback and Recording

- **Playback:** Insert a USB flash drive or SD card into the respective slot. Press the "Function" button to select USB or SD mode. The system will automatically detect and play MP3 files.
- **Recording:** The system supports direct encoding from Turntable, CD, Cassette, AUX input, and FM radio to MP3 format on USB or SD.
- To record, select the desired source (e.g., Turntable). Insert your USB drive or SD card. Press the "Rec" button. Press "Rec" again to stop recording.

## 5. MAINTENANCE

### 5.1 Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Wipe the exterior surfaces with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- Gently clean the turntable stylus with a soft brush designed for stylus cleaning, brushing from back to front.

### 5.2 Care for Media

- Keep vinyl records, CDs, and cassette tapes clean and free of dust. Store them in their protective sleeves or cases when not in use.
- Avoid touching the playing surfaces of records and CDs.

## 6. TROUBLESHOOTING

If you experience issues with your Trexonic system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in; power outlet not active.	Ensure power cord is firmly connected. Test outlet with another device.
No sound from speakers	Volume too low; speakers not connected correctly; incorrect function selected.	Increase volume. Check speaker cable connections and polarity. Select correct input function.
Turntable skipping or distorted sound	Record is dirty or scratched; stylus is dirty or worn; unit not on a level surface.	Clean record. Clean stylus. Ensure unit is on a stable, level surface. Consider replacing stylus if worn.
Cassette playback issues	Tape is tangled or damaged; tape heads are dirty.	Try a different tape. Clean tape heads with a cassette head cleaner.
Bluetooth pairing failed	Device too far; Bluetooth not enabled on external device; unit not in pairing mode.	Ensure devices are within range. Enable Bluetooth on your device. Select "BT" function on the system.

If the problem persists after trying these solutions, please contact Trexonic customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	210104741M
Brand	Trexonic
Connectivity Technology	Wired, Wireless (Bluetooth)
Color	Black







Feature	Detail
Speaker Type	Stereo (Wired Shelf Speakers)
Power Source	Corded Electric
Turntable Speeds	33/45/78 RPM
Recording Formats	MP3 (to USB/SD)
Item Weight	10 pounds
Package Dimensions	19.4 x 15.2 x 15.2 inches

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Trexonic website. You may also contact Trexonic customer service directly for assistance.

© 2024 Trexonic. All rights reserved.

## Related Documents - 210104741M

 <p>TreXonic 15.4" PORTABLE DVD PLAYER WITH ATSC DIGITAL TV</p> <p>MODEL #TR-D154</p> <p>USER MANUAL</p>	<p><a href="#">TreXonic TR-D154 15.4" Portable DVD Player with ATSC Digital TV User Manual</a></p> <p>User manual for the Trexonic TR-D154 portable DVD player with ATSC digital TV. Includes features, operation instructions for DVD, USB, memory card, and HDMI, as well as troubleshooting and specifications.</p>
 <p>TreXonic 14" PORTABLE LED TELEVISION Model TRX-14D</p>	<p><a href="#">TreXonic 14" Portable LED Television User Manual</a></p> <p>User manual for the Trexonic 14" Portable LED Television (Model TRX-14D), covering important safeguards, package contents, input/output interface, remote control operation, menu functions (channel, picture, sound, time, options, lock), input source selection, multimedia mode, troubleshooting, and specifications.</p>
 <p>TreXonic TV Auto Scan Guide</p>	<p><a href="#">TreXonic TV Auto Scan Guide</a></p> <p>Instructions for performing an auto scan on a Trexonic TV to find channels, including preparation and step-by-step guidance.</p>
 <p>TreXonic Channel Scan Guide</p>	<p><a href="#">TreXonic Channel Scan Guide: How to Auto Scan TV Channels</a></p> <p>Learn how to perform an automatic channel scan on your Trexonic device with this simple guide. Covers selecting AIR/CABLE and initiating the scan for digital and analog channels.</p>

