

Trexonic 210104737M

Trexonic 3-Speed Turntable with CD Player, Double Cassette Player, Bluetooth, FM Radio & USB/SD Recording User Manual

Model: 210104737M

INTRODUCTION

This user manual provides detailed instructions for the operation and maintenance of your Trexonic 3-Speed Turntable with CD Player, Double Cassette Player, Bluetooth, FM Radio & USB/SD Recording. Please read this manual thoroughly before using the product to ensure proper function and to maximize your enjoyment of its features.

The Trexonic home stereo system combines classic audio playback methods with modern digital capabilities, allowing you to enjoy music from vinyl records, CDs, cassette tapes, USB flash drives, SD cards, and Bluetooth-enabled devices. It also features recording capabilities to convert analog media to digital formats.

SAFETY PRECAUTIONS

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper power supply voltage as indicated on the unit.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Clean only with a dry cloth.

PACKAGE CONTENTS

Upon opening the package, verify that all items are present and in good condition:

- Trexonic 3-Speed Turntable Main Unit
- Wired Shelf Speakers (2)
- Remote Control
- User Manual (this document)

- Power Adapter

PRODUCT OVERVIEW



Figure 1: Front view of the Trexonic stereo system with connected speakers. This image shows the main unit with the turntable lid open, flanked by two wired shelf speakers.



Figure 2: Front view of the Trexonic stereo system with the turntable lid closed, showing the compact design with speakers.



Figure 3: The Trexonic stereo system placed on a shelf in a living room setting, demonstrating its compact size and integration into home decor.



Figure 4: A detailed view of Cassette Deck A, showing the open cassette door and control buttons below.



Figure 5: A close-up of the main control panel, highlighting the Trexonic branding, function buttons, and the USB and SD card input slots.



Figure 6: A detailed view of the turntable platter and spindle, with the dust cover open, ready for vinyl record playback.

Front Panel Controls and Features:

1. **Turntable:** 3-speed (33/45/78 RPM) selectable for vinyl records.
2. **CD Player:** Front-loading CD tray for audio CDs.
3. **Dual Cassette Player:** Deck A (Record/Play) and Deck B (Play) for cassette tapes.
4. **USB/SD Slot:** For MP3 playback and direct encoding.
5. **Bluetooth:** Wireless connectivity for streaming audio from compatible devices.
6. **FM Radio:** Built-in FM tuner.
7. **LCD Display:** With blue backlight for mode and track information.

8. **Function/Mode Buttons:** To select input source (Turntable, CD, Cassette, Bluetooth, FM, AUX).
9. **Volume Knob:** To adjust audio output level.
10. **Headphone Jack:** 3.5mm output for private listening.

Rear Panel Connections:

1. **Speaker Terminals:** For connecting the included wired shelf speakers.
2. **RCA Line-out:** For connecting to external amplifiers or powered speakers.
3. **AUX Input:** 3.5mm jack for connecting external audio devices.
4. **AC Power Input:** For connecting the power adapter.

SETUP

1. Unpacking and Placement:

- Carefully remove all components from the packaging.
- Place the main unit on a stable, level surface away from direct sunlight, heat, and moisture.
- Ensure adequate ventilation around the unit.

2. Connecting the Speakers:

- Connect the speaker wires from the included shelf speakers to the corresponding speaker terminals on the rear of the main unit. Ensure correct polarity (+ to + and - to -).

3. Power Connection:

- Plug the power adapter into the AC power input on the rear of the unit.
- Plug the other end of the power adapter into a standard wall outlet.

4. Initial Power On:

- Press the Power button on the front panel or remote control to turn on the unit.
- The LCD display will illuminate.

OPERATING INSTRUCTIONS

1. Turntable Operation:

1. Lift the dust cover.
2. Place a vinyl record on the platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included 45 RPM adapter on the spindle.
4. Move the tone arm to the desired position on the record. The platter will begin to spin automatically.
5. Lower the tone arm gently onto the record.
6. Adjust the volume using the volume knob.
7. To stop playback, lift the tone arm and return it to its rest. The platter will stop spinning.

2. CD Player Operation:

1. Press the CD/USB/SD button to select CD mode.
2. Press the Eject button to open the CD tray.
3. Place a CD with the label side up into the tray.
4. Press the Eject button again to close the tray. The unit will read the CD and begin playback automatically.
5. Use the Play/Pause, Stop, Skip Forward, and Skip Backward buttons for control.

3. Cassette Player Operation:

1. Press the Cassette button to select Cassette mode.
2. Open the door of Deck A or Deck B.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette door.
5. Press the Play button on the desired deck to begin playback.
6. Use the Fast Forward, Rewind, Stop, and Pause buttons for control.

4. Bluetooth Operation:

1. Press the Bluetooth button to select Bluetooth mode. The LCD display will show "BT" and flash, indicating it's in pairing mode.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for "Trexonic".
3. Select "Trexonic" from the list of available devices to pair. Once connected, the "BT" indicator will stop flashing.
4. Begin playing audio on your external device. The sound will be output through the Trexonic system.

5. FM Radio Operation:

1. Press the FM button to select FM Radio mode.
2. Press the Tuner Scan button to automatically scan and save available FM stations.
3. Use the Skip Forward/Backward buttons to navigate through saved stations or manually tune.

6. USB/SD Playback:

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Press the CD/USB/SD button to select USB or SD mode. The unit will automatically detect and begin playing compatible audio files (MP3).
3. Use the Play/Pause, Stop, Skip Forward, and Skip Backward buttons for control.

7. Recording Functions (Encoding):

The Trexonic system allows direct recording from Turntable, CD, Cassette, AUX Input, and FM Radio to USB or SD card in MP3 format. You can also record to cassette from various sources.

Recording to USB/SD:

1. Insert a USB flash drive or SD card into the respective slot.
2. Select the desired source (Turntable, CD, Cassette, AUX, FM).
3. Begin playback of the source material.
4. Press the REC/DEL button to start recording. The display will indicate recording status.
5. Press the REC/DEL button again to stop recording. The recorded file will be saved to the USB drive or SD card.

Recording to Cassette:

1. Insert a blank cassette tape into Deck A (Record/Play).
2. Select the desired source (Turntable, CD, Cassette Deck B, AUX In, USB, or SD).
3. Begin playback of the source material.
4. Press the Record button on Deck A to start recording.
5. Press the Stop button on Deck A to stop recording.

MAINTENANCE

Cleaning the Unit:

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- For the turntable stylus, use a soft brush designed for stylus cleaning, brushing gently from back to front.
- For CD lens cleaning, use a specialized CD lens cleaner disc.
- For cassette heads, use a cotton swab lightly dampened with isopropyl alcohol, cleaning the play/record head and pinch rollers.

Stylus Replacement:

- The turntable stylus (needle) has a limited lifespan. Replace it when you notice a decrease in sound quality or distortion.
- Refer to the manufacturer's specifications for compatible replacement styluses.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely plugged in; Try a different outlet.
No sound from speakers	Volume too low; Speakers not connected properly; Incorrect input source selected.	Increase volume; Check speaker connections; Select correct input source.
Turntable not spinning or distorted sound	Speed setting incorrect; Stylus dirty or worn; Record dirty or damaged.	Select correct RPM; Clean or replace stylus; Clean record.
CD skipping	CD dirty or scratched; Unit on unstable surface.	Clean CD; Place unit on a stable surface.
Cassette playback issues	Tape tangled or damaged; Cassette heads dirty.	Try another tape; Clean cassette heads.
Bluetooth pairing failure	Device too far; Bluetooth not enabled on external device; Unit not in pairing mode.	Move device closer; Ensure Bluetooth is on; Re-enter Bluetooth pairing mode.

Problem	Possible Cause	Solution
Recording issues	USB/SD full or incompatible format; Source not playing.	Check USB/SD storage and format; Ensure source is playing correctly.

SPECIFICATIONS

Feature	Detail
Model Number	210104737M
Turntable Speeds	33 1/3, 45, 78 RPM
Audio Output Power	4 Watts per speaker
Connectivity	Bluetooth, USB, SD, AUX In, RCA Line-out
Recording Formats	MP3 (to USB/SD), Cassette
Radio Tuner	FM
Power Supply	AC Adapter (Input: 100-240V ~ 50/60Hz)
Dimensions (Main Unit)	Approx. 18.9 x 15.35 x 14.25 inches (Package Dimensions)
Weight	Approx. 11 pounds

WARRANTY INFORMATION

Trexonic products are manufactured with high-quality components and are subject to rigorous quality control. This product is covered by a limited warranty against defects in materials and workmanship from the date of original purchase. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact Trexonic customer support.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or service inquiries, please contact Trexonic customer support. Have your model number (210104737M) and purchase information ready when contacting support.

Online Support: Visit the official Trexonic website for FAQs, product registration, and support resources.
www.trexonic.com

Email Support: support@trexonic.com

Phone Support: Refer to the contact information provided on the Trexonic website or product packaging for regional phone numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question