

STEAMONE 1808

SteamOne S-Nomad Travel Garment Steamer

Instruction Manual

INTRODUCTION

Thank you for choosing the SteamOne S-Nomad Travel Garment Steamer. This compact and powerful device is designed to quickly and efficiently remove wrinkles from your clothes and other fabrics, making it ideal for travel or quick touch-ups at home. Its advanced features ensure gentle care for various textiles, from delicate silk to sturdy denim, without the risk of shine or burn marks associated with traditional ironing.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not immerse the steamer, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not leave the steamer unattended while it is plugged in or operating.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the steamer.
- Do not touch the hot steam head during operation or immediately after use.
- Always unplug the steamer from the power outlet before filling or emptying the water tank, cleaning, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way.
- Ensure the steam head is pointed away from yourself, other people, and pets when steaming.
- Hot steam can remove bacteria and dust mites from fabrics.

PACKAGE CONTENTS

Carefully unpack your SteamOne S-Nomad and check that all items are present and in good condition.



The SteamOne S-Nomad Travel Garment Steamer shown with its included accessories: a lint brush, a travel pouch, a universal bottle connector, and a suction cup hook.

- SteamOne S-Nomad Travel Garment Steamer
- Removable Water Tank (140ml capacity)
- Universal Bottle Connector
- Suction Cup with Hook (for hanging garments)
- Lint Brush Attachment

- Travel Pouch

PRODUCT OVERVIEW

Familiarize yourself with the components of your SteamOne S-Nomad steamer.



A detailed view of the SteamOne S-Nomad Travel Garment Steamer, highlighting its sleek black design, clear water tank, and steam head with multiple vents.

- **Steam Head:** The metal plate with steam vents from which steam is emitted.
- **Water Tank:** Detachable transparent tank for water.
- **Handle with Power Button:** Ergonomic handle with an integrated power button and continuous steam lock.
- **Power Cord:** 3-meter long power cord for flexible use.
- **Indicator Light:** Backlit indicator light to show operational status.

SETUP

1. Fill the Water Tank:

Remove the water tank from the steamer. Open the rubber stopper and fill the tank with distilled or demineralized water up to the MAX fill line (140ml capacity). Close the stopper securely. Alternatively, for travel, you can attach a standard water bottle using the universal bottle connector.



A person demonstrating how to fill the removable water tank of the SteamOne S-Nomad steamer with water.

2. Attach Water Tank:

Reinsert the filled water tank firmly into the steamer until it clicks into place.

3. Plug In:

Plug the power cord into a suitable electrical outlet (240V). The indicator light will illuminate.

4. Heat Up:

The steamer will heat up rapidly, typically within 45 seconds. The indicator light may change or stop blinking when ready for use.

OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming.

1. Prepare Garment:

Hang the garment on a hanger. You can use the included suction cup hook to hang it on a smooth surface like a door or mirror.



A person using the SteamOne S-Nomad to steam a light blue shirt hanging on a hanger, demonstrating the ease of use.

2. Select Steam Mode (if applicable):

The S-Nomad features 2 speed settings for steam output. Adjust as needed for different fabric types. For delicate fabrics like silk or lace, use a lower setting. For heavier fabrics like denim or linen, use a higher setting.



A close-up of the SteamOne S-Nomad's handle, showing the backlit indicator light which changes color or pattern to indicate the selected steam mode or readiness.

3. Begin Steaming:

Hold the steam head close to the fabric, but do not press it directly against it. Pull the fabric taut with your free hand and move the steamer slowly up and down the garment. Press the power button on the handle to release steam. For continuous steam, engage the lock feature on the button.



A person steaming a dark blue fabric with the SteamOne S-Nomad, demonstrating the use of an external water bottle connected via the universal adapter for extended steaming sessions.

4. Steaming Tips:

- For collars, cuffs, and hems, steam from the inside of the fabric.
- For stubborn wrinkles, pass the steamer over the area multiple times.
- Always allow the garment to cool and dry completely before wearing or storing to prevent re-wrinkling.
- The steamer is effective on various textiles including silk, lace, jeans, suits, jackets, curtains, carpets, tablecloths, and bedding.

5. Finish Steaming:

When finished, release the steam button (if locked) and unplug the steamer from the power outlet. The automatic shut-off function will activate if the water tank runs empty.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steamer.

- **Empty Water Tank:** After each use, always empty any remaining water from the tank to prevent mineral buildup.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- **Descaling:** Depending on water hardness and frequency of use, descaling may be necessary. Fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Run the steamer until half the solution is used, then turn it off and let it sit for 30 minutes. Finish steaming the remaining solution, then rinse the tank and run two full tanks of plain distilled water through the steamer to flush out any residue.
- **Storage:** Store the steamer in a cool, dry place. Ensure the water tank is empty before storage.

TROUBLESHOOTING

If you encounter any issues, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Mineral buildup. Steamer not heated sufficiently.	Refill water tank. Perform descaling procedure. Allow 45 seconds for heating.
Water leaking from steam head.	Overfilled water tank. Steamer not hot enough. Mineral buildup.	Do not overfill. Allow full heat-up time. Perform descaling procedure.
Steamer not turning on.	Not plugged in. Power outlet malfunction.	Ensure plug is securely inserted. Test outlet with another appliance.
Automatic shut-off activates too soon.	Water tank is empty.	Refill water tank. This is a safety feature.

SPECIFICATIONS

Brand	STEAMONE
Model Number	1808 (S-Nomad)
Color	Black
Product Dimensions	12 x 14 x 22 cm (4.7 x 5.5 x 8.7 inches)
Item Weight	1.1 Kilograms (2.4 lbs)
Power	1600 Watts
Voltage	240 Volts
Material	Stainless Steel, Rust-proof
Number of Speed Settings	2
Heat-up Time	45 seconds
Steam Output	25g/min
Water Tank Capacity	140ml
Cable Length	3 meters (9.8 feet)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SteamOne website. Keep your proof of purchase for any warranty claims.
For further assistance or inquiries, please contact SteamOne customer service.

© 2023 SteamOne. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question