

Lenoxx BD110A

Lenoxx BD110A Bluetooth Boombox Radio User Manual

1. INTRODUCTION

Thank you for purchasing the Lenoxx BD110A Bluetooth Boombox. This device is designed to provide versatile audio playback options, including FM radio, Bluetooth streaming, and media playback from USB drives and Micro SD cards. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new boombox. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Clean the unit only with a soft, dry cloth.
- Ensure proper ventilation around the unit during operation.

3. PRODUCT OVERVIEW

The Lenoxx BD110A is a compact and portable boombox featuring a black casing with red accents. It includes a digital display, various control buttons, and multiple input options for diverse audio sources.



Figure 3.1: Angled front view of the Lenoxx BD110A Bluetooth Boombox, showcasing the black casing with red accents, control buttons, digital display, and carrying handle.

3.1 Front Panel Controls



Figure 3.2: Direct front view of the Lennox BD110A Bluetooth Boombox, highlighting the central control panel with red buttons, volume knob, and blue LED digital display.

- **POWER Button:** Turns the unit on or off.
- **MODE Button:** Switches between FM, Bluetooth, USB, Micro SD, and AUX modes.
- **VOL+ / VOL- Buttons:** Adjusts the volume level.
- **SCAN / PLAY/PAUSE Button:** In FM mode, scans for stations. In media playback, plays or pauses.
- **MUTE / STOP Button:** Mutes audio. In media playback, stops playback.
- **PREVIOUS / NEXT Buttons:** Skips tracks in media playback or tunes radio stations.
- **EQ Button:** Selects equalizer presets.
- **Digital Display:** Shows current mode, frequency, or track information.

3.2 Rear Panel Connections



Figure 3.3: Rear view of the Lenoxx BD110A Bluetooth Boombox, showing the extendable telescopic antenna, power input, and ventilation grilles.

- **Telescopic Antenna:** For FM radio reception.
- **AC Power Input:** Connects to the power adapter.

3.3 Top Panel Connections

- **USB Port:** For connecting USB flash drives.
- **Micro SD Card Slot:** For inserting Micro SD memory cards.
- **AUX IN Jack:** For connecting external audio devices via a 3.5mm audio cable.
- **PHONES Jack:** For connecting headphones.

4. SETUP

4.1 Power Connection

1. Ensure the boombox is placed on a stable, flat surface.
2. Connect the AC power cord to the AC power input on the rear of the boombox.

3. Plug the other end of the power cord into a standard wall outlet.

4.2 Antenna Adjustment

For optimal FM radio reception, fully extend the telescopic antenna located on the rear of the unit. Adjust its position for the best signal quality.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button to turn the boombox on or off.

5.2 Volume Adjustment

Press the **VOL+** or **VOL-** buttons to increase or decrease the volume level. The current volume level will be displayed on the digital screen.

5.3 Mode Selection

Press the **MODE** button repeatedly to cycle through the available input modes: FM Radio, Bluetooth, USB, Micro SD, and AUX.

5.4 FM Radio Operation

1. Switch to FM mode using the **MODE** button.
2. Extend the telescopic antenna for better reception.
3. Press and hold the **SCAN** button to automatically scan and save available FM stations.
4. Press the **PREVIOUS** or **NEXT** buttons to manually tune to a specific frequency or navigate through saved stations.

5.5 Bluetooth Operation

1. Switch to Bluetooth mode using the **MODE** button. The display will show "BT" and a blinking Bluetooth icon, indicating it is ready for pairing.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "BD110A" from the list of found devices to pair.
4. Once paired, the Bluetooth icon on the boombox display will stop blinking, and you can stream audio from your device.
5. Use the **PLAY/PAUSE**, **PREVIOUS**, and **NEXT** buttons on the boombox or your connected device to control playback.

5.6 USB / Micro SD Playback

1. Insert a USB flash drive into the USB port or a Micro SD card into the Micro SD slot.
2. The boombox will automatically switch to USB or Micro SD mode and begin playing compatible audio files (e.g., MP3). If not, press the **MODE** button to select the correct source.
3. Use the **PLAY/PAUSE**, **PREVIOUS**, and **NEXT** buttons to control playback.
4. Press the **MUTE/STOP** button to stop playback.

5.7 AUX Input Operation

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the boombox.

- 2. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., smartphone, MP3 player).
- 3. Switch to AUX mode using the**MODE** button.
- 4. Control playback and volume from your external audio device.

5.8 Headphone Use

To listen privately, plug a pair of 3.5mm headphones into the**PHONES** jack. The main speakers will automatically mute.

6. MAINTENANCE

6.1 Cleaning

Wipe the exterior of the boombox with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

6.2 Storage

If the unit will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and dust.

7. TROUBLESHOOTING

If you encounter any issues with your Lenoxx BD110A, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely connected; Try a different outlet.
No sound	Volume too low; Mute function active; Incorrect mode selected.	Increase volume; Press MUTE/STOP button; Select correct input mode.
Poor FM reception	Antenna not extended or positioned correctly; Weak signal.	Fully extend and adjust the telescopic antenna; Try moving the unit to a different location.
Bluetooth pairing failure	Boombox not in pairing mode; Device too far; Bluetooth disabled on source device.	Ensure boombox is in Bluetooth mode and blinking; Move device closer; Enable Bluetooth on your source device.
USB/Micro SD not playing	Incorrect file format; Media not inserted correctly; Corrupted media.	Ensure files are MP3 format; Reinsert USB/Micro SD; Try different media.

8. SPECIFICATIONS


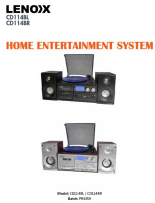
Brand	Lenoxx
Model	BD110A





Product Type	Portable Bluetooth Boombox Radio
Connectivity Technology	Bluetooth, USB
Hardware Interface	Bluetooth, MicroSD, USB, AUX
Compatible Radio Bands	FM
Color	Black with Red Accents
Product Dimensions (L x W x H)	19.5 x 21 x 10.5 cm
Product Weight	0.61 kg
Power Source	AC Power (Not battery operated)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Lenoxx website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - BD110A

 <p>LENOXX Model No: R500 INSTRUCTION MANUAL</p> <p>FM/AM Band Radio with USB/SD Player with cassette player</p>	<p>Lenoxx R500 FM/AM Band Radio with USB/SD Player Instruction Manual</p> <p>Instruction manual for the Lenoxx R500, a portable FM/AM band radio with USB/SD player functionality. Includes setup, operation, and maintenance instructions.</p>
 <p>LENOXX CD114BL/CD114BR HOME ENTERTAINMENT SYSTEM</p> <p>CD114BL/CD114BR Home Entertainment System</p>	<p>Lenoxx CD114BL/CD114BR Home Entertainment System User Manual</p> <p>Comprehensive user manual for the Lenoxx CD114BL/CD114BR Home Entertainment System, covering setup, operation, safety instructions, and troubleshooting for its turntable, cassette, CD, radio, USB/SD, and Bluetooth functionalities.</p>

 <p>LENOXX CD114 HOME ENTERTAINMENT SYSTEM</p> <p>Model: CD114, 11/2018</p> <p>PLEASE READ AND RETAIN THIS MANUAL FOR FUTURE REFERENCE.</p> <p>V.4.2</p>	<p>Lenoxx CD114 Home Entertainment System User Manual</p> <p>Comprehensive user manual for the Lenoxx CD114 Home Entertainment System, covering setup, operation of turntable, radio, Bluetooth, CD, cassette, USB/SD playback, recording, and troubleshooting.</p>
 <p>LENOXX CD815</p> <p>Instruction Manual</p> <p>Model: CD815, 1/2015</p> <p>PLEASE READ AND RETAIN THIS MANUAL FOR FUTURE REFERENCE.</p>	<p>Lenoxx CD815 Portable CD/Cassette Player Instruction Manual</p> <p>Comprehensive instruction manual for the Lenoxx CD815 portable CD/cassette player, covering safety, operation, and maintenance procedures.</p>
 <p>LENOXX BCD120</p> <p>Bluetooth TURNTABLE</p> <p>CD Recorder Music System with Records and Bluetooth</p> <p>Model: BCD120, 1/2015</p> <p>INSTRUCTION MANUAL</p> <p>PLEASE READ AND RETAIN FOR FUTURE REFERENCE.</p> <p>CD, Bluetooth, MP3, USB, SD</p>	<p>Lenoxx BCD120 Bluetooth Turntable CD Recorder Music System Instruction Manual</p> <p>Comprehensive instruction manual for the Lenoxx BCD120 Bluetooth Turntable, covering setup, operation, safety features, and how to use its various functions including CD playback, vinyl record playback, cassette tape, USB, and Bluetooth connectivity.</p>
 <p>LENOXX PDVD800</p> <p>9" SWIVEL PORTABLE DVD PLAYER</p> <p>Model: PDVD800, 1/2015</p> <p>INSTRUCTION MANUAL</p> <p>Please read and retain this manual for future reference.</p>	<p>Lenoxx PDVD800 9" Portable DVD Player Instruction Manual</p> <p>Comprehensive instruction manual for the Lenoxx PDVD800 9-inch portable DVD player, covering safety, features, operation, setup, playback, and troubleshooting.</p>