

[Manuals.plus](#) /

› [Mossy Oak](#) /

› Mossy Oak 2-Piece Fixed Blade Bowie Knife Set User Manual

Mossy Oak 2-Piece Fixed Blade Bowie Knife Set

Mossy Oak 2-Piece Fixed Blade Bowie Knife Set User Manual

Model: 2-Piece Fixed Blade Bowie Knife Set

INTRODUCTION

This manual provides essential information for the safe and effective use, care, and maintenance of your Mossy Oak 2-Piece Fixed Blade Bowie Knife Set. Designed for durability and performance, these knives are suitable for various outdoor and utility tasks. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

Warning: Knives are sharp tools and can cause serious injury if not handled properly. Always exercise extreme caution.

- Keep knives out of reach of children.
- Always cut away from your body.
- Ensure a stable grip on the handle before use.
- Never use a knife as a pry bar, screwdriver, or can opener.
- Do not throw knives.
- Store knives in their sheaths when not in use to prevent accidental injury and protect the blade.
- Inspect the knife for any damage before each use. Do not use if damaged.

PRODUCT OVERVIEW

The Mossy Oak 2-Piece Fixed Blade Bowie Knife Set includes a large and a small clip point knife, each crafted for reliability and comfort.



Image: The Mossy Oak 2-Piece Fixed Blade Bowie Knife Set, illustrating the dimensions of both the large and small knives.

Key Features:

- **Razor Sharp Blades:** Constructed from stainless steel for excellent strength, edge retention, and corrosion resistance.
- **Full Tang Structure:** Ensures durability and strength, with the blade extending through the entire handle.
- **Ergonomic Leather Handles:** Designed with grooves for a secure, comfortable grip and a pommel to guard fingers. Features a cloud-patterned laser design.
- **Protective Nylon Sheaths:** Each knife comes with a durable nylon sheath for safe storage and transport.

RAZOR SHARP CUTTING PERFORMANCE

Strong, long-lasting, and
corrosion-resistant for
reliable performance



Image: An exploded view of the knife components, highlighting the aluminum, leather handle, and stainless steel full tang blade.

SETUP AND UNBOXING

1. **Unpack:** Carefully remove the knife set from its packaging.
2. **Inspect:** Examine both knives and their sheaths for any signs of damage or manufacturing defects.
3. **Familiarize:** Handle each knife to understand its balance and grip. Note the finger guard for safety.



Image: The Mossy Oak 2-piece Bowie Knife set, as it might appear in its packaging.

OPERATING INSTRUCTIONS

Handling and Grip:

Always maintain a firm and secure grip on the leather handle. The ergonomic design and finger guard are intended to enhance control and prevent slippage during use.



Image: A close-up view of the knife handle and finger guard, emphasizing safety and control.

Cutting Techniques:

- For general cutting, use a smooth, controlled motion.
- When piercing, apply steady pressure and ensure the tip is directed away from your body and other people.
- The clip point blade is effective for detail work and cutting in confined spaces.

FINGER GUARD

FOR SAFETY AND CONTROL



Image: The razor-sharp blade of a Mossy Oak Bowie Knife, resting on a tree stump, highlighting its cutting performance.

WORKPRO



Image: A composite image showing the Mossy Oak Bowie Knives being used for tasks like cutting a branch, carried on a belt, and cutting

rope.

MAINTENANCE AND CARE

Cleaning:

After each use, clean the blade and handle thoroughly. The manufacturer recommends **Hand Wash Only**. Use mild soap and water, then dry immediately to prevent rust and maintain the leather handle's integrity.

Sharpening:

Regular sharpening will maintain the blade's edge. Use a sharpening stone or appropriate sharpening tool, following the blade's original angle. Always sharpen away from your body.

Storage:

Store knives in their provided nylon sheaths in a dry environment. Avoid storing in damp conditions to prevent corrosion.



Image: The Mossy Oak Bowie Knives securely stored in their nylon sheaths, one attached to a belt for carrying.

TROUBLESHOOTING

- **Dull Blade:** If the blade becomes dull, refer to the "Sharpening" section under Maintenance.
- **Loose Handle:** If the handle feels loose, it may require tightening or professional repair. Do not use the knife if the handle is unstable.
- **Sheath Fit:** If the knife is difficult to remove or insert into the sheath, ensure it is aligned correctly. Some sheaths may require a break-in period.

SPECIFICATIONS

Feature	Detail
Brand	Mossy Oak
Model	2-Piece Fixed Blade Bowie Knife Set
Blade Material	Stainless Steel
Handle Material	Leather
Blade Shape	Clip Point
Large Knife Total Length	10-1/2 inches (265 mm)
Large Knife Blade Length	6 inches (150 mm)
Large Knife Weight	7 oz (200 g)
Small Knife Total Length	8 inches (200 mm)
Small Knife Blade Length	4 inches (105 mm)
Small Knife Weight	3 oz (83 g)
Included Components	Large Clip Point Knife, Small Clip Point Knife, 2 Nylon Sheaths
Product Care	Hand Wash Only

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Mossy Oak website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question