

[Manuals.plus](#) /

› [XCSOURCE](#) /

› XCSOURCE Wireless Game Controller User Manual

XCSOURCE AC1315

XCSOURCE Wireless Game Controller User Manual

Model: STK-7004X / AC1315 | Brand: XCSOURCE

INTRODUCTION

This manual provides detailed instructions for the XCSOURCE Wireless Game Controller (Model STK-7004X / AC1315). Please read this manual carefully before use to ensure proper operation and to maximize your gaming experience. This controller is designed for use with Android devices and PC Windows systems.

KEY FEATURES

- **Compatibility:** Designed for Android devices and PC Windows systems (via Micro-USB cable).
- **Versatile Gaming:** Supports Gamepad and Mouse modes for smartphone gaming.
- **Ergonomic Design:** Shaped for comfortable holding during extended gaming sessions.
- **Power Management:** Features an automatic sleeping mode after 5-10 minutes of inactivity to conserve battery.
- **Advanced Functions:** Includes AUTO & TURBO functions for enhanced gameplay.
- **Rechargeable Battery:** Built-in 350mAh lithium battery for long-term use.
- **Plug and Play:** Easy to use with no driver installation required.

PACKAGE CONTENTS

- 1 x XCSOURCE Wireless Gamepad
- 1 x USB Charger Cable
- 1 x English User Manual

SETUP

1. Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB Charger Cable to the Micro-USB port on the

controller and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The indicator lights will show charging status and turn off when fully charged.



Image: Side view of the controller highlighting the Micro-USB charging port.

2. Pairing with Android Devices

1. Ensure the controller is powered off.
2. Press and hold the **HOME** button (or specific pairing button if indicated on the device) until the indicator lights start flashing rapidly, indicating it's in pairing mode.
3. On your Android device, go to *Bluetooth Settings* and turn on Bluetooth.
4. Search for available devices. The controller should appear as "XCSOURCE Gamepad" or similar.
5. Select the controller to pair. Once paired, the indicator light on the controller will become solid.

3. Connecting to PC (Windows)

The controller supports PC Windows systems via a Micro-USB cable connection. Simply connect the controller to your PC using the provided USB Charger Cable. The PC should automatically detect and install the necessary drivers. No additional software is typically required.

4. Attaching Your Smartphone

The controller features an integrated phone holder. Gently pull up the phone holder clip located in the center of the controller and securely place your smartphone within the adjustable grips. Ensure your phone is centered and stable before gaming.



Image: User holding the controller with a smartphone securely mounted in the integrated holder.



Image: The controller with a smartphone attached, ready for gaming, showing a racing game on the screen.

OPERATING INSTRUCTIONS

Basic Controls

The controller features standard gamepad buttons and joysticks for intuitive control. Familiarize yourself with the layout:



Image: Top view of the controller, displaying the D-pad, left and right analog sticks, action buttons (A, B, X, Y), START, SELECT, AUTO, and TURBO buttons.

- **Analog Sticks:** For precise movement and camera control.
- **D-Pad:** For directional input, often used in menu navigation or specific game actions.
- **Action Buttons (A, B, X, Y):** For in-game actions like jumping, attacking, interacting.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** Located on the top edge for additional actions.
- **START/SELECT:** Typically used for pausing games, opening menus, or specific game functions.

AUTO & TURBO Functions

The controller includes AUTO and TURBO functions to enhance gameplay, particularly for repetitive actions.

- **TURBO Function:** Allows a button to be pressed repeatedly as long as it's held down. To activate, press the desired action button (e.g., A) and then the **TURBO** button simultaneously. To deactivate, repeat the process.
- **AUTO Function:** Automatically presses a button repeatedly without needing to hold it down. To activate, press the desired action button (e.g., A) and then the **AUTO** button simultaneously. To deactivate, repeat the process.

Sleeping Mode

To conserve battery life, the controller will automatically enter sleeping mode if there is no operation for 5-10 minutes. To wake the controller, press any button. If the controller does not wake, ensure it is charged.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the controller. Do not use harsh chemicals or abrasive

cleaners.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the controller regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Controller does not turn on.	Battery is low or depleted. Charge the controller fully.
Cannot pair with Android device.	Ensure controller is in pairing mode (flashing lights). Bluetooth is not enabled on your device. Too many Bluetooth devices connected. Disconnect others. Try restarting both the controller and your Android device.
Controller disconnects frequently.	Low battery. Recharge the controller. Interference from other wireless devices. Move closer to your device.
Buttons or joysticks are unresponsive.	Ensure the controller is properly connected/paired. Restart the controller and the device it's connected to. Check if the game supports gamepad input.

SPECIFICATIONS

Feature	Detail
System Support	Android 3.1 and above, Windows PC
Bluetooth Version	BT V2.1
Battery Capacity	350mAh rechargeable lithium battery
Dimensions	Approx. 15 x 11.5 x 5.5 cm
Weight	200 Grams
Connectivity	Wireless (Bluetooth), Micro-USB (for PC connection/charging)
Model Number	AC1315 (STK-7004X)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact XCSOURCE customer service directly through their official website or the retailer where the product was purchased. Please have your model number (AC1315 / STK-7004X) and purchase date available when contacting support.

