

---

[Manuals.plus](#) /

› [SUPER DEAL](#) /

› SUPER DEAL ZenChef PRO XXL Hot Air Fryer Instruction Manual

## SUPER DEAL Air fryer oven 0020



# SUPER DEAL ZenChef PRO XXL Hot Air Fryer

## INSTRUCTION MANUAL

Model: Air fryer oven 0020 | Brand: SUPER DEAL

---

### 1. INTRODUCTION

---

Thank you for choosing the SUPER DEAL ZenChef PRO XXL Hot Air Fryer. This appliance utilizes revolutionary superheated rapid air technology to cook your food with little to no oil, delivering a golden, crispy exterior and a moist, juicy, super tender interior. Designed for family use, its extra-large capacity allows you to prepare meals quickly and efficiently.



Figure 1.1: The SUPER DEAL ZenChef PRO XXL Hot Air Fryer.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance features double overheating protection circuits for enhanced safety.
- Ensure the basket is properly inserted before operating the unit.

### 3. PARTS AND FEATURES

---

The ZenChef PRO XXL Air Fryer is designed for ease of use and efficient cooking. Key components include:

- **Main Unit:** Houses the heating element and fan. Features a cool-touch housing.
- **Digital Touch Screen:** Full touch screen display for setting time, temperature, and selecting presets.
- **Frying Basket:** Perforated basket where food is placed for air frying.
- **Basket Holder Base:** Collects any oil or drippings from the frying basket.
- **Handle:** Cool-touch handle for safe removal of the basket assembly.
- **Recipe Book:** An included recipe book with various dishes, from French fries to desserts.



Figure 3.1: Main components of the air fryer.



Figure 3.2: Digital Touch Screen Control Panel.

## 4. BEFORE FIRST USE

Before using your air fryer for the first time, please follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Thoroughly clean the frying basket and basket holder base with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the main unit with a damp cloth.
4. Ensure all parts are completely dry before assembly and use.

## 5. OPERATING INSTRUCTIONS

Operating your ZenChef PRO XXL Air Fryer is straightforward:

1. Place the appliance on a stable, horizontal, and heat-resistant surface.

2. Insert the frying basket into the basket holder base until it clicks securely.
3. Carefully place your ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
4. Slide the basket assembly back into the main unit. The digital display will illuminate.
5. Use the touch controls to set your desired cooking time and temperature. The unit supports temperatures up to 400°F.
6. Alternatively, select one of the 8 one-touch preset buttons for common dishes like French fries, ribs, shrimp, or fish. These presets automatically adjust time and temperature.
7. Press the Start/Stop button to begin cooking.
8. For best results, especially with items like French fries or chicken wings, pull out the basket assembly halfway through the cooking time and gently shake the contents. Then, reinsert the basket to resume cooking. The unit will automatically pause when the basket is removed and resume when reinserted.
9. The programmable timer can be set up to 30 minutes. Once the set time is complete, the air fryer will automatically shut off.
10. Carefully remove the basket assembly using the cool-touch handle.
11. Empty the cooked food into a serving dish.



Figure 5.1: Removing the basket with cooked food.



Figure 5.2: Serving food from the air fryer basket.

## 6. COOKING GUIDE

The ZenChef PRO XXL Air Fryer cooks food faster than a conventional oven due to its rapid air technology and quick preheating. For optimal results, refer to the included recipe book for specific cooking times and temperatures. General tips include:

- Do not add oil for most frozen fried foods like French fries or chicken nuggets; they will come out crispy without it.
- For fresh ingredients, a small amount of oil (e.g., 1 tablespoon) can enhance crispiness.
- Shake the basket periodically for even browning and cooking.
- Avoid overcrowding the basket to allow hot air to circulate effectively.

## 7. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your air fryer:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The frying basket and basket holder base are dishwasher safe for convenient cleaning.
- For stubborn residue, soak the basket and holder in warm, soapy water for about 10 minutes before cleaning.

- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers, as this may damage the surface.
- Clean the interior of the appliance with a non-abrasive sponge or cloth.

## 8. TROUBLESHOOTING

If you encounter issues with your air fryer, consult the following table:

| Problem                                | Possible Cause                                               | Solution                                                                                                                                     |
|----------------------------------------|--------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.            | Appliance not plugged in; basket not inserted correctly.     | Ensure the power cord is securely plugged into a grounded outlet. Push the basket assembly firmly into the main unit until it clicks.        |
| Food is not cooked evenly.             | Basket is overcrowded; food not shaken.                      | Cook smaller batches of food. Shake the basket halfway through cooking.                                                                      |
| Food is not crispy.                    | Not enough oil (for fresh ingredients); temperature too low. | For fresh ingredients, lightly coat with oil. Increase cooking temperature slightly. Ensure basket is not overcrowded.                       |
| White smoke coming from the appliance. | Grease from previous use; fatty ingredients.                 | Clean the basket and holder thoroughly after each use. For fatty foods, place a small amount of water in the basket holder to prevent smoke. |

## 9. SPECIFICATIONS

- **Model Name:** Air fryer oven 0020
- **Brand:** SUPER DEAL
- **Capacity:** 5.49 Liters (approx. 5.8 Quarts)
- **Output Wattage:** 1800 Watts
- **Voltage:** 120 Volts
- **Max Temperature Setting:** 400 Degrees Fahrenheit
- **Control Method:** Touch
- **Product Dimensions:** 13.7"D x 13.7"W x 14.4"H
- **Item Weight:** 10 Pounds
- **Color:** Black
- **Material:** Plastic
- **Nonstick Coating:** No (as per specifications)
- **Dishwasher Safe:** Yes (Basket and holder base)
- **Special Features:** Large Capacity, Superheated Rapid Air Technology, Full Touch Screen
- **ETL Certified:** Yes

## 10. WARRANTY AND SUPPORT

For warranty information or product support, please contact SUPER DEAL customer service. Refer to your purchase documentation for specific warranty terms and contact details.

