

[Manuals.plus](#) /

› [Armitron](#) /

› ARMITRON SNOWY OWL 42- GENTS WATCH 20/5217DGDGBN - User Manual

Armitron 20/5217DGDGBN

Armitron Snowy Owl 42 Gents Watch

Model: 20/5217DGDGBN

INTRODUCTION

Welcome to the user manual for your new Armitron Snowy Owl 42 Gents Watch, model 20/5217DGDGBN. This timepiece combines classic design with practical functionality, featuring a durable IP gun metal case, a comfortable brown leather strap, and a grey dial with three subdials for day, date, and 24-hour time. This manual provides essential information to help you set up, operate, maintain, and troubleshoot your watch, ensuring its longevity and accurate performance.



Image: The Armitron Snowy Owl 42 Gents Watch, showcasing its grey dial, three subdials, and brown leather strap.

SETUP

Initial Setup: Setting Time and Date

Your Armitron watch is equipped with a quartz movement and features subdials for day, date, and 24-hour time. Follow these steps to set the correct time and date:

1. **Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) to the outermost position. This will stop the second hand.
2. **Set the time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands. Ensure you pass 12 o'clock to determine if it's AM or PM, especially when setting the date.
3. **Set the date:** Once the time is set, push the crown in one click to the middle position. Rotate the crown to adjust the date subdial. If your watch has a quick-set date feature, this will allow you to change the date without cycling through 24 hours.
4. **Set the day:** If your watch has a separate day adjustment, it might be set by rotating the crown in the opposite direction in the middle position, or by advancing the time past 24 hours. Refer to the specific movement instructions if available.
5. **Synchronize and push in the crown:** Once the time, day, and date are correctly set, push the crown back into its original, innermost position. The second hand will resume movement.



Image: The Armitron watch worn on a wrist, illustrating its appearance and the position of the crown for adjustments.

OPERATING YOUR WATCH

Time Display

The main hands display the current hour, minute, and second. The hour markers are clearly visible for easy readability.

Subdials Functionality

Your Armitron Snowy Owl watch features three functional subdials:

- **Day Subdial:** Indicates the current day of the week.
- **Date Subdial:** Displays the current day of the month.
- **24-Hour Time Subdial:** Shows the current time in a 24-hour format, useful for distinguishing between AM and PM.

These subdials operate automatically once the watch is set correctly. No additional user interaction is typically required for their daily function.

MAINTENANCE AND CARE

Cleaning

To maintain the appearance of your watch, regularly wipe the case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture and harsh chemicals. If the strap becomes dirty, gently wipe it with a slightly damp cloth and allow it to air dry completely before wearing.

Water Resistance

This watch is water resistant to 50 meters (5 ATM). This means it can withstand splashes or brief immersion in water. It is **not suitable** for swimming, diving, or showering. Always ensure the crown is fully pushed in before any contact with water.

WATER RESISTANT CHART	
 NOT WATER RESISTANT	NOT WATER RESISTANT
 ACCIDENTAL SPLASHES	WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

Image: A chart detailing various levels of watch water resistance, indicating that 50m resistance is suitable for short periods of recreational swimming but not diving or snorkeling.

Battery Replacement

Your watch is powered by a product-specific battery (included). When the watch stops running, it indicates that the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect time/date:** Refer to the 'Initial Setup' section to reset the time and date. Ensure the crown is fully pushed in after setting.
- **Condensation under crystal:** This may indicate a breach in the water resistance. Avoid further contact with water and have the watch inspected by a professional.

- **Strap discomfort:** Ensure the strap is not too tight. Leather straps may require a break-in period to conform to your wrist.

SPECIFICATIONS

Feature	Detail
Model Number	20/5217DGDGBN
Case Diameter	42 Millimetres
Case Material	IP Gun Metal
Band Material Type	Leather
Band Colour	Brown
Dial Colour	Grey
Watch Movement Type	Quartz
Water Resistance Depth	50 Meters (5 ATM)
Item Weight	56.6 g (2 Ounces)
Batteries	1 Product Specific battery (included)

WARRANTY AND SUPPORT

Warranty Information

Your Armitron Snowy Owl 42 Gents Watch comes with a **2 Years International Limited Warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims.

Customer Support

For warranty service, technical assistance, or any other inquiries regarding your Armitron watch, please contact the authorized Armitron service center in your region or the retailer from whom you purchased the watch. Contact details can typically be found on the Armitron official website or through your purchase documentation.