

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [QUASAR](#) /

› [QUASAR 720p Smart LED TV User Manual](#)

## QUASAR 332069

# QUASAR 720p Smart LED TV User Manual

Model: 332069

[Introduction](#)   [Safety Information](#)   [What's in the Box](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for purchasing the QUASAR 720p Smart LED TV. This 32-inch Smart TV offers a 16:9 widescreen display with 720p HD quality, providing a vivid and brilliant picture. It features built-in Wi-Fi for internet connectivity, allowing access to various online services. With 2 HDMI ports, a USB port for media playback, and an integrated ATSC tuner, this television provides versatile entertainment options. This manual provides essential information for setting up, operating, and maintaining your new television.

## 2. IMPORTANT SAFETY INFORMATION

---

Please read all safety and operating instructions carefully before using this television. Keep these instructions for future reference.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## 3. WHAT'S IN THE BOX

---

Verify that all components are present before proceeding with setup.

- QUASAR 32" 720p Smart LED TV
- TV Stand (2 pieces)
- Remote Control (batteries not included)
- Power Cord
- User Manual (this document)

## 4. SETUP GUIDE

---

### 4.1 Attaching the TV Stand

Carefully place the TV face down on a soft, clean surface to prevent screen damage. Align the stand pieces with the corresponding slots on the bottom of the TV and secure them with the provided screws. Ensure the stand is firmly attached before placing the TV upright.



Image: Front view of the QUASAR 32 inch Smart LED TV with its stand attached, showing the screen, bezel, and two curved feet.

### 4.2 Connecting External Devices

Your TV is equipped with multiple ports for connecting various devices.

- **HDMI Ports (x2):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HDMI-enabled devices. Use an HDMI cable for both video and audio transmission.
- **USB Port (x1):** Insert a USB flash drive to play back video, music, or picture files.
- **Antenna/Cable Input:** Connect an external antenna or cable TV coaxial cable to receive over-the-air digital broadcasts or cable channels.
- **Audio/Video Inputs:** Connect older devices using composite A/V cables.

## 4.3 Power Connection

After connecting all desired external devices, plug the power cord into the TV's power input, then plug the other end into a standard electrical outlet. The TV will enter standby mode.

## 4.4 Initial Setup and Network Connection

Upon first power-on, the TV will guide you through an initial setup process. This includes selecting your language, time zone, and scanning for channels (if an antenna is connected). You will also be prompted to connect to your home Wi-Fi network. Select your network from the list and enter the password. A stable internet connection is required to access Smart TV features like streaming apps and the web browser.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Basic Functions

- **Power On/Off:** Press the **POWER** button on the remote control or on the TV.
- **Input Selection:** Press the **INPUT** or **SOURCE** button on the remote to cycle through available inputs (HDMI 1, HDMI 2, TV, USB, etc.).
- **Volume Control:** Use the **VOL+** and **VOL-** buttons.
- **Channel Selection:** Use the **CH+** and **CH-** buttons for TV channels.
- **Menu Navigation:** Use the arrow keys (**UP**, **DOWN**, **LEFT**, **RIGHT**) and **OK/ENTER** button to navigate menus.

## 5.2 Smart TV Features

Access the Smart TV home screen by pressing the **HOME** or **SMART** button on your remote. From here, you can:

- **Launch Streaming Apps:** Access pre-installed applications like Netflix and Hulu. Ensure you have active subscriptions for these services.
- **Use Web Browser:** Navigate the internet directly from your TV.
- **App Store:** Download and install additional applications (availability may vary).

## 5.3 USB Media Playback

Insert a USB flash drive into the USB port. The TV should automatically detect the drive and prompt you to open the media player. If not, navigate to the USB input source. You can browse and play supported video, music, and picture (JPEG) files directly from the drive.

# 6. MAINTENANCE

---

## 6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a specialized screen cleaner. Never spray cleaner directly onto the screen.
- **Cabinet:** Wipe the cabinet and stand with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents.
- Always unplug the TV from the power outlet before cleaning.

## 6.2 General Care

- Avoid exposing the TV to direct sunlight, extreme temperatures, or high humidity.
- Do not place heavy objects on top of the TV.

- Ensure adequate ventilation around the TV to prevent overheating.

## 7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues.

Problem	Possible Cause / Solution
No Power	Check if the power cord is securely plugged into the TV and the wall outlet. Test the outlet with another device.
No Picture, But Has Sound	Ensure the correct input source is selected. Check cable connections (HDMI, AV). Try a different input source.
No Sound, But Has Picture	Check volume level and mute setting. Ensure audio cables are connected correctly. Check audio output settings on external devices.
Remote Control Not Working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Verify Wi-Fi password. Ensure the router is on and within range. Try restarting the TV and router.
Poor Picture Quality (Antenna)	Adjust antenna position. Rescan for channels. Check antenna cable connection.

## 8. SPECIFICATIONS

Feature	Detail
Brand	QUASAR
Model Number	332069
Screen Size	32 Inches (Visible screen diagonal: 82 cm)
Display Technology	LED
Resolution	720p (1366 x 768 Native Resolution)
Aspect Ratio	16:9
Connectivity Technology	Built-in WiFi, HDMI (x2), USB (x1)
Supported Internet Services	Netflix, Hulu, Browser
Color	Black
Item Weight	11.7 Pounds (approx. 5.3 kg)
Product Dimensions (L x W x H)	28.8 x 7.2 x 18.8 inches (approx. 73.15 x 18.29 x 47.75 cm)
Special Feature	Flat Screen
Included Components	Stand, TV

## 9. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included with your product or visit the official QUASAR website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact QUASAR customer service.

