

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Jasco](#) /
- › [GE 34932 4-Device Universal Remote Instruction Manual](#)

### Jasco 34932

## GE 34932 4-Device Universal Remote Instruction Manual

Model: 34932 | Brand: Jasco

### INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your GE 34932 4-Device Universal Remote. This remote is designed to control up to four different audio/video devices, offering a comprehensive solution for managing your home entertainment system.





Image: The GE 34932 4-Device Universal Remote, displayed in its retail packaging. The packaging highlights features such as "Perfect for DVR," "4 Device," "Media streaming," "Advanced DVR functions," "Master volume control," "Comprehensive code library," and "For ALL MAJOR BRANDS." The remote itself is black with various control buttons.

## Key Features

- **4-Device Control:** Configure and control up to four different audio/video devices, including TVs, Blu-ray/DVD players, cable/satellite boxes, sound bars, digital converters, and streaming media devices.
- **Media Streaming Compatibility:** Designed to work with popular media streaming devices such as Roku (Roku 2, 3 & 4 compatible; not compatible with Roku Stick) and Apple TV.
- **Advanced DVR Functions:** Access and control advanced functions for your Digital Video Recorder.
- **Master Volume Control:** Adjust the volume across all programmed devices using a single control.
- **Comprehensive Code Library:** Includes an extensive library of codes for a wide range of major brands and device types.
- **Ergonomic Design:** Engineered for comfortable handling and ease of use.
- **Dot Button:** Provides access to sub-channels (e.g., 4.2).

### 1. Battery Installation

The remote requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards and lift it off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

### 2. Programming the Remote

To control your devices, the universal remote must be programmed with the correct codes. A comprehensive code library is included with your product. Refer to the physical instruction manual for specific codes for your devices.

General steps for programming (refer to your included code library for detailed instructions):

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the **SETUP** button on the universal remote until the red indicator light stays on.
3. Press and release the device button you want to program (e.g., **TV**, **CBL**, **DVD**, **AUX**). The red indicator light will blink once and then remain on.
4. Enter the 4-digit code for your device from the code library. After entering the last digit, the red indicator light should turn off.
5. Point the remote at the device and press the **POWER** button. If the device turns off, the programming was successful.
6. If the device does not turn off, repeat the steps using the next code listed for your brand.

*Note: Some devices may require trying multiple codes from the code library to find the correct one.*

## OPERATING INSTRUCTIONS

---

Once programmed, your universal remote can control your devices. Familiarize yourself with the button layout:

### Device Selection Buttons

- **TV**: Controls your television.
- **CBL**: Controls your cable box or satellite receiver.
- **DVD**: Controls your DVD or Blu-ray player.
- **AUX**: Controls an auxiliary device such as a sound bar, VCR, or streaming media player.

To control a specific device, press its corresponding device button (e.g., **TV**) before pressing any function buttons.

### Common Functions

- **POWER**: Turns the selected device on or off.
- **VOL +/-**: Adjusts the volume.
- **CH +/-**: Changes channels.
- **MUTE**: Mutes the audio.
- **GUIDE**: Displays the program guide.
- **MENU**: Accesses the device's menu.

- **OK:** Confirms selections within menus.
- **Navigation Arrows:** Navigate through menus and channels.
- **EXIT:** Exits menus or guides.
- **Number Pad (0-9):** Direct channel entry.
- **DOT (.):** Used for sub-channel access (e.g., 4.2).

Media Playback Controls

- **PLAY:** Starts playback.
- **PAUSE:** Pauses playback.
- **STOP:** Stops playback.
- **REW:** Rewinds.
- **FF:** Fast forwards.
- **REC:** Initiates recording (if supported by the device).

Master Volume Control

The master volume feature allows you to control the volume of your primary audio device (e.g., TV or sound bar) regardless of which device button is currently selected on the remote. This feature is typically set up during the programming process or can be configured separately. Refer to the full instruction manual for details on enabling and configuring master volume control.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or the indicator light does not illuminate, it is time to replace the batteries. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

To clean the remote, use a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	Batteries are dead or inserted incorrectly. Remote is not programmed for the device. Incorrect device button selected. Remote is too far from the device or obstructed.	Replace batteries with new AAA batteries, ensuring correct polarity. Reprogram the remote using a different code from the code library. Press the correct device button (TV, CBL, DVD, AUX) before operating. Ensure a clear line of sight between the remote and the device, and operate within range.
Some buttons do not work.	Remote is not fully compatible with all device functions. Incorrect code used for programming.	Try programming the remote with another code for your device from the code library. Some advanced functions may not be supported by universal remotes.

Problem	Possible Cause	Solution
Master Volume Control not working.	Master Volume feature not configured.	Refer to the full instruction manual for steps to set up Master Volume Control.

## SPECIFICATIONS


- **Model:** GE 34932
- **Device Capacity:** 4 devices
- **Connectivity Technology:** Infrared
- **Battery Requirement:** 2 x AAA batteries (not included)
- **Item Weight:** 3.25 ounces
- **Special Features:** Ergonomic design, Universal compatibility

## WARRANTY AND SUPPORT


This Jasco product comes with a 90-day limited warranty. For detailed warranty information and product registration, please visit [www.byjasco.com](http://www.byjasco.com).  
For questions or assistance, you may contact customer support at **1-800-654-8483** between 7:30 AM and 5:00 PM CST.

© 2025 Jasco Products. All rights reserved. Made in China.

## Related Documents - 34932

	<p><a href="#">GE Universal Remote Instruction Manual</a></p> <p>Comprehensive instruction manual for the GE Universal Remote Control, covering setup, button functions, programming methods (Direct Code Entry, Auto Code Search), advanced features, troubleshooting, warranty, and FCC statements. Includes model numbers 34932, 25006, and version 7252 V2.</p>
---	---

 <p>24914</p> <p>Universal Remote Instruction Manual Control Remoto Universal Manual de Instrucciones</p>	<p><a href="#">GE 24914 Universal Remote Instruction Manual</a></p> <p>User manual for the GE 24914 Universal Remote Control. This guide details setup, button functions, programming methods (Direct Code Entry, Auto Code Search), advanced features, and troubleshooting for seamless control of multiple audio/video devices like TVs, DVDs, CBL, and SAT systems.</p>
 <p>25008</p> <p>Universal Remote Instruction Manual Control Remoto Universal Manual de Instrucciones</p> <p>7252</p>	<p><a href="#">GE Universal Remote Instruction Manual: Setup, Programming, and Troubleshooting Guide</a></p> <p>Learn how to set up, program, and use your GE Universal Remote. This guide covers battery installation, direct code entry, auto code search, master volume, troubleshooting tips, warranty, and FCC compliance.</p>
	<p><a href="#">GE 4-Device Universal Remote User Manual</a></p> <p>Comprehensive user manual for the GE 4-Device Universal Remote, covering setup, programming, troubleshooting, and advanced features. Learn how to control your TV, cable box, DVD player, and audio devices.</p>
	<p><a href="#">GE 4-Device Universal Remote Control User Manual</a></p> <p>Comprehensive user manual for the GE 4-Device Universal Remote Control (Models 37607, 40081), covering setup, battery installation, programming methods (Direct Code Entry, Auto Code Search, Code Identification), advanced features (Favorites, Master Volume Control), troubleshooting, and FCC compliance.</p>

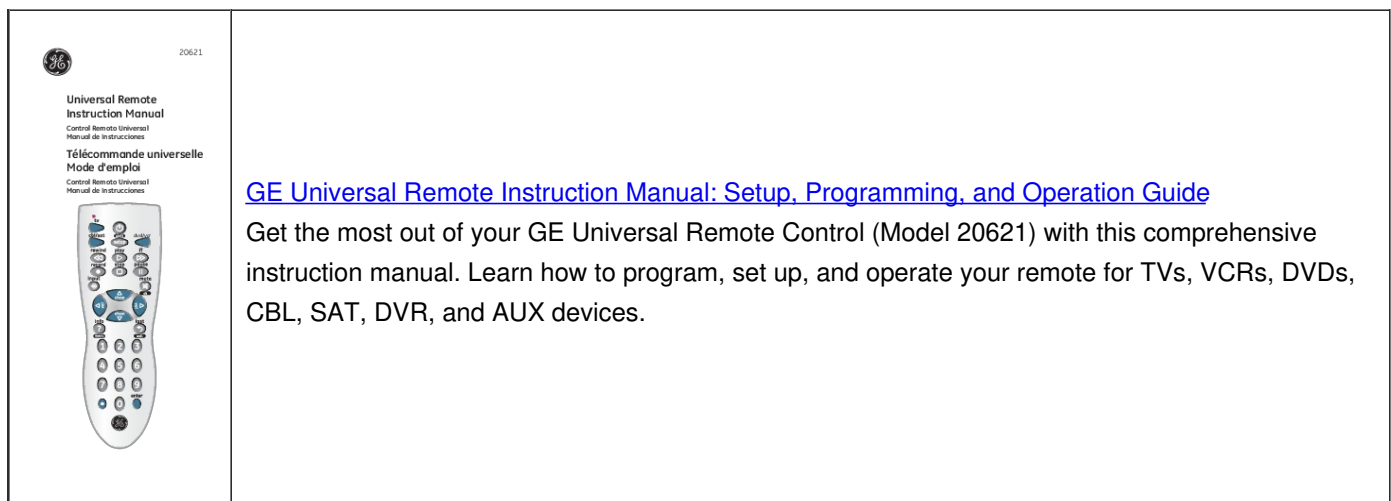

20621

Universal Remote  
Instruction Manual

Control Remoto Universal  
Manual de instrucciones

Télécommande :

**Télécommande universelle**  
Mode d'emploi

### Mode d'emploi

Control Remoto Universal  
Manual de instrucciones

Get the most out of your GE Universal Remote Control (Model 20621) with this comprehensive instruction manual. Learn how to program, set up, and operate your remote for TVs, VCRs, DVDs, CBL, SAT, DVR, and AUX devices.

34932 | 25006



# Universal Remote Instruction Manual



7252  
V2 | 7/17

lang:i-klingon score:12 filesize: 139.35 K page\_count: 12 document date: 2010-07-01

[illegible]