

Manuals.plus /

- › Nilfisk /
- › Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner Instruction Manual

## Nilfisk Multi II 30L T Inox

# Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner Instruction Manual

## 1. PRODUCT OVERVIEW

---

The Nilfisk Multi II 30L T Inox wet and dry vacuum cleaner is a powerful and versatile appliance designed for various cleaning tasks. It is suitable for both indoor and outdoor use, capable of handling wet or dry debris on carpets, in workshops, or on hard floors. This vacuum effectively cleans up dust, dirt, debris, and grit. It serves as an ideal secondary vacuum for applications such as cleaning a shop, car, garage, or office. The included hand tube allows access to difficult areas. For wet applications, it can be used in the garden, for emptying clogged sinks, or for cleaning and clearing gutters. The vacuum cleaner features a durable 30-liter polypropylene tank and a 1400 W motor.

Key features include:

- Large 30-liter tank capacity for extended cleaning sessions.
- Strong suction and blowing capabilities for diverse cleaning needs.
- Washable filter elements allowing seamless transition between dry and wet vacuuming without filter removal.
- Push&Clean filter cleaning system for easy filter maintenance during operation.
- Power control function for adjustable suction power.
- Integrated power outlet for connecting power tools, enabling automatic vacuum start.



Figure 1: Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner.

## 2. SAFETY INFORMATION

---

Please read and understand all safety instructions before operating the appliance. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the vacuum cleaner. Do not use the appliance with a damaged cord or plug. Always unplug the vacuum before cleaning or performing maintenance.
- **General Use:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Hazardous Materials:** Do not vacuum flammable, explosive, or hot materials such as ashes, burning cigarettes, or highly flammable liquids. Do not vacuum toxic substances.
- **Wet Vacuuming:** When wet vacuuming, ensure the float valve is clean and moves freely. Do not immerse the appliance in water.
- **Maintenance:** Only use original spare parts and accessories. Repairs should only be carried out by qualified personnel.

## 3. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner unit
- Suction hose
- Floor nozzle
- Crevice nozzle
- Filter set (washable filter elements)
- Hose storage hook

## 4. ASSEMBLY AND INITIAL SETUP

---

Follow these steps to assemble your vacuum cleaner:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Wheel Assembly:** Attach the wheels to the base of the vacuum cleaner until they click into place.
3. **Hose Connection:** Connect the suction hose to the inlet port on the vacuum cleaner. Ensure a secure fit.
4. **Accessory Attachment:** Attach the desired nozzle (floor nozzle or crevice nozzle) to the end of the suction hose.
5. **Filter Installation:** For dry vacuuming, ensure the dry filter is correctly installed. For wet vacuuming, ensure the wet filter is installed or the dry filter is removed if not suitable for wet use (refer to filter instructions). The washable filter elements allow switching between dry and wet without removal.
6. **Power Connection:** Plug the power cord into a suitable electrical outlet.



Figure 2: The Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner with its hose and nozzles.

## 5. OPERATION

---

### 5.1 Dry Vacuuming

For dry vacuuming, ensure the appropriate dry filter is installed. Connect the desired nozzle and switch on the vacuum cleaner. The 30-liter tank can be used with or without a dust bag, depending on the type of debris and user preference.

### 5.2 Wet Vacuuming

For wet vacuuming, ensure the washable filter elements are in place and suitable for wet use. Do not use a dust bag. The vacuum cleaner is equipped with a float valve that automatically stops suction when the tank is full to prevent overfilling. Empty the tank once the float valve activates.

### 5.3 Blower Function

To use the blower function, detach the suction hose from the inlet port and connect it to the exhaust port (usually located at the rear of the unit). The powerful airflow can be used for blowing leaves, debris, or inflating items.

## 5.4 Power Control and Tool Socket

The Multi II 30L T Inox features variable suction control, allowing you to adjust the power of the 1400 W motor as needed for different tasks. It also includes a power outlet on the unit. When a power tool is connected to this socket, the vacuum cleaner will automatically start when the tool is activated, providing efficient dust extraction during DIY projects.

## 6. MAINTENANCE AND CARE

### 6.1 Filter Cleaning (Push&Clean System)

The Push&Clean filter cleaning system allows for quick and easy cleaning of the filter during operation. When the filter indicator signals reduced performance, press the Push&Clean button. This action reverses the airflow through the filter, dislodging accumulated dust and restoring suction power. Perform this regularly to maintain optimal performance.

### 6.2 General Cleaning

Regularly clean the exterior of the vacuum cleaner with a damp cloth. Do not use harsh detergents or solvents. Empty the tank after each wet vacuuming session and allow it to dry to prevent odors and mold growth. Clean the nozzles and hose to ensure unobstructed airflow.

### 6.3 Storage

Store the vacuum cleaner in a dry, protected area. Utilize the hose storage hook to keep the hose neatly organized. Ensure the tank is empty and clean before storing for extended periods.

## 7. TROUBLESHOOTING

If you encounter issues with your Nilfisk Multi II 30L T Inox, refer to the following common troubleshooting steps:

| Problem                             | Possible Cause  | Solution   |
|-------------------------------------|---|--|
| Vacuum does not start               | No power supply; damaged cord/plug; safety switch activated | Check power connection; inspect cord/plug; reset safety switch (if applicable) |
| Loss of suction power               | Clogged filter; blocked hose/nozzle; full dust bag/tank     | Use Push&Clean system; clear blockages; empty dust bag/tank                    |
| Water overflow during wet vacuuming | Float valve stuck or dirty; tank full                       | Clean float valve; empty tank  |
| Unusual noise                       | Foreign object in hose/motor; damaged motor                 | Check and remove foreign objects; contact customer support for motor issues    |

If the problem persists after attempting these solutions, please contact Nilfisk customer support.

## 8. TECHNICAL SPECIFICATIONS

**Brand:**

Nilfisk

**Model Name:**

Multi II 30T VSC Inox

**Model Number:**

18451553

**Special Features:**

Wet/Dry

**Filter Type:**

HEPA filter

**Power Source:**

Corded Electric

**Voltage:**

230 Volts

**Wattage:**

1400 watts

**Amperage:**

6.09 Ampere

**Item Weight:**

10.5 Kilograms

**Capacity:**

30 Liters

**Maximum Suction Power:**

23.04 Meters

**Noise Level:**

74 Decibels

**Hose Length:**

4 Meters

**Item Dimensions (L x W x H):**

47L x 39B x 72H centimeters

**Color:**

Stainless Steel

**Recommended Use:**

Car interior, Home interior, Workshop, Garden

**Included Components:**

MULTI II 30 T INOX VSC EU unit

**Warranty Description:**

2 years

## 9. WARRANTY AND SUPPORT

---

The Nilfisk Multi II 30L T Inox Wet/Dry Vacuum Cleaner comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use conditions. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or further assistance, please visit the official Nilfisk store or contact their customer service department. You can find more information and contact details on the Nilfisk Brand Store.

