

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kingsteam](#) /

› [Kingsteam 2-in-1 Ozone Hair and Facial Steamer \(Model JY-15CL\) Instruction Manual](#)

Kingsteam JY-15CL

Kingsteam 2-in-1 Ozone Hair and Facial Steamer

Model: JY-15CL - Instruction Manual

INTRODUCTION

The Kingsteam 2-in-1 Ozone Hair and Facial Steamer is designed for personal care, offering both hair and facial steaming functionalities. This device utilizes advanced PTC ceramic heating elements to produce fine steam, enhanced with ozone-generated ion water particles for deeper penetration. This manual provides essential information for safe operation, effective use, and proper maintenance of your steamer.

SAFETY INFORMATION

- Keep face 8 to 12 inches away from the steamer to avoid burns.
- Do not leave the device unattended while in use.
- The device will turn off automatically when the water level is lower than the probe and will alarm until the OFF button is pressed or the device is unplugged.
- Any moisture found inside the product packaging is from factory quality testing and does not affect normal use.
- Use only distilled or purified water. Do not add water over the MAX line.
- This product is TUV & CE approved, ensuring safety standards.

SETUP

1. Unpacking and Component Identification

Carefully remove all components from the packaging. Ensure you have the main steamer unit, hair cap attachment, facial sprayer attachment, and power cord.

2. Water Filling

Open the water tank cover. Fill the water tank with **distilled water only** up to the 'MAX' line. Do not overfill. Close the water tank cover securely.

Security and Protection Settings



- Please use distilled water or pure water, don't add water over the tank MAX
- Auto shut-off function for safety when the water level is too low



- Protective burn guard



Figure 1: Water tank with MAX/MIN indicators and safety warnings.

3. Assembly for Hair Steaming

1. Align the hair cap to the steamer body and press it in firmly until it clicks into place.
2. Ensure the hair cap is securely attached and stable.

Installation Steps

Hair Steamer



- 1 Align the hair cap to the steamer body and press it in



- 2 Place the spray pipe and the steamer body at a 90° angle, align it with the buckle and pull it out

Facial Steamer



- 1 After waiting for the product to adjust the use of various angles



- 2 After installation, turn on the switch, adjust a comfortable posture, and tuck the hair into the hair cup

Figure 2: Hair Steamer Installation Steps.

4. Assembly for Facial Steaming

1. If the hair cap is attached, gently remove it.
2. Place the facial spray pipe into the steamer body at a 90-degree angle, aligning it with the buckle, and push it in until secure.
3. The facial sprayer arm is extendable (between 10.5 and 13 inches) and 360° rotatable for optimal positioning.

Extendable Arm and 360° Rotatable Sprayer



Figure 3: Extendable and Rotatable Facial Sprayer Arm.

Your browser does not support the video tag.

Video 1: Demonstration of switching the steamer from hair to facial mode.

OPERATING INSTRUCTIONS

1. Hair Steaming Method

1. Wash your hair and dry it until it is half-dry. Apply your preferred hair treatment or conditioner.
2. Place the steamer on a stable desktop or surface.
3. Ensure the hair cap attachment is securely in place.
4. Connect the power cord and press the power button.
5. Press the steam button. Steam will begin to emerge in approximately 5-6 minutes.
6. Position your head under the hair cap. For best results, do not use an additional steam cap, allowing steam to penetrate directly to the scalp and hair shaft.

7. Steam for 10-15 minutes.



Figure 4: Hair Steamer in use.

Your browser does not support the video tag.

Video 2: Demonstration of hair steaming for natural hair.

2. Facial Steaming Method

1. Wash your face with a facial cleanser before steaming.
2. Ensure the facial spray pipe attachment is securely in place.
3. Connect the power cord and press the power button.
4. Press the steam button. Steam will begin to emerge in approximately 5-6 minutes.
5. Adjust the angle of the sprayer according to your needs using the 360° rotatable sprayer.
6. To avoid burning your face, keep your face 8 to 12 inches away from the steamer.
7. Steam for 10-15 minutes.

8. The steamer includes an aromatherapy diffusing function. Open the designated compartment on the facial sprayer and add essential oils as desired.



Figure 5: Ozone Facial Steamer in use.

Fragrance Function Design



Figure 6: Aromatherapy Diffusing Function.



Figure 7: UV Light for Ozone Generation.

Your browser does not support the video tag.

Video 3: A user demonstrating a facial routine using the steamer and various skincare products.

MAINTENANCE

1. Cleaning

- After each use, unplug the device and allow it to cool completely.
- Empty any remaining water from the tank.
- Wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

- Ensure all components are thoroughly dry before storage.

2. Descaling

To prevent mineral buildup, especially if using non-distilled water (though distilled water is recommended), perform descaling periodically. Fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Run the steamer for 5-10 minutes, then turn it off and let it sit for 30 minutes. Empty the tank and rinse thoroughly with distilled water. Run the steamer with plain distilled water once or twice to remove any vinegar residue.

3. Storage

Store the steamer in a cool, dry place away from direct sunlight and moisture. Keep it out of reach of children.

TROUBLESHOOTING

- **No Steam / Device Not Turning On:** Check if the power cord is securely plugged in. Ensure the water tank has sufficient water above the 'MIN' line. The device has an auto-off function if water is too low.
- **Weak Steam:** Ensure the water tank is filled with distilled water. Mineral buildup can reduce steam output; perform descaling if necessary.
- **Leakage:** Ensure all attachments (hair cap or facial sprayer) are securely fastened to the main unit. Verify the water tank cover is tightly closed.
- **Unusual Odor:** A slight plastic odor may occur during initial uses. This is normal and should dissipate with continued use. Ensure proper ventilation.

SPECIFICATIONS

Feature	Detail
Model Number	JY-15CL
Product Dimensions	14.2 x 10 x 16 inches
Item Weight	4 Pounds
Brand	Kingsteam
Material	Ceramic
Color	Black
First Available Date	May 15, 2018

WARRANTY AND SUPPORT

The Kingsteam 2-in-1 Hair and Facial Steamer is TUV & CE approved, ensuring high safety and quality standards. If for any reason you are not satisfied with your purchase or encounter any issues, please feel free to contact Kingsteam customer support. We are committed to resolving your problems and fulfilling our obligations.

For support, please refer to the contact information provided with your product packaging or visit the official Kingsteam website.