

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Oversized Adjustable Reclining Folding Chair (Model VL-G26000419) User Manual

VINGLI VL-G26000419

VINGLI Oversized Adjustable Reclining Folding Chair User Manual

MODEL: VL-G26000419

Introduction

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your VINGLI Oversized Adjustable Reclining Folding Chair. Please read this manual thoroughly before using the product and retain it for future reference.

Important Safety Information

- **MAXIMUM WEIGHT CAPACITY:** Do not exceed 440 lbs (199.58 kg). Exceeding this limit may result in injury or damage to the chair.
- **WARNING:** Always ensure the chair is fully opened and the legs are securely locked before use.
- **FINGERS:** Keep fingers away from the folding mechanism to prevent pinching.
- **FORCING MECHANISM:** Do not force the chair to fold or unfold if it is stuck. Inspect for obstructions.
- **STORAGE:** Always store the chair in an upright position when not in use to prevent accidental folding or damage.
- **SURFACE:** Ensure the chair is placed on a stable, level surface to prevent tipping.

Setup Instructions

Your VINGLI chair requires no assembly. Follow these steps to set up the chair for use:

1. Remove the chair from its carrying bag.
2. Gently unfold the chair until it is fully extended. Ensure all frame components are properly aligned.
3. Verify that the chair's frame locks securely into place. You should hear an audible click or feel the frame stabilize.

4. Adjust the legs to your desired height and angle. Press the release button on each leg to extend or retract, then ensure they lock into position. The swivel feet will adapt to uneven terrain.
5. Adjust the backrest to your preferred reclining position by disengaging the locking mechanism on both sides, setting the angle, and re-engaging the locks.
6. Place the removable cushion onto the chair if desired.



Image: The VINGLI chair fully set up, showing its padded seat and backrest.

REMOVABLE CUSHION

For Winter and Summer use




Waterproof



Easy to clean



Warm

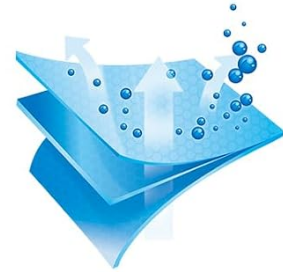

Breathable Mesh

Image: Detail of the adjustable leg and swivel foot, designed for stability on various terrains.

Operating Instructions

Adjusting Leg Height and Angle

Each leg of the VINGLI chair features an independent adjustment mechanism. To adjust, locate the release button on the side of the leg. Press the button and slide the inner leg tube to the desired height. Release the button to lock the leg in place. The swivel feet at the bottom of each leg automatically adapt to uneven ground, providing stability on various surfaces such as rocks, grass, sand, or hard ground.

ALL TERRAIN CHAIR | Adapt to various uneven terrain



Image: Demonstrates the adjustable legs and swivel feet adapting to uneven terrain.

Reclining the Backrest

The chair offers 5 reclining positions, allowing for a range of angles up to 160 degrees. To recline, locate the locking mechanisms on both sides of the backrest near the armrests. Disengage both locks simultaneously, adjust the backrest to your desired angle, and then firmly re-engage the locks to secure the position. Ensure both sides are locked before leaning back.

EASY TO CARRY



Image: Detail of the easily adjustable back curvature mechanism.

Using the Removable Cushion

The chair includes a removable cushion for enhanced comfort and adaptability to different weather conditions. For warmer weather, the cushion can be removed to expose the breathable mesh fabric underneath, promoting airflow. For cooler weather or added comfort, the cushion can be easily reattached.



Easily adjustable
back curvature



Stylish Arc Handle
More Comfortable



Upgraded locks for easier
height adjustment

Image: The removable cushion and breathable mesh fabric for versatile use.

Maintenance

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use mild soap and water, then rinse thoroughly. Allow to air dry completely before folding or storing.
- **Fabric Care:** The 600D waterproof Oxford fabric is designed for durability and easy cleaning. The mesh fabric dries quickly if it gets wet.
- **Frame Inspection:** Periodically inspect the steel frame for any signs of damage, corrosion, or loose fasteners. Tighten any loose screws or bolts.
- **Moving Parts:** Ensure the leg adjustment and reclining mechanisms operate smoothly. Clean any dirt or debris that may hinder their function.

Storage and Portability

To fold the chair for storage or transport:

1. Ensure the backrest is in its most upright position.
2. Retract all adjustable legs to their shortest length.
3. Carefully fold the chair inward until it collapses into a compact form.
4. Place the folded chair into the included durable waterproof carrying bag.



Fishing



Camping



Beach



Courtyard

Image: The VINGLI chair folded and placed in its carrying bag for easy transport.

Troubleshooting

Problem	Possible Cause	Solution
Chair feels unstable or tips easily.	Legs not fully extended or locked; uneven ground; weight capacity exceeded.	Ensure all legs are fully extended and securely locked. Adjust individual leg heights to compensate for uneven terrain. Do not exceed the 440 lbs weight limit.
Legs sink into soft ground.	Insufficient surface area of leg feet for soft ground.	The chair's swivel feet are designed to help. If sinking persists, place a flat, sturdy object (e.g., a small board) under each foot.
Backrest does not recline or lock properly.	Locking mechanisms are obstructed or not fully engaged.	Check for any debris or fabric caught in the locking mechanism. Ensure both locks are fully disengaged before adjusting and fully engaged after setting the desired angle.

Problem	Possible Cause	Solution
Chair is difficult to fold or unfold.	Mechanism is stiff or obstructed.	Ensure all leg adjustments are retracted. Check for any foreign objects preventing smooth movement. Do not force the mechanism.

Product Specifications

Brand	VINGLI
Model Name	Charles (VL-G26000419)
Color	Army Green + Black
Product Dimensions (Unfolded)	32"D x 26"W x 41"H
Seat Height	20 Inches
Seat Depth	58 inches
Maximum Weight Recommendation	440 Pounds (199.58 kg)
Material	600D Waterproof Oxford Fabric, Polyester (Fill Material), Steel (Frame)
Special Features	Adjustable Height, Cushion Availability, Reclining (5 positions)
Item Weight	18.7 pounds (8.48 kg)
Assembly Required	No assembly required
Indoor/Outdoor Usage	Outdoor
Included Components	Carry Bag
UPC	611890871511

Warranty and Support

For specific warranty information regarding your VINGLI Oversized Adjustable Reclining Folding Chair, please refer to the documentation included with your purchase or contact VINGLI customer support directly.

For further assistance, product inquiries, or to report any issues, please visit the official VINGLI website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official online presence.

You can also visit the [VINGLI Store on Amazon](#) for more information and product offerings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DCPS8ZK>

More documents and user manuals: <https://manuals.plus/>