



[Manuals.plus](#) /

› [somfy](#) /

› Somfy Smoove 1 RTS 1-Channel Wall Switch Wirefree User Manual

somfy 1811533

Somfy Smoove 1 RTS 1-Channel Wall Switch Wirefree User Manual

Model: 1811533

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Somfy Smoove 1 RTS 1-Channel Wirefree Surface-Mounted Wall Switch. Please read this manual carefully before using the product to ensure proper function and safety.

PRODUCT OVERVIEW

The Somfy Smoove 1 RTS is a single-channel, battery-operated, wirefree wall switch designed for convenient control of Somfy Radio Technology Somfy (RTS) products, such as motorized window treatments or screens. Its surface-mounted design eliminates the need for cutting into drywall, simplifying installation.



Figure 1: Somfy Smoove 1 RTS 1-Channel Wall Switch, showing its compact, wirefree design.

Key Features:

- **Wirefree Installation:** No electrical wiring or cutting into drywall required.
- **Surface-Mounted:** Easily attaches to nearly any flat surface.
- **Single Channel Control:** Operates one RTS product or a group of RTS products.
- **Battery Operated:** Powered by a long-lasting CR2032 battery.
- **Intuitive Operation:** Features Up, Down, and 'my' (favorite position) buttons.
- **Modern Design:** Clean lines and a pure white finish, compatible with interchangeable decorative frames (sold separately).

Simple & Convenient

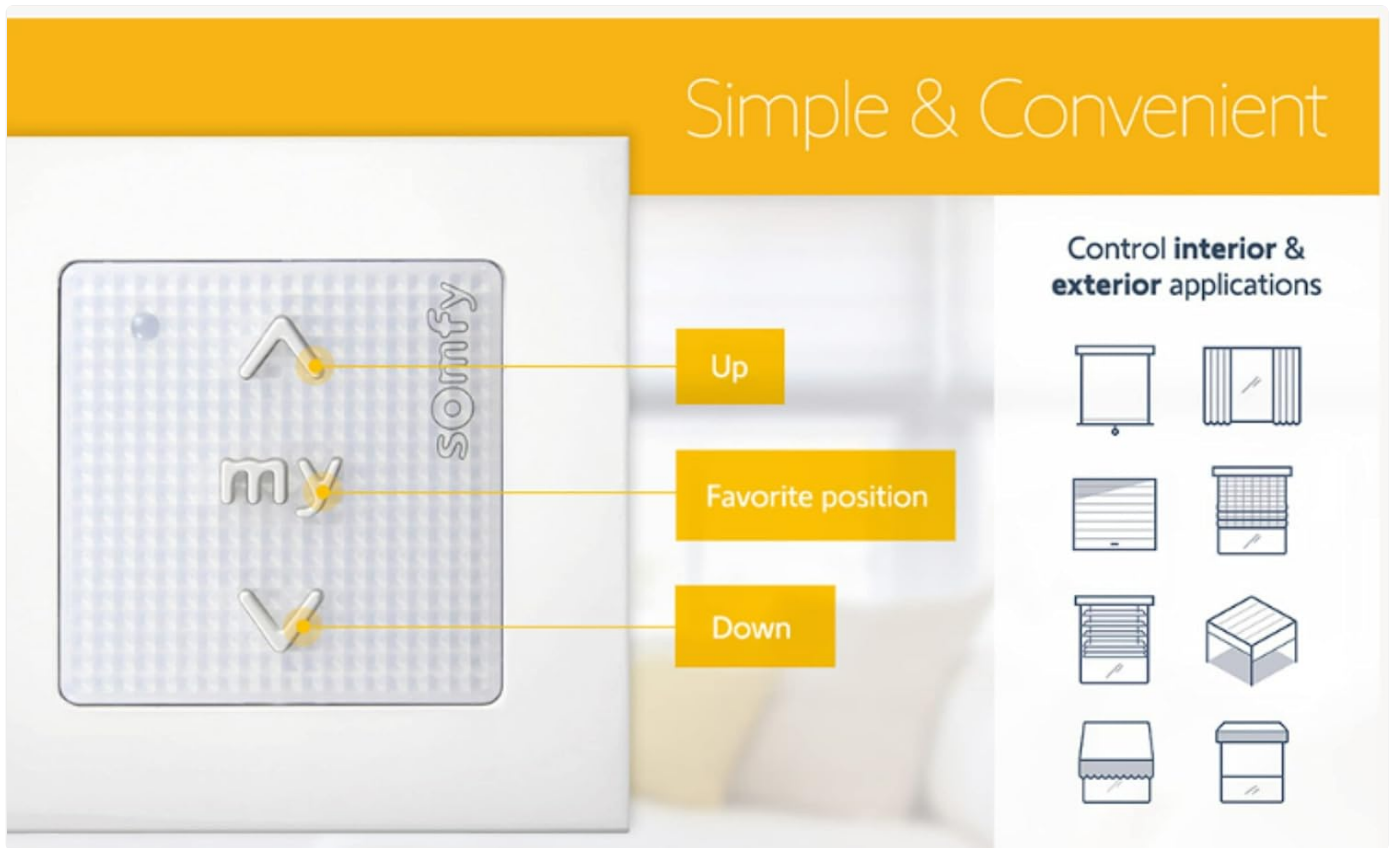 


Figure 2: Illustration of the Somfy Smooove 1 RTS button functions: Up, 'my' (favorite position), and Down, for controlling interior and exterior applications.

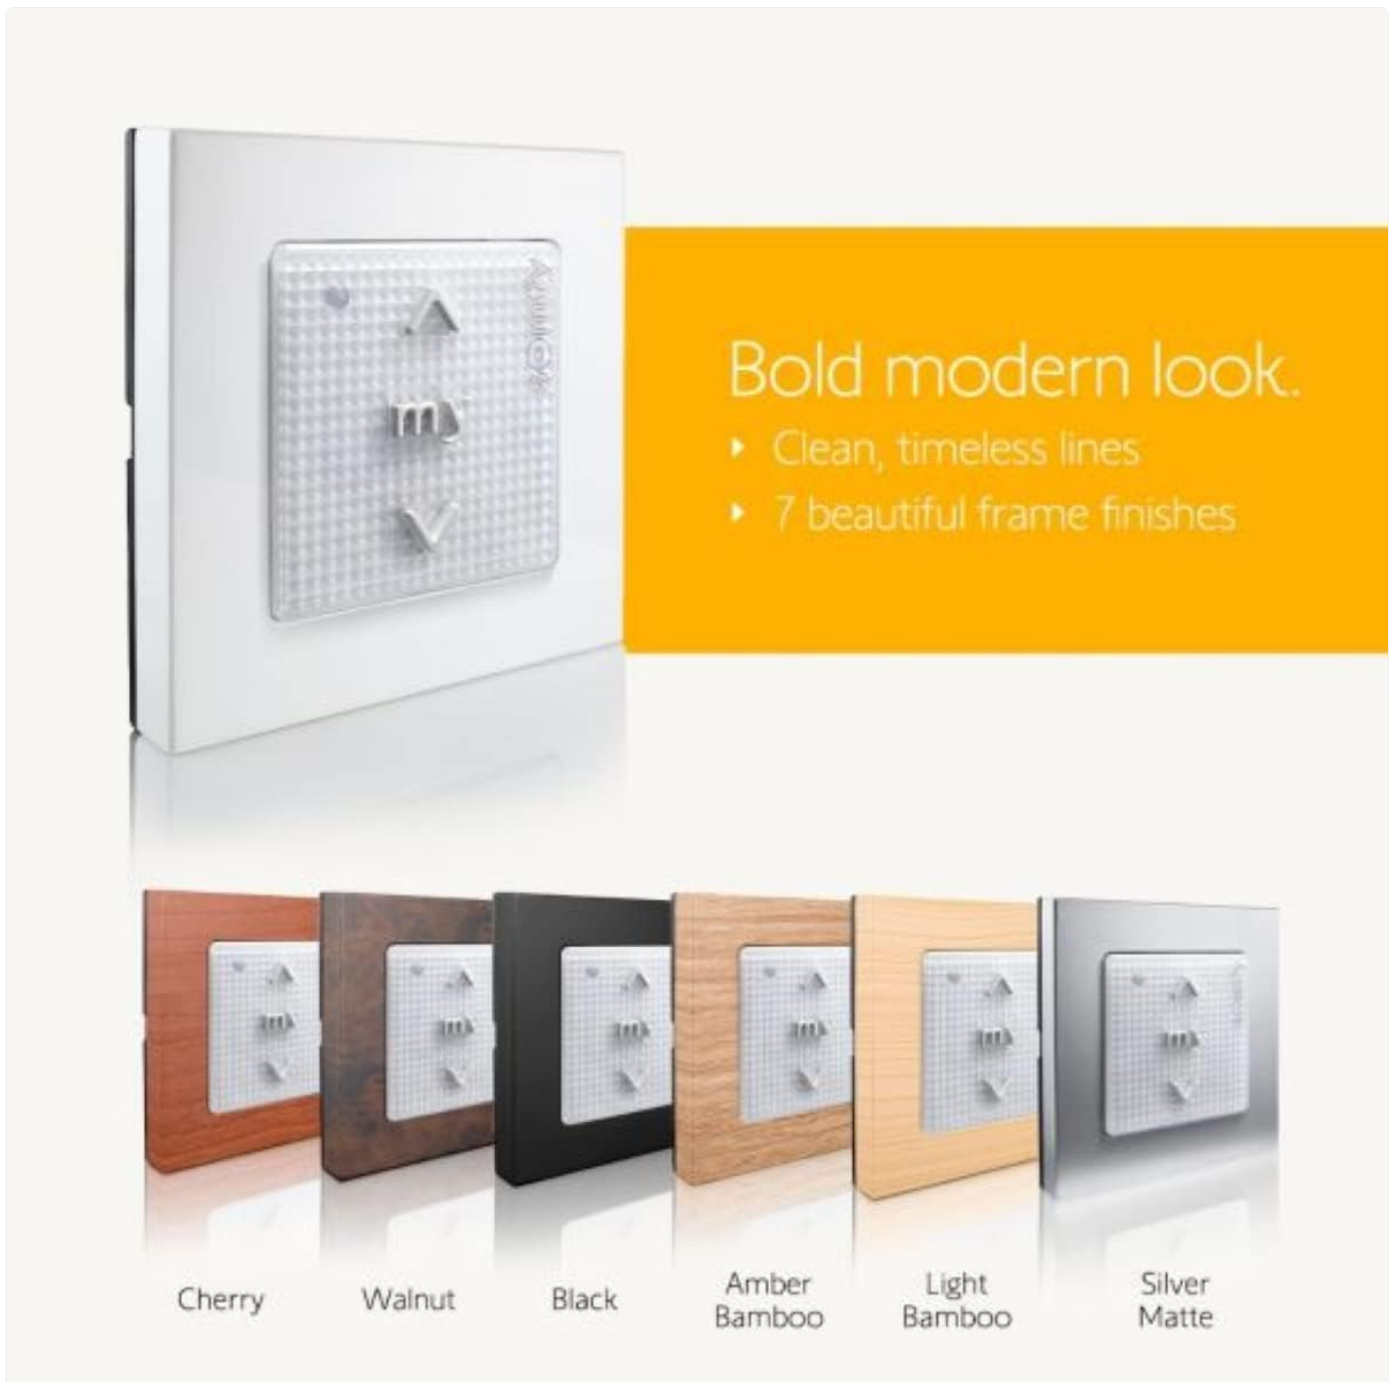 


Figure 3: The Somfy Smoove 1 RTS showcasing its modern design and compatibility with seven different decorative frame finishes (Cherry, Walnut, Black, Amber Bamboo, Light Bamboo, Silver Matte).

SETUP AND INSTALLATION

The Smoove 1 RTS is designed for simple, surface-mounted installation without the need for an electrician or complex wiring.

Package Contents:

- Somfy Smoove 1 RTS Wall Switch
- Mounting Bracket
- Screws
- Adhesive Tape
- CR2032 Battery (pre-installed or included)

Installation Steps:

1. **Choose Location:** Select a convenient, flat surface for mounting the switch. Ensure it is within range of the Somfy RTS product(s) you intend to control.
2. **Prepare Surface:** Clean the mounting surface to ensure good adhesion if using adhesive tape.
3. **Mounting Bracket:**
 - **Using Adhesive Tape:** Apply the provided adhesive tape to the back of the mounting bracket. Press the bracket firmly onto the chosen surface for at least 30 seconds.
 - **Using Screws:** Position the mounting bracket on the surface and mark the screw holes. Drill pilot holes if necessary, then secure the bracket with the provided screws.
4. **Insert Battery (if not pre-installed):** Open the battery compartment on the back of the switch and insert the CR2032 battery, observing polarity.
5. **Attach Switch:** Align the Smoove 1 RTS switch with the mounted bracket and snap it into place.

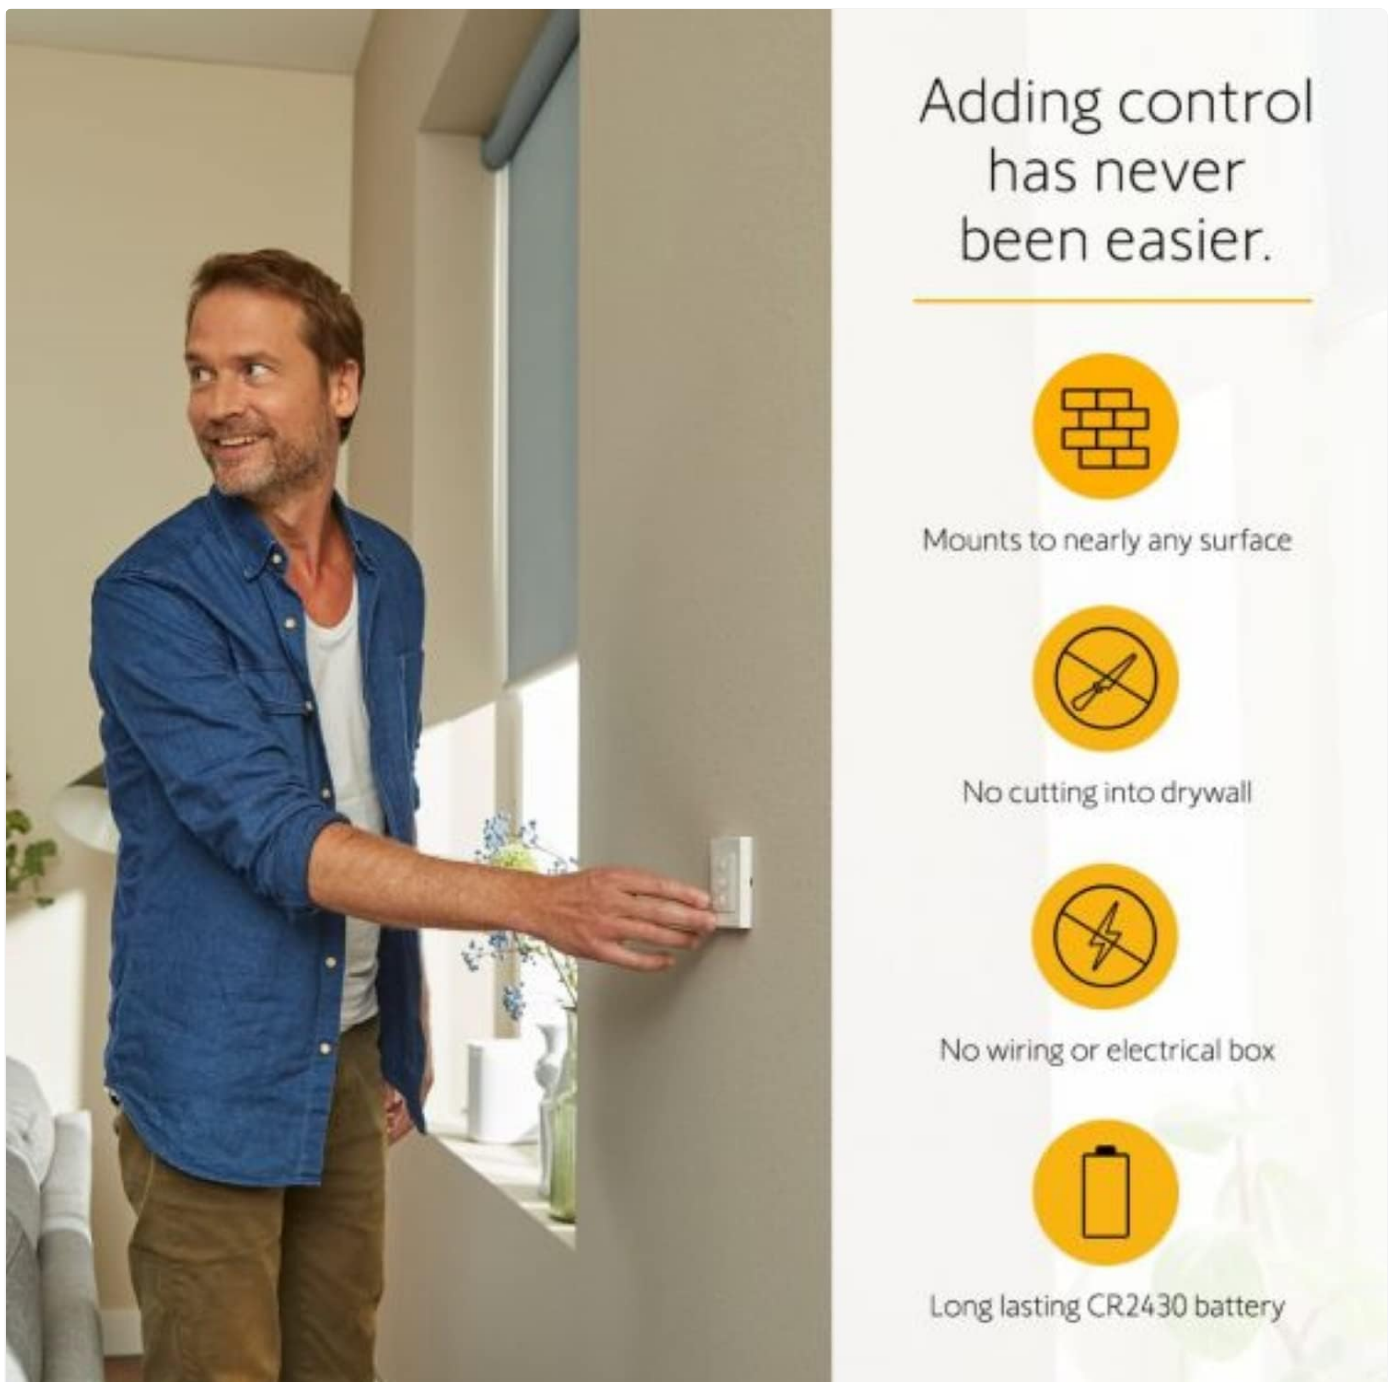 


Figure 4: A man easily installing the Somfy Smoove 1 RTS wall switch on a wall, demonstrating its simple, wirefree mounting process.

Mount up.



Easily attaches to nearly any surface.

Smooove 1 RTS can be surface-mounted nearly anywhere with the included screws or removable adhesive.



Long lasting battery power.

Smooove 1 RTS is powered by a replaceable CR032 battery. Depending on application and usage, a single battery can last over a year.



All hardware and screws included.

Get everything you need to mount Smooove 1 RTS, including its easy to use mounting bracket, screws and adhesive tape.

Figure 5: Visual representation of the Somfy Smooove 1 RTS installation components, highlighting its easy attachment to surfaces, long-lasting battery power, and included hardware (screws and adhesive tape).

OPERATING INSTRUCTIONS

The Smooove 1 RTS provides intuitive control over your Somfy RTS motorized products.

Button Functions:

- **▲ (Up) Button:** Moves the motorized product upwards (e.g., raises a shade, opens a curtain).
- **▼ (Down) Button:** Moves the motorized product downwards (e.g., lowers a shade, closes a curtain).
- **'my' Button:** Recalls the pre-programmed favorite position of the motorized product.

Programming the 'my' Position:

To set a favorite 'my' position for your motorized product:

1. Move your motorized product to the desired 'my' position using the Up or Down buttons.
2. Press and hold the 'my' button until the motorized product jogs (moves slightly back and forth). This confirms the new 'my' position has been saved.

To delete a 'my' position, press and hold the 'my' button until the motorized product jogs. Then, immediately press and hold the 'my' button again until it jogs a second time. This will clear the saved 'my' position.

MAINTENANCE

The Somfy Smoove 1 RTS requires minimal maintenance.

Battery Replacement:

The switch is powered by a CR2032 lithium coin cell battery. Battery life can vary depending on usage, but typically lasts over a year. Replace the battery when the indicator light on the switch (if present) flashes or when the switch becomes unresponsive.

1. Carefully detach the switch from its mounting bracket.
2. Locate the battery compartment on the back of the switch.
3. Remove the old CR2032 battery.
4. Insert a new CR2032 battery, ensuring correct polarity (+ side up).
5. Reattach the switch to its mounting bracket.

Cleaning:

Clean the surface of the switch with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

TROUBLESHOOTING

If you experience issues with your Somfy Smoove 1 RTS wall switch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Switch does not respond.	Dead or low battery.	Replace the CR2032 battery.
Switch does not control the product.	Switch is not paired with the product.	Refer to your motorized product's manual for pairing instructions. Typically involves pressing a programming button on the motor/receiver and then a button on the switch.
Product responds intermittently.	Weak battery or interference.	Replace battery. Ensure no large metal objects or other strong radio frequency sources are between the switch and the product.
'my' position is incorrect.	'my' position was set incorrectly.	Reprogram the 'my' position as described in the "Operating Instructions" section.

SPECIFICATIONS

Feature	Detail
Model Number	1811533
Brand	Somfy
Technology	Radio Technology Somfy (RTS)

Feature	Detail
Channels	1
Power Source	CR2032 Lithium Coin Cell Battery
Installation Type	Surface-Mounted, Wirefree
Color	Pure White (compatible with various decorative frames)
Dimensions (Package)	3.58 x 3.58 x 1.61 inches
Item Weight	3.52 ounces
Compatible Devices	Roller Shade or Window Curtain (any Somfy RTS product)

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or additional assistance, please refer to the official Somfy website or contact Somfy customer service directly. Specific warranty terms may vary by region and retailer. You can typically find support resources, FAQs, and contact information on the manufacturer's official website: www.somfy.com

