

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola Voice CD4001 Cordless Phone User Manual

Motorola CD4001

Motorola Voice CD4001 Cordless Phone User Manual

Model: CD4001

1. INTRODUCTION

This manual provides essential instructions for setting up and operating your Motorola Voice CD4001 cordless phone. Please read this manual carefully to ensure proper use and to take full advantage of its features, including call blocking, a 50-entry phonebook, and hands-free communication.





Figure 1: Motorola Voice CD4001 Cordless Phone and Base Station. This image shows the black cordless handset resting in its matching black base station, highlighting its compact and ergonomic design.

2. SAFETY INFORMATION

Please observe the following safety precautions to reduce the risk of fire, electric shock, and injury:

- Use only the power adapter and batteries supplied with the product.
- Do not expose the phone to water or moisture.
- Avoid placing the phone near heat sources or direct sunlight.
- Do not attempt to open or repair the phone yourself. Refer all servicing to qualified personnel.
- Keep the phone out of reach of children.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Motorola CD4001 Handset
- Base Station
- Power Adapter
- Telephone Line Cord
- Rechargeable Lithium-ion Battery (1 included)

- User Manual (this document)

Blockieren Sie unerwünschte Anrufe*.

Wählen Sie die gewünschten Anrufe aus und blockieren Sie die unerwünschten. So geht's:

Wenn der Name auf dem Display angezeigt wird, können Sie den Anruf annehmen oder ablehnen oder die Nummer über die entsprechende Taste direkt zum Menü „Anrufsperre“ sperren.

Um die Anrufsperre nutzen zu können, müssen Sie die Anruferidentifikation bei Ihrem Netzbetreiber abonnieren. Möglicherweise fällt eine Abonnementgebühr an.



Figure 2: Illustrated components included in the Motorola CD4001 package. This diagram visually represents the handset, base station, power adapter, telephone line cord, rechargeable batteries, and user manual.

4. PRODUCT OVERVIEW

The Motorola CD4001 is a cordless fixed-line telephone designed for clear and convenient communication. Key features include:

- **Call Blocking Technology:** Block up to 10 unwanted numbers with a dedicated key.
- **Backlit Display and Keypad:** Blue illuminated display and keypad for enhanced visibility in various lighting conditions.
- **50-Entry Phonebook:** Store frequently called names and numbers.
- **Hands-free Speaker:** Enjoy conversations without holding the handset.
- **10 Polyphonic Ringtones:** Customize your incoming call alerts.
- **Caller ID:** See who's calling before you answer (subscription required from your service provider).
- **Call Waiting:** Be alerted to a second incoming call while on an active call.
- **Redial Function:** Quickly call the last dialed number.
- **Digital Answering System:** Up to 17 minutes of recording capacity for missed calls.

BELANGRIJKSTE KENMERKEN



Figure 3: Diagram highlighting the main features of the Motorola CD4001 handset, including call blocking, backlit display, hands-free speaker, caller ID, 50-entry phonebook, and redial function.

5. SETUP

5.1. Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the supplied Lithium-ion battery, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

5.2. Connecting the Base Station

1. Connect one end of the telephone line cord to the TEL LINE jack on the base station.
2. Connect the other end of the telephone line cord to your telephone wall socket.
3. Plug the small end of the power adapter into the DC IN jack on the base station.
4. Plug the large end of the power adapter into a standard electrical outlet.

5.3. Charging the Handset

Place the handset on the base station. The charging indicator on the handset display will show that it is charging. For optimal battery performance, charge the handset for at least 16 hours before initial use.

6. OPERATING INSTRUCTIONS

6.1. Making and Receiving Calls

- **To Make a Call:** Press the **Talk/Speaker** button, then dial the number. Alternatively, dial the number first, then press **Talk/Speaker**.
- **To Receive a Call:** When the phone rings, press the **Talk/Speaker** button.
- **To End a Call:** Press the **End Call** button or place the handset back on the base station.

6.2. Call Blocking

The CD4001 features a dedicated call blocking button to easily manage unwanted calls.

1. During an incoming call or after a call from an unwanted number, press the **Call Block** button (often marked with a shield icon).
2. Follow the on-screen prompts to confirm blocking the number.
3. You can block up to 10 numbers directly from the keypad.

UW OPROEPEN, UW KEUZE



Blokkeer vervelende oproepen*

Kies de oproepen die je wilt ontvangen en blokkeer de oproepen die je niet wilt ontvangen.



Figure 4: Illustration of the call blocking feature on the Motorola CD4001. The image highlights the dedicated call block button and explains how to block unwanted calls.

6.3. Phonebook

Store up to 50 names and numbers in the phonebook for quick dialing.

- **To Add an Entry:** Press **MENU/OK**, navigate to 'Phonebook', select 'Add New', enter the name and number, then save.
- **To Dial from Phonebook:** Press the **Phonebook** button (often an open book icon), scroll to the desired entry, and press **Talk/Speaker**.

6.4. Hands-free Speaker

During a call, press the **Speaker** button to activate the hands-free function. Press it again to switch back to handset mode.

6.5. Ringtones

Customize your phone's ringtone from 10 available polyphonic melodies.

- **To Change Ringtone:** Press **MENU/OK**, navigate to 'Settings', then 'Ringtone', and select your preferred melody.

7. MAINTENANCE

To ensure the longevity and optimal performance of your Motorola CD4001 phone:

- Clean the handset and base station with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the phone to extreme temperatures or direct sunlight.
- Ensure the charging contacts on the handset and base are clean and free of debris.

8. TROUBLESHOOTING

Problem	Solution
No dial tone.	Check that the telephone line cord is securely connected to both the base station and the wall socket. Ensure the power adapter is plugged in.
Handset not charging.	Ensure the handset is correctly placed on the base station. Clean the charging contacts on both the handset and base. Verify the power adapter is connected.
Cannot make or receive calls.	Check the telephone line connection. Ensure the handset battery is charged. If the issue persists, contact your telephone service provider.
Poor sound quality.	Move closer to the base station. Check for interference from other electronic devices.

9. SPECIFICATIONS

Feature	Detail
Brand	Motorola
Model	CD4001
Model Number	5055374703175
Type	Cordless Fixed Line Phone
Display	Blue Backlit
Keypad	Backlit
Phonebook Capacity	50 entries (names and numbers)
Call Blocking Capacity	Up to 10 numbers
Ringtones	10 Polyphonic
Answering Machine Recording Time	17 minutes (if applicable)
Battery Type	1 x Lithium-ion (included)

Feature	Detail
Dimensions (Handset & Base)	Approximately 60 x 60 x 85 cm (L x W x H)
Weight	Approximately 340 g
Connectivity	Wireless (DECT)

10. WARRANTY AND SUPPORT

Motorola products are designed for reliability and performance. For warranty information and technical support, please refer to the warranty card included in your package or visit the official Motorola support website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact your local Motorola customer service.

© 2023 Motorola. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DCTF3QQ>

More documents and user manuals: <https://manuals.plus/>