

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [QIACHIP](#) /

› [QIACHIP Universal Ceiling Fan and Light Remote Control Kit FLC-110V User Manual](#)

QIACHIP FLC-110V

QIACHIP Universal Ceiling Fan and Light Remote Control Kit

Model: FLC-110V

Your guide to installation, operation, and maintenance.

1. INTRODUCTION

The QIACHIP FLC-110V Universal Ceiling Fan and Light Remote Control Kit is designed to convert traditional ceiling fans with lights into remote-controlled units. This kit provides convenient wireless control over fan speeds, light operation, and timing functions. It features advanced semiconductor switch technology for quiet and reliable performance.



Image 1.1: The QIACHIP Universal Ceiling Fan and Light Remote Control Kit, including the remote, receiver, and wire connectors.

2. PRODUCT OVERVIEW

2.1. Components

- 1x Wireless Remote Control
- 1x Receiver Unit
- 1x Remote Wall Mount Holder
- Wire Nuts (for installation)

What are in the box ?

- 1x remote control (battery not included in the package)
- 1x receiver
- 1x remote wall mount
- 1x English manual



Image 2.1: Contents of the product package, showing the remote control, receiver, wall mount, and wire nuts.

2.2. Key Features

- 3-in-1 Functionality:** Controls fan speed, light ON/OFF, and timing.
- Fan Speed Control:** Three adjustable speeds (High, Medium, Low) and OFF.
- Light Control:** Independent ON/OFF for ceiling fan lights (no dimming function).
- Timing Function:** Four preset timer options (1H, 2H, 4H, 8H) for automatic fan shutdown.
- New Technology:** Utilizes semiconductor switches instead of mechanical relays, reducing switching noise and eliminating switching arcs.
- Mute Function:** Allows for silent operation without audible beeps.
- Wide Compatibility:** Compatible with most ceiling fan lights from brands like Hunter, Harbor Breeze, Westinghouse, and Honeywell.

3. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Improper installation can lead to electric shock or

fire hazards.

- **Power Disconnection:** Always turn off power at the circuit breaker before installing or servicing the fan and remote kit.
- **Qualified Electrician:** If you are unsure about wiring, consult a qualified electrician.
- **Voltage:** This kit is designed for 110V AC systems.
- **Motor Compatibility:** **DO NOT** use with DC motors. **DO NOT** use with ceiling fans that have 3-wire motors.
- **Receiver Size:** Ensure there is sufficient space within your fan's canopy for the receiver (dimensions: 4.56 x 2.12 x 1.1 inches).
- **Capacitor Compatibility:** The product uses T4+5 μ F capacitors. Optimal compatibility is achieved if your existing fan's running capacitor is also 5 μ F. Significant speed variation may occur if the deviation is 3 μ F or more.
- **No Reverse Function:** The receiver does not support a reverse function for the fan.

4. INSTALLATION

Follow these steps to install the receiver unit into your ceiling fan. Ensure power is OFF before proceeding.

4.1. Pre-Installation Check

- Verify that the power to the ceiling fan is completely disconnected at the main circuit breaker.
- Measure the available space in your fan's canopy to ensure the receiver (4.56 x 2.12 x 1.1 inches) will fit.

4.2. Wiring Diagram

Ceiling Fan Remote Control Kit of Wiring Diagram



Image 4.1: Detailed wiring diagram of the receiver unit.

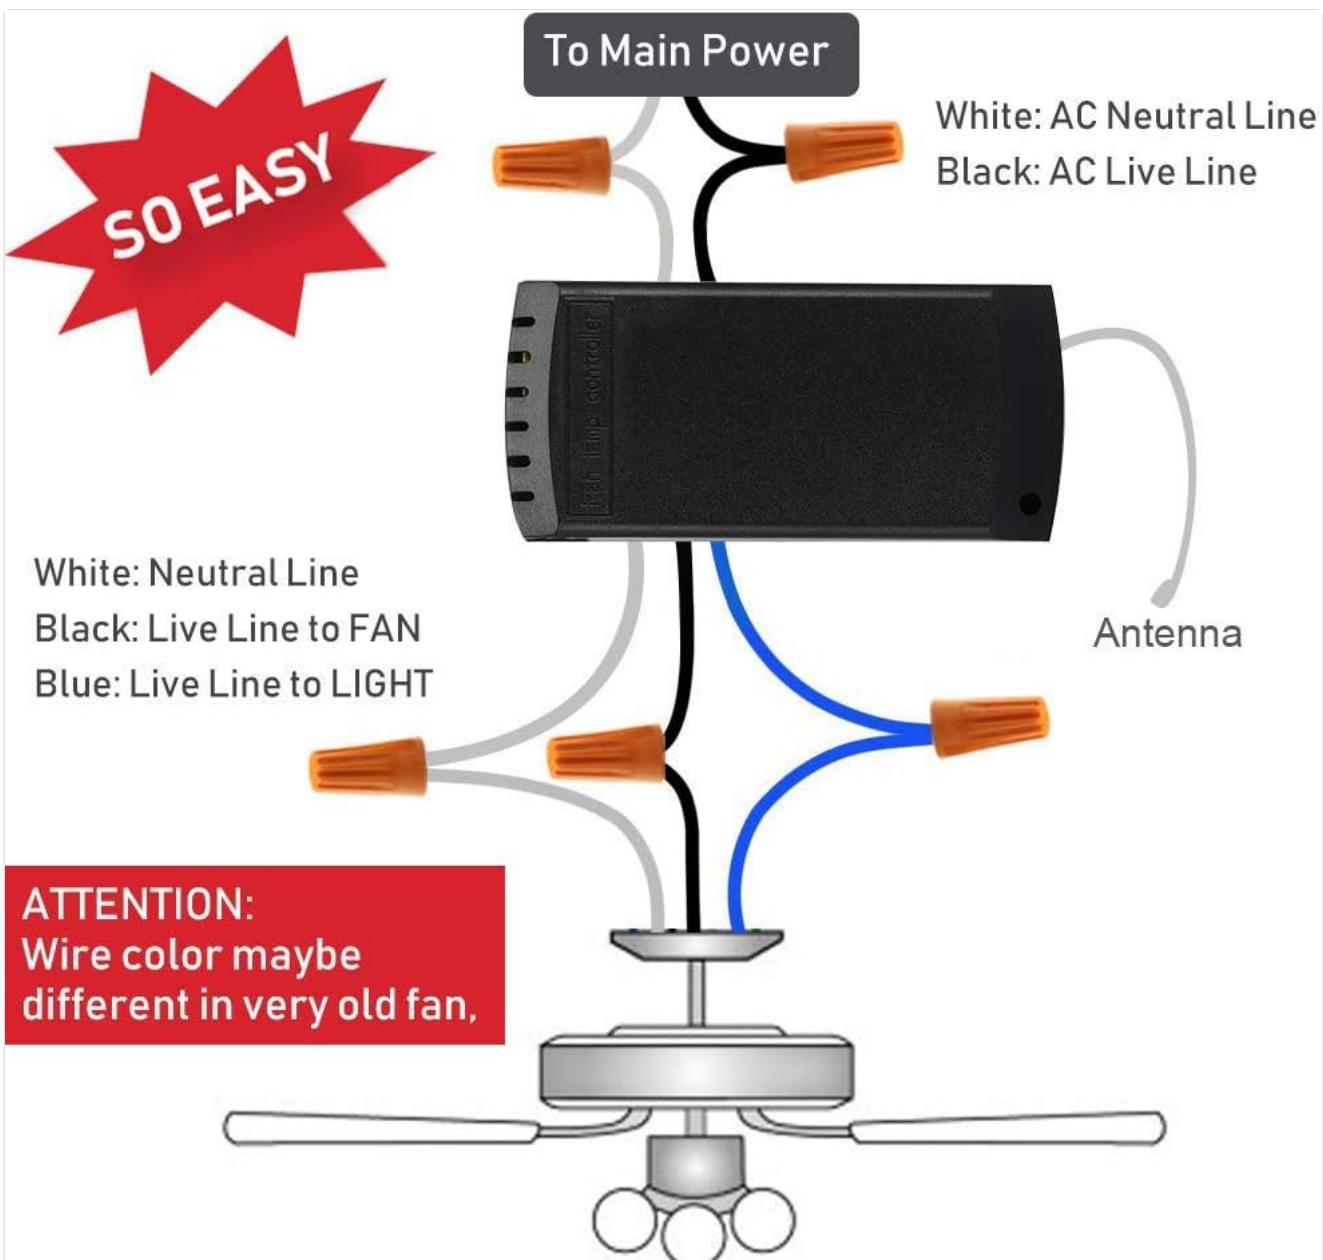


Image 4.2: Simplified wiring diagram for typical installation. Note: Wire colors in older fans may vary.


4.3. Connection Steps

- 1. Identify Wires:** Locate the main power wires (Live and Neutral) and the fan/light wires from your ceiling fan.
- 2. Connect Input Power:** Connect the receiver's input Live (Black) and Neutral (White) wires to your household's main power Live and Neutral wires, respectively. Use wire nuts to secure connections.
- 3. Connect Fan Wires:** Connect the receiver's fan Live (Black) wire to the fan motor's Live wire.
- 4. Connect Light Wires:** Connect the receiver's light Live (Blue) wire to the fan light's Live wire.
- 5. Connect Common Neutral:** Connect the receiver's output Neutral (White) wire to the common Neutral wire of both the fan motor and the light.
- 6. Position Receiver:** Carefully tuck the receiver into the fan canopy, ensuring wires are not pinched.
- 7. Restore Power:** Once all connections are secure and the receiver is safely housed, restore power at the circuit breaker.

Universal Ceiling Fan and Lights Wireless Remote Control Kit




Installation Diagram of Receiver

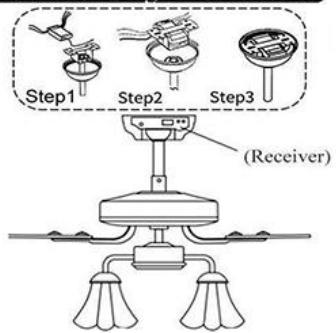

Please make sure there is enough Space for receiver in the canopy of your fan. If the receiver is too big for your fan, you have to install the receiver beside the canopy which is not so beautiful.

Wiring Diagram of Receiver:

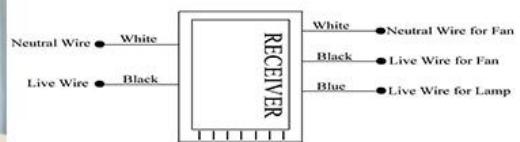

There are labels on the wire so that you can check and fix the cable quite easy. Make sure there are enough space in the canopy. Please refer to the size of the receiver.

Image 4.3: Illustration of receiver placement within the fan canopy.

5. PAIRING INSTRUCTIONS

The remote control and receiver are typically pre-paired from the factory. If re-pairing is necessary or if you need to unpair, follow these steps:

5.1. Pairing the Remote Control

1. Ensure power to the fan is OFF.
2. Turn the power to the fan ON.
3. Within 5 seconds of powering on, simultaneously press and hold the "LIGHT ON/OFF" and "HI" buttons on the remote control.
4. The receiver will emit 3 beeps, indicating successful pairing.



Image 5.1: Remote control pairing process.

5.2. Unpairing the Remote Control

1. Ensure power to the fan is OFF.
2. Turn the power to the fan ON.

3. Within 5 seconds of powering on, simultaneously press and hold the "STOP" and "2H" buttons on the remote control.
4. The receiver will emit a long beep, indicating successful unpairing.



Image 5.2: Remote control unpairing process.

6. OPERATING INSTRUCTIONS

Familiarize yourself with the remote control buttons for optimal use of your ceiling fan and light kit.

Key Description

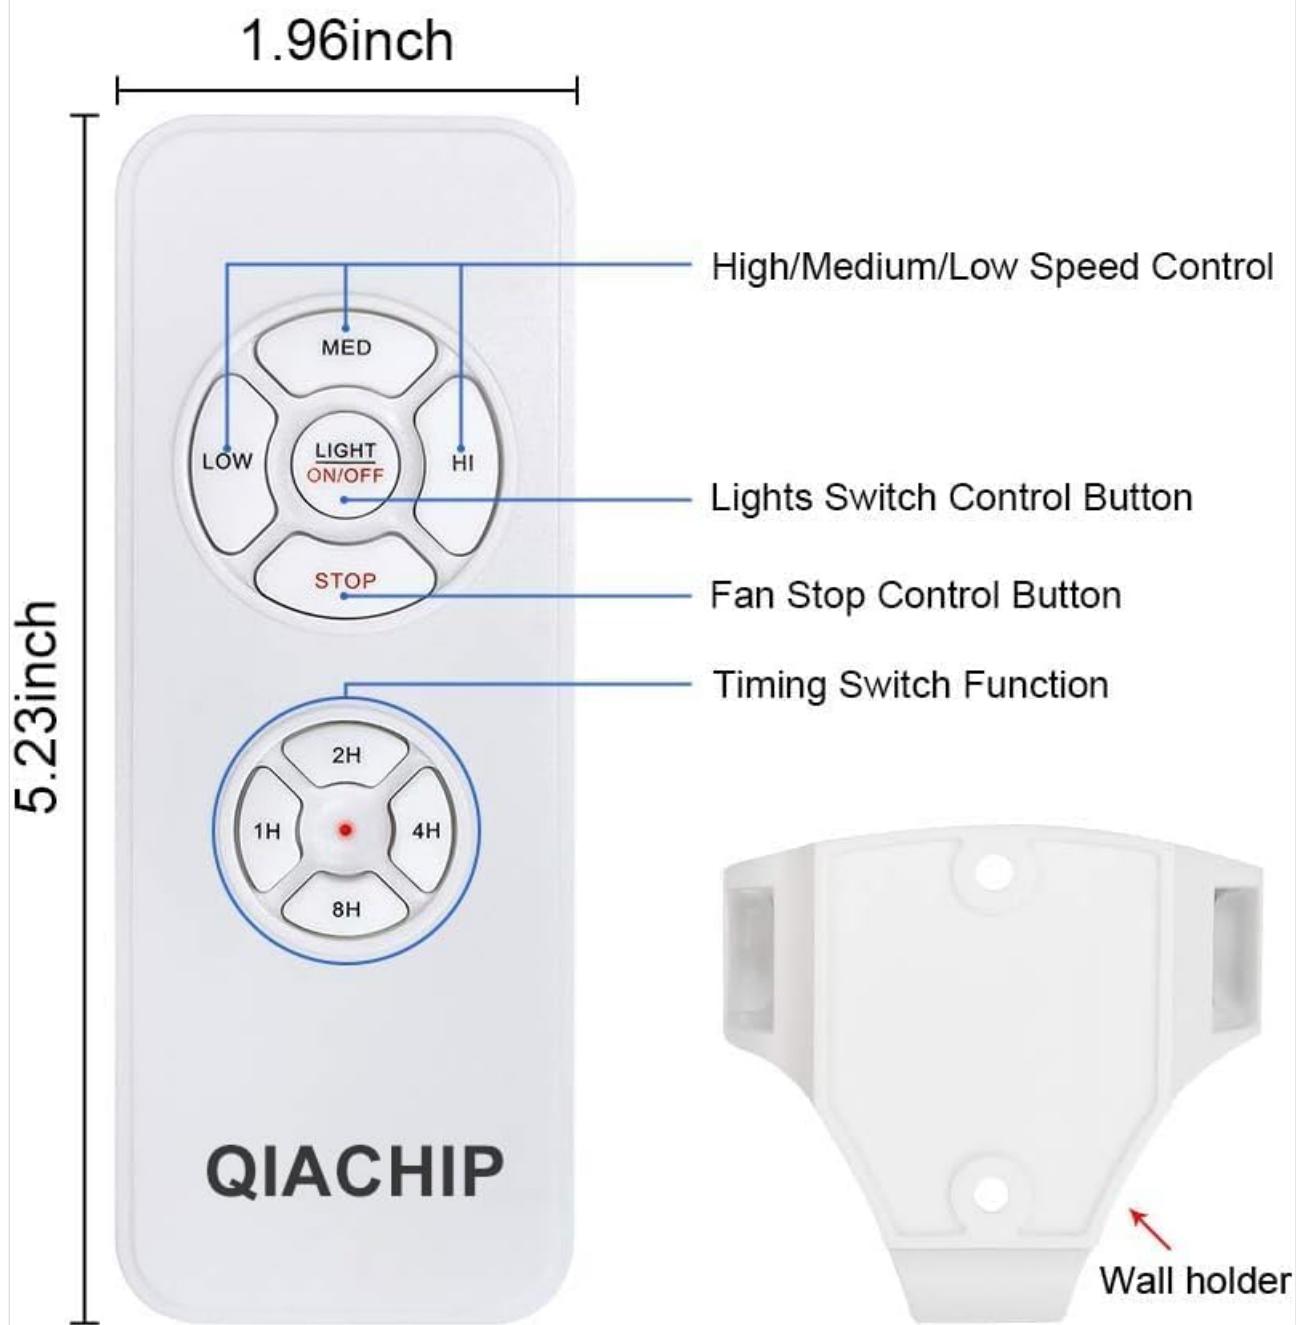


Image 6.1: Remote control key descriptions.

6.1. Fan Control

- **HI:** Sets fan speed to High.
- **MED:** Sets fan speed to Medium.
- **LOW:** Sets fan speed to Low.
- **STOP:** Turns the fan OFF.

6.2. Light Control

- **LIGHT ON/OFF:** Toggles the fan light ON or OFF. (Note: This kit does not support dimming.)

6.3. Timing Function

The timing function allows you to set the fan to automatically turn off after a specified duration.

- **1H:** Sets the fan to turn off after 1 hour.
- **2H:** Sets the fan to turn off after 2 hours.
- **4H:** Sets the fan to turn off after 4 hours.
- **8H:** Sets the fan to turn off after 8 hours.



Timing Switch Function



Image 6.2: Timing function controls for fan and light.

6.4. Mute Function (Buzzer Control)

The receiver emits a beep sound upon receiving a command. You can turn this buzzer ON or OFF.

- **To Turn OFF Buzzer:** Within 5 seconds after power-on, long press the "STOP" button. The buzzer will turn off, and the unit will switch to a non-silent state.
- **To Turn ON Buzzer:** Within 5 seconds after power-on, long press the "STOP" button again. The buzzer will turn on, and the unit will switch to a silent state (meaning it will beep).



Image 6.3: Turning off the buzzer.



Image 6.4: Turning on the buzzer.

7. TROUBLESHOOTING

If you encounter issues with your QIACHIP remote control kit, refer to the following common problems and solutions.

7.1. Fan Operates at Only One Speed

- **Existing Controller:** If your fan originally had an internal controller that could not adjust speed, then this kit will also be unable to adjust speed. Ensure the original fan setup supported multiple speeds.
- **Original Controller Setting:** Verify that the original fan's speed setting (if applicable) was not fixed to a single speed.
- **Compatibility:** There might be a compatibility issue with your specific fan model.

7.2. Remote Controls Multiple Fans Simultaneously

This can occur if multiple receivers are paired to the same remote frequency.

1. **Unpair Unwanted Fan:** First, unpair the remote from the fan you do NOT wish to control. Follow the "Unpairing the Remote Control" steps in Section 5.2 for that specific fan.
2. **Re-pair Desired Fan:** Then, re-pair the remote with the fan you intend to control. Follow the "Pairing the Remote Control" steps in Section 5.1 for the desired fan.

7.3. General Non-Responsiveness

- **Battery Check:** Ensure the remote control batteries (2x AAA, not included) are correctly installed and not depleted.
- **Power Supply:** Verify that the ceiling fan has power.
- **Wiring:** Double-check all wiring connections as per the installation instructions. Ensure connections are secure.
- **Re-pairing:** Attempt to re-pair the remote control with the receiver as described in Section 5.1.

8. SPECIFICATIONS

Feature	Specification
Model Number	FLC-110V
Brand	QIACHIP
Voltage	110 Volts AC
Material	ABS
Receiver Dimensions (L x W x H)	4.56 x 2.12 x 1.1 inches (approx. 11.6 x 5.4 x 2.8 cm)
Remote Dimensions (L x W)	5.23 x 1.96 inches (approx. 13.1 x 5 cm)
Item Weight	6.3 ounces (approx. 178g)
Power Source	AC
Remote Battery Type	2 AAA batteries (not included)
Max Fan Load Power	300W
Max Incandescent Light Load Power	1000W
Max LED/Energy Saving Light Load Power	200W
Capacitor Type	T4+5 μ F (starting 4 μ F/running 5 μ F)
Special Features	New Technology (semiconductor switches), Mute Function



Image 8.1: Dimensions of the remote control and receiver.

Important Note on Capacitors: The kit's running capacitor is 5 μ F. If your existing fan's running capacitor is also 5 μ F, it offers the most compatible performance. A deviation of 1 μ F is nearly perfect. A deviation of 2 μ F may result in a 1-2 step speed difference, requiring adjustment of the fan's capacitance. A deviation of 3 μ F or more may cause significant speed variations, and purchase is not recommended in such cases.

9. MAINTENANCE

The QIACHIP remote control kit requires minimal maintenance.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace AAA batteries in the remote control when its performance diminishes.
- **Environmental Conditions:** Avoid exposing the remote or receiver to extreme temperatures, humidity, or direct sunlight.

10. WARRANTY AND SUPPORT

For any issues or questions regarding your QIACHIP Universal Ceiling Fan and Light Remote Control Kit, please refer to your purchase documentation or contact the seller directly for support and warranty information.

© 2023 QIACHIP. All rights reserved.