

ECONTROLLY Remote-AXD7622

ECONTROLLY AXD7622 Replacement Remote Control User Manual

For Pioneer AV Receivers

1. OVERVIEW

This manual provides instructions for the ECONTROLLY AXD7622 Replacement Remote Control. This remote is designed to function as a direct replacement for original remote controls of various Pioneer AV Receiver models. It offers essential control over your audio/video system without the need for complex programming.

1.1 Key Features

- **Direct Replacement:** No programming or setup required; simply insert batteries and use.
- **Wide Compatibility:** Compatible with numerous Pioneer AV Receiver models, including VSX-921-K, VSX-821-K, HTP-071, VSX-321-K-P, VSX-42, VSX-421-K, SX-319V, SX-319V-K, VSX-321, VSX-321K-P, VSX-420-K, VSX-819H-K, VSX-821, VSX-822-K, VSX-421, VSX-519-V, VSX-522-K, VSX-523, VSX-523-K, VSX-524, VSX-524-K, VSX-819H, VSX-519V-K, VSX-520, VSX-520-K, VSX-521, VSX-521-K, and VSX-522.
- **Durable Construction:** Made from ABS environmental protection material for comfortable handling.
- **Effective Range:** Operates effectively at a transmitting distance of approximately 8-10 meters (26-33 feet).

2. SETUP

2.1 Battery Installation

The ECONTROLLY AXD7622 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Rear view of the remote control showing the battery compartment.

2.2 Initial Use

Once batteries are correctly installed, the remote control is ready for immediate use with compatible Pioneer AV Receivers. No additional programming or synchronization steps are typically required.

3. OPERATING INSTRUCTIONS

The ECONTROLLY AXD7622 remote control provides intuitive access to your Pioneer AV Receiver's primary functions. Point the remote directly at your receiver when operating.



Figure 2: Front view of the remote control with all buttons.

3.1 Basic Functions

- **Power (RECEIVER):** Turns the AV Receiver on or off.
- **Input Select (BD, DVD, TV, CD, DVR/BDR, CD-R, ADAPTER, iPod USB, VIDEO 1, VIDEO 2, TUNER, SIGNAL SEL):** Selects the desired audio/video input source.
- **Volume (+/-):** Adjusts the master volume level.
- **Mute:** Toggles audio mute on/off.
- **Navigation (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **Menu/Setup:** Accesses the receiver's on-screen menu or setup options.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback for connected devices.
- **Audio Modes (AUTO/DIRECT, STEREO, STANDARD, ALC/ADV SURR):** Selects various audio listening modes.
- **Tuner Controls (TUNE +, TUNE -, BAND):** For radio tuning.



Figure 3: Angled view of the remote control.

4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle with care.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed with the proper polarity.
 - Replace the batteries with fresh AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote control and the AV Receiver's infrared sensor. Remove any obstructions.
 - Confirm you are within the effective operating range (8-10 meters).
- **Limited Functionality:**
 - Verify that your Pioneer AV Receiver model is listed as compatible. While this remote supports many models, some specific or advanced functions might vary or require the original remote.
 - Ensure the correct input source is selected on your AV Receiver.
- **Buttons Not Working Consistently:**
 - This could indicate low battery power; replace the batteries.
 - Ensure the buttons are clean and free from debris.

If problems persist after trying these steps, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	Remote-AXD7622
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	0.96 ounces
Batteries Required	2 AAA batteries
Material	ABS Environmental Protection Material
Transmitting Distance	8-10 meters (26-33 feet)
Color	Black

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For specific warranty details regarding your ECONTROLLY AXD7622 Replacement Remote Control, please refer to the product packaging or contact the seller directly. Warranty terms may vary based on purchase location and retailer policies.

7.2 Customer Support

Should you require further assistance, have questions about compatibility, or experience any issues not covered in this manual, please contact the seller or manufacturer's customer support. Have your product model number (AXD7622) and purchase information ready for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question