

## Fricosmos 061414

# Fricosmos 061414 Washbasin Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing the Fricosmos 061414 Washbasin. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new washbasin. Please read these instructions carefully before use and retain them for future reference.

The Fricosmos 061414 is a freestanding washbasin featuring a single-piece basin with an anti-splash rim, overflow, and drain valve. It includes a mixer tap with temperature regulation, a non-timed foot pedal for activation, and integrated accessories such as a soap dispenser, towel dispenser, apron, and waste bin.

## 2. SAFETY INFORMATION

---

- Ensure all installation steps are performed by qualified personnel in accordance with local plumbing and building codes.
- Always turn off the main water supply before beginning any installation or maintenance work.
- Use appropriate tools and safety equipment during installation.
- Do not use abrasive cleaners or harsh chemicals on the stainless steel surface, as this may damage the finish.
- Keep children away from the installation area.

## 3. PACKAGE CONTENTS

---

Verify that all components are present and undamaged before proceeding with installation.

- 1 x Fricosmos 061414 Integrated Washbasin with Foot Pedal
- 1 x Mixer Tap (with temperature regulation capability)
- 1 x Soap Dispenser
- 1 x Towel Dispenser
- 1 x Apron
- 1 x Integrated Waste Bin
- All necessary accessories for installation (hoses, fittings, etc.)

## 4. SETUP AND INSTALLATION

---

The Fricosmos 061414 washbasin is designed for freestanding installation. It requires a water inlet and a drainage connection.

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Inspect for any shipping damage.
2. **Positioning:** Place the washbasin in the desired location, ensuring it is level and stable. Verify that water supply lines and drainage are accessible.
3. **Water Connection:** Connect the hot and cold water supply lines to the mixer tap inlets. Ensure all connections are tight to prevent leaks.
4. **Drainage Connection:** Connect the washbasin's drain valve to your facility's drainage system. Use appropriate seals and ensure a watertight connection.
5. **Accessory Installation:** Install the soap dispenser, towel dispenser, and apron as required. The waste bin is integrated.
6. **Test:** Slowly turn on the main water supply and check all connections for leaks. Test the mixer tap and foot pedal operation.



Image of the Fricosmos 061414 washbasin, showing its rectangular shape, integrated basin, and freestanding design.

## 5. OPERATING INSTRUCTIONS

---

The Fricosmos 061414 washbasin is designed for hygienic and efficient use.

- **Water Activation:** To activate the water flow, press the foot pedal located at the base of the unit. The water will flow as long as the pedal is depressed.
- **Temperature Regulation:** Use the mixer tap to adjust the water temperature to your desired level.
- **Soap Dispenser:** Press the soap dispenser to obtain liquid soap. Refill as needed.

- **Towel Dispenser:** Pull a paper towel from the dispenser. Refill with appropriate paper towels when empty.
- **Waste Bin:** Dispose of used paper towels and other waste in the integrated waste bin. Empty regularly.

## 6. MAINTENANCE AND CARE

---

Regular cleaning and maintenance will ensure the longevity and hygienic performance of your washbasin.

- **Daily Cleaning:** Clean the stainless steel surfaces with a soft cloth, mild soap, and warm water. Wipe dry immediately to prevent water spots.
- **Avoid Abrasives:** Do not use abrasive sponges, steel wool, or harsh chemical cleaners, as these can scratch or damage the brushed stainless steel finish.
- **Drain Maintenance:** Periodically check the drain for blockages and clean as necessary.
- **Refilling Dispensers:** Ensure the soap and towel dispensers are refilled regularly to maintain functionality.
- **Waste Bin:** Empty the integrated waste bin frequently to maintain hygiene.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Fricosmos 061414 washbasin, refer to the following common problems and solutions:

- **No Water Flow:**
  - Check if the main water supply is turned on.
  - Ensure the foot pedal is fully depressed.
  - Inspect water supply lines for kinks or blockages.
- **Leaking Connections:**
  - Turn off the water supply immediately.
  - Tighten all connections. If leaks persist, replace seals or consult a plumber.
- **Slow Drainage:**
  - Check the drain for blockages (e.g., debris, soap residue).
  - Clean the drain valve and trap.
- **Water Temperature Issues:**
  - Verify that both hot and cold water supplies are active.
  - Adjust the mixer tap settings.

For issues not covered here, please contact customer support.

## 8. SPECIFICATIONS

---

|              |                 |
|--------------|-----------------|
| Brand        | Fricosmos       |
| Model Number | 061414          |
| Color        | Grey            |
| Material     | Stainless Steel |

|                                 |                |
|---------------------------------|----------------|
| Style                           | Modern         |
| Installation Type               | Freestanding   |
| Shape                           | Rectangular    |
| Drain Type                      | Grille         |
| Finish                          | Brushed        |
| Global Trade Item Number (GTIN) | 08435543240231 |

## 9. WARRANTY AND SUPPORT

**Warranty Information:** This product does not include a manufacturer's warranty.

**Customer Support:** For further assistance, technical support, or inquiries regarding your Fricosmos 061414 washbasin, please contact your retailer or the manufacturer directly. Refer to your purchase documentation for contact details.

© 2023 Fricosmos. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

