



[Manuals.plus](#) /

> [Driini](#) /

> Driini Wooden Analog Desktop Clock Instruction Manual

## Driini 7426851503430

# Driini Wooden Analog Desktop Clock Instruction Manual

Model: 7426851503430

Brand: Driini

## 1. INTRODUCTION

Welcome to the instruction manual for your new Driini Wooden Analog Desktop Clock. This manual provides essential information for setting up, operating, and maintaining your clock to ensure long-lasting performance and enjoyment.

### Key Features:

- **Silent Sweep Movement:** Enjoy a peaceful environment with the clock's non-ticking, silent quartz movement.
- **Natural Pinewood Construction:** Crafted from 100% natural pinewood, offering a durable and aesthetically pleasing design.
- **Compact & Versatile:** At 4.3 inches across, its compact size fits perfectly on desks, nightstands, mantels, or shelves.
- **Easy-to-Read Display:** Features laser-engraved numbers for clear and effortless time reading.
- **Simple Battery Operation:** Powered by a single AA battery (not included) for convenient and cable-free placement.




Figure 1: Driini Wooden Analog Desktop Clock (Dark Brown) and other available colors.

## 2. SETUP

---

Setting up your Driini clock is a straightforward process. Please follow these steps:

1. **Remove the Back Cover:** Gently remove the wooden back cover of the clock to access the battery compartment.
2. **Install Battery:** Insert one AA battery (not included) into the battery compartment. Ensure the positive (+) end of the battery is inserted first, aligning with the indicator inside the compartment.
3. **Set the Time:** Locate the setting knob on the clock mechanism. Gently turn this knob to move the hour and minute hands to the correct time.
4. **Replace Back Cover:** Once the time is set, securely replace the wooden back cover.

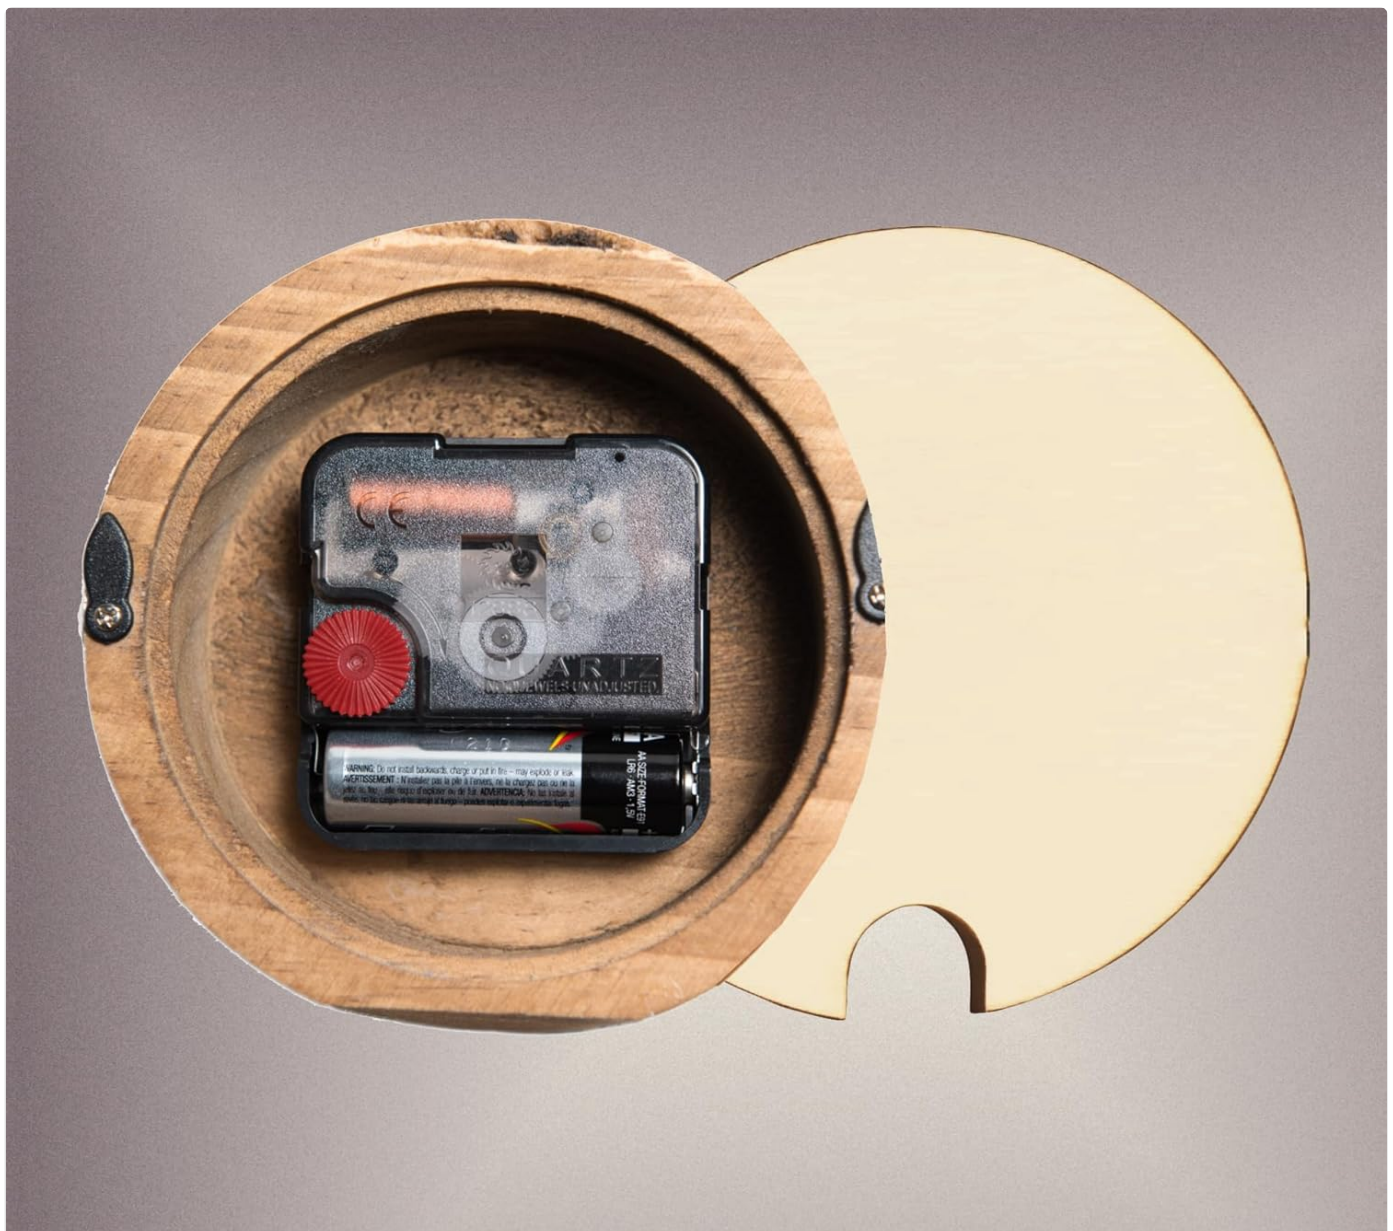

## Simple Setup

Remove the wooden back cover, insert one AA battery (not included) and turn the adjustment knob to set the time.

Figure 2: Battery compartment and time setting mechanism.

Your browser does not support the video tag.

Video 1: Unboxing and setup guide for the Driini Pinewood Clock, demonstrating battery installation and time setting.

## 3. OPERATING INSTRUCTIONS

Your Driini Wooden Analog Desktop Clock is designed for simple and reliable timekeeping.

- **Silent Operation:** The clock features a silent sweep quartz movement, which means the second hand moves continuously without any audible ticking sound. This makes it ideal for bedrooms, offices, or any space where quiet is desired.
- **Time Display:** The clock displays time using traditional hour, minute, and second hands.
- **No Alarm Function:** This model is a decorative analog clock and does not include an alarm function.



## Form and Function

Pinewood frame with real oak hour and minute hands.

Figure 3: The clock in a typical home setting.

## 4. MAINTENANCE

Proper care and maintenance will ensure the longevity and accurate performance of your clock.

- **Cleaning:** To clean the clock, wipe the wooden body and clock face with a soft, dry, lint-free cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the wood finish and internal components.
- **Battery Replacement:** Replace the AA battery annually, or immediately if you notice the clock slowing down or stopping. Always use a fresh, high-quality AA battery for optimal performance.
- **Placement:** Place the clock on a stable, flat surface to prevent it from falling. Avoid placing it in direct sunlight, near heat sources, or in areas with extreme temperature fluctuations or high humidity, as these conditions can affect the wood and the clock mechanism.
- **Handling:** Handle the clock with care. Avoid dropping it or subjecting it to strong impacts, which can damage the internal mechanism or the wooden casing.



**Match any Mood**

**4 distinct colors that effortlessly blend with your home's décor.**

Figure 4: Available color variations of the clock.

## 5. TROUBLESHOOTING

If you encounter any issues with your Driini clock, please refer to the following troubleshooting guide:

Problem	Possible Cause / Solution
Clock is not running or stops intermittently.	Ensure a fresh AA battery is correctly inserted with the positive (+) end first. Replace the battery with a new one.
Hands are loose or not moving correctly.	Gently adjust the hands using the setting knob on the back of the clock. Avoid forcing the hands directly. If the issue persists after adjusting, the internal mechanism may be damaged.
Time is inaccurate.	Ensure the battery is fresh. A weak battery can affect the clock's precision. If the issue persists with a new battery, the quartz movement may require service.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Driini
Model Number	7426851503430

Feature	Detail
Color	Dark Brown (as per current product variant)
Display Type	Analog
Power Source	1 x AA Battery (not included)
Movement Type	Quartz (Silent Sweep)
Product Dimensions	4.3"W x 4.3"H (10.9 cm x 10.9 cm)
Material	Premium Pinewood with Solid Oak Hands
Item Weight	5.6 ounces (0.16 Kilograms)
Indoor/Outdoor Usage	Indoor Only

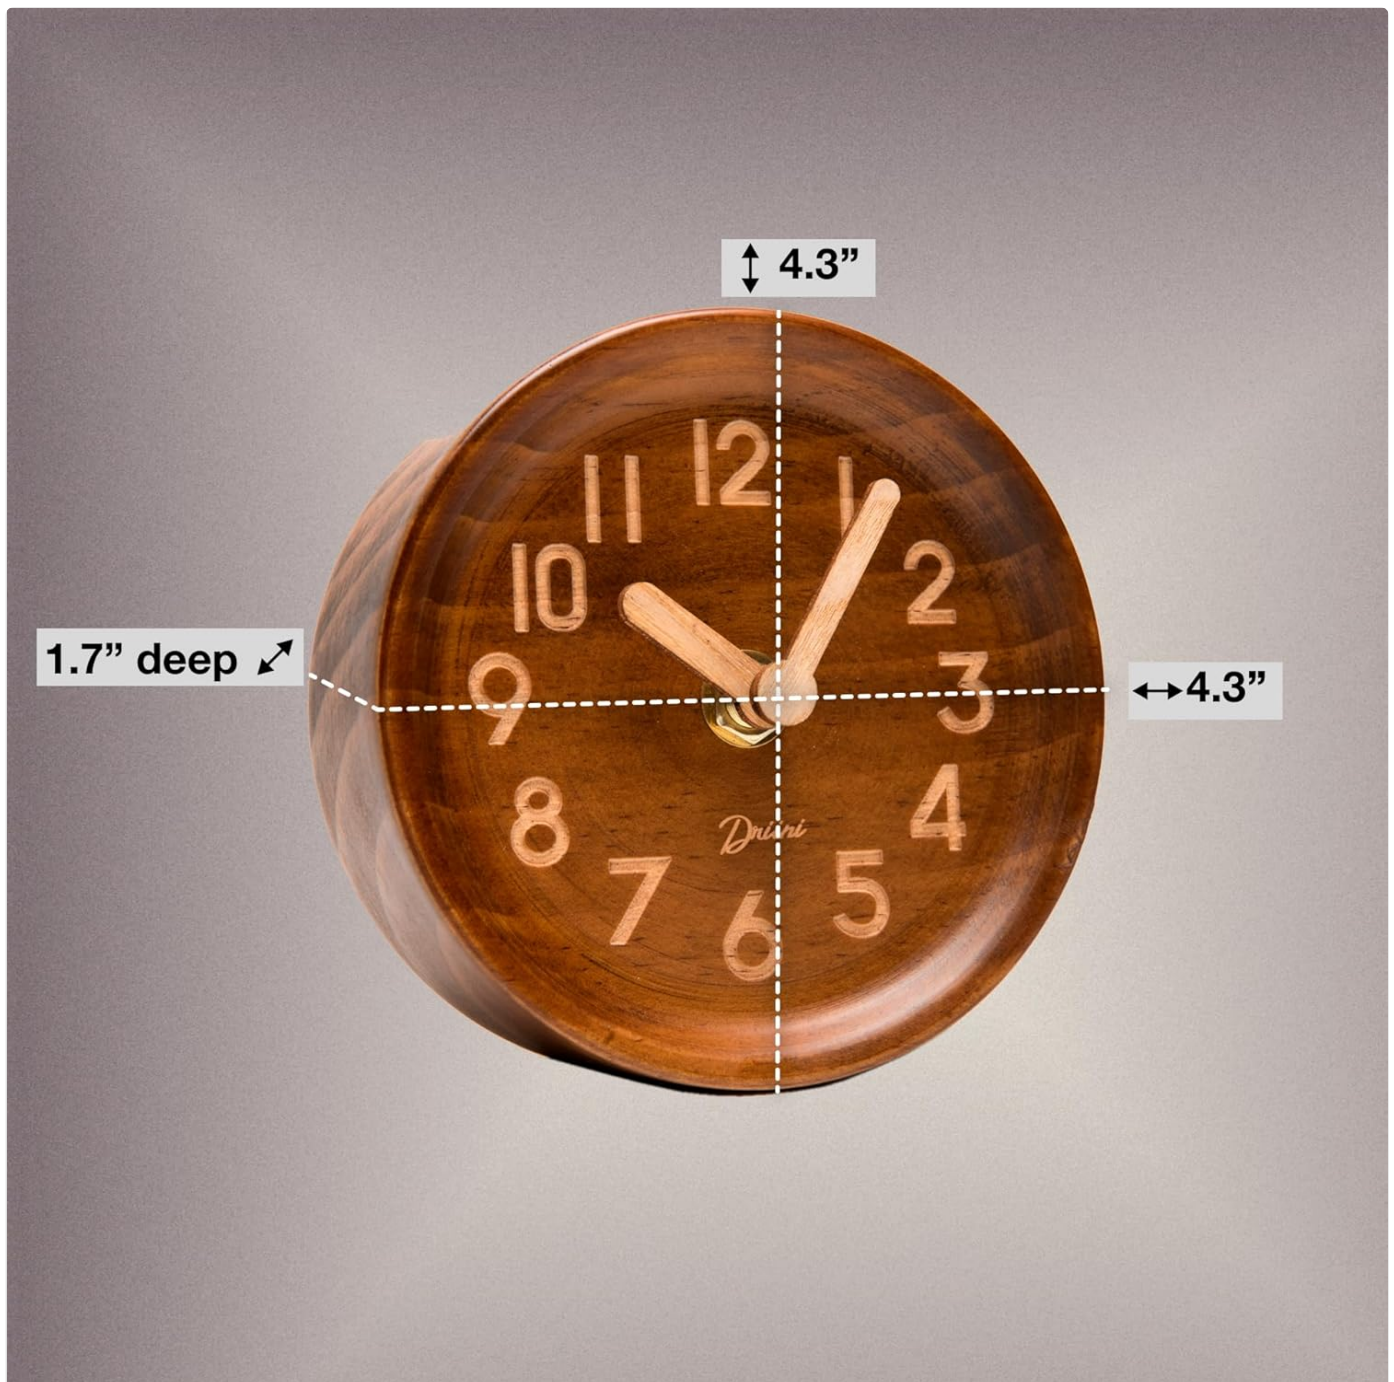


Figure 5: Product Dimensions.

## 7. WARRANTY AND SUPPORT

---

Driini is committed to your complete satisfaction with our products. While specific warranty details are not included in this manual, please retain your proof of purchase.

For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided at the point of purchase or visit the official Driini website for customer service details.

Your browser does not support the video tag.

Video 2: Promotional video showcasing the Driini Pinewood Desk Clock's features and design.