



Manuals.plus /

› Skip Hop /

› Skip Hop Tummy Time Mat, 3-in-1 Activity Baby Play Gym, Age 0+, Farmstand Grow & Play, Green Activity Gym 1 Count (Pack of 1)

Skip Hop 307075

Skip Hop Farmstand Grow & Play Activity Gym Instruction Manual

Model: 307075

Brand: Skip Hop

PRODUCT OVERVIEW

The Skip Hop Farmstand Grow & Play Activity Gym is a versatile 3-in-1 play space designed to stimulate your baby's senses and support developmental milestones from birth onwards. It features a soft playmat with engaging farm-themed graphics, numbers, and various textures. The unique design allows for overhead play, tummy time, and seated play, adapting as your child grows. The removable arches can also be converted into a growth chart for long-term use.



Image: The complete Farmstand Grow & Play Activity Gym, showcasing the soft playmat, overhead arches, and hanging toys.

KEY FEATURES

- **3 Ways to Play:** Offers overhead play, tummy time, and seated play, suitable for ages 0+. Removable arches convert to a growth chart.
- **17+ Developmental Activities:** Soft playmat with fold-up sides for an enclosed space, featuring a pocket for interactive play and various textures.
- **Stimulates Baby's Senses:** Vibrant farm graphics, cheerful numbers, and a variety of textures and sounds encourage exploration and sensory development.
- **Fun and Educational Hanging Toys:** Five engaging toys including a rattle, squeaker, carrot with tactile ribbons, and a musical bunny with a carrot teether toy. These promote fine motor skills,

auditory development, and tactile exploration.

- **Convenient and Stylish Design:** PVC-free and phthalate-free materials ensure a sustainable play environment. The artwork integrates seamlessly into nursery decor.



Image: A detailed view of the five detachable hanging toys, each designed with unique textures and features for sensory engagement.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all parts listed in the product manual are present: playmat, two arches, and five hanging toys.
2. **Lay Out Playmat:** Unfold the soft playmat on a clean, flat surface.
3. **Attach Arches:** Insert the ends of the two arches into the designated slots on the playmat. Secure them firmly according to the instructions provided on the arch connectors. The arches should cross over the center of the mat.
4. **Attach Hanging Toys:** Clip or tie the five hanging toys to the loops on the arches. Position them at varying heights to encourage reaching and batting.
5. **Optional: Fold Up Sides:** For an enclosed play space, fold up the sides of the playmat and secure them using the attached fasteners.
6. **Insert Watermelon Pillow:** Place the watermelon wedge pillow on the mat as a prop for tummy time

or seated play.



Image: Various configurations of the play gym, demonstrating how the sides can be folded up for an enclosed space or laid flat.

OPERATING INSTRUCTIONS (PLAY MODES)

Stage 1: Overhead Play (0+ Months)

For newborns and infants, lay your baby on their back under the arches. The hanging toys encourage visual tracking, reaching, and batting, promoting early motor skills and hand-eye coordination.



Image: A baby engaging in overhead play, interacting with the hanging toys from a supine position.

Stage 2: Tummy Time (3+ Months)

Place your baby on their tummy on the mat, using the watermelon wedge pillow for support if needed. Encourage them to lift their head and engage with the mat's textures, mirror, and the lower hanging toys. This strengthens neck and core muscles.

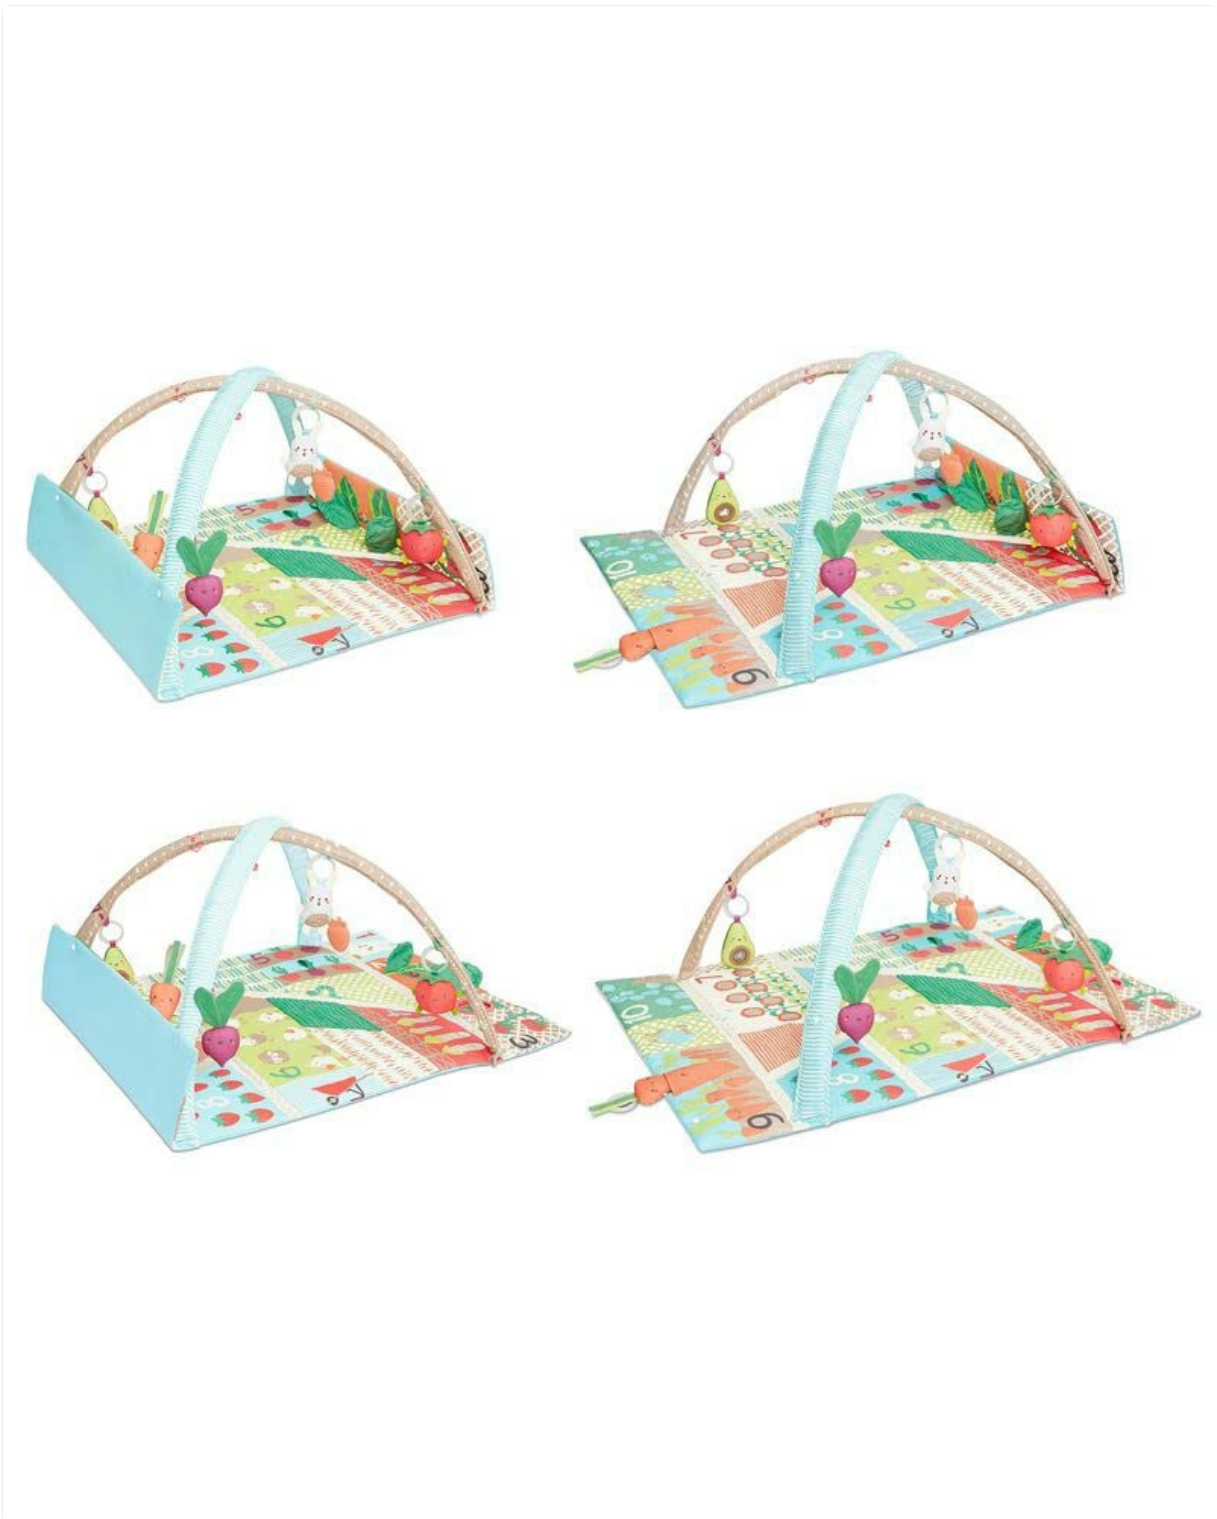


Image: A baby enjoying tummy time on the playmat, supported by the watermelon pillow.

Stage 3: Seated Play (6+ Months)

As your baby learns to sit, they can interact with the mat and toys from a seated position. The various textures, crinkly leaves, and pockets on the mat provide continued sensory exploration.

Growth Chart Conversion

The arches of the activity gym are designed to convert into a growth chart. Detach the arches from the playmat. The arches feature measurement markings, allowing you to track your child's height as they grow. This can be hung on a wall or laid flat.



Image: The detachable arch repurposed as a growth chart, showing a child's height being measured.

MAINTENANCE AND CARE

- **Activity Mat & Pillow:** Machine wash cold, gentle cycle. Tumble dry low. Do not bleach. Do not iron.
- **Toys and Arches:** Spot clean only with a damp cloth and mild soap. Air dry thoroughly. Do not immerse in water.
- **General Cleaning:** Regularly wipe down plastic components with a damp cloth. Ensure all parts are dry before storage.
- **Storage:** Store in a clean, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

If you encounter any issues with your Skip Hop Farmstand Grow & Play Activity Gym, please refer to the following common solutions:

- **Arches Not Standing Firmly:** Ensure that both ends of each arch are fully inserted and securely fastened into their respective slots on the playmat. Check for any obstructions.
- **Toys Not Attaching:** Verify that the clips or ties on the toys are correctly attached to the loops on the arches. Some toys may have specific attachment points.

- **Musical Toy Not Working:** Check if the musical toy requires batteries. If so, ensure they are correctly installed and not depleted. Replace batteries if necessary (2 LR44 batteries required, included).
- **General Instability:** Ensure the playmat is laid on a flat, stable surface. Avoid placing it on uneven ground or soft bedding that could compromise stability.

For persistent issues or further assistance, please contact Skip Hop customer support.

SPECIFICATIONS

| Attribute | Detail |
|--------------------|---|
| Product Dimensions | 32 x 19 x 46 inches |
| Item Model Number | 307075 |
| Batteries Required | Yes (2 LR44 batteries, included) |
| Material Type | 100% Polyester; PP |
| Material Free | PVC-free, Phthalate-free |
| Item Weight | 2.05 pounds |
| Target Gender | Unisex |
| Care Instructions | Activity Mat & Pillow: Machine wash, tumble dry; Toys and Arches: Spot clean only |

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please visit the official Skip Hop website or contact their customer service department directly. Keep your proof of purchase for any warranty claims.

You can find more information and contact details by visiting theSkip Hop Store on Amazon.