

Aikmi T-339

Aikmi T-339 Kids Walkie Talkies Instruction Manual

Model: T-339 | Brand: Aikmi

1. INTRODUCTION

Welcome to your new Aikmi T-339 Kids Walkie Talkies. This manual provides detailed instructions for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.

1.1 What's in the Box

- 2 x Kids Walkie Talkies
- 2 x Paracord Bracelets (Survival Bracelets)
- 2 x Lanyards
- 1 x User Manual

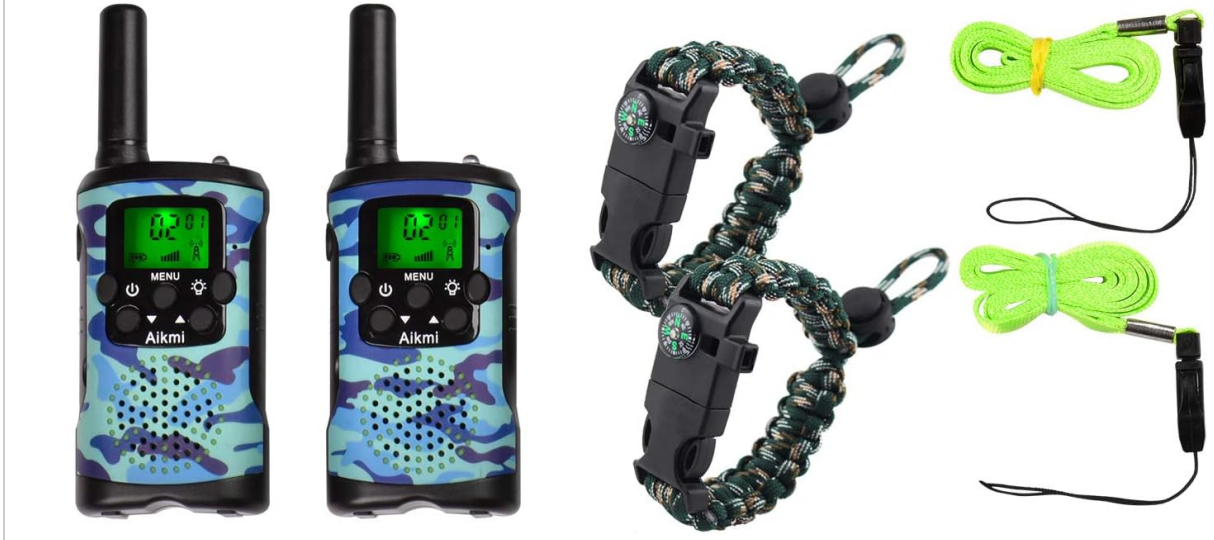 
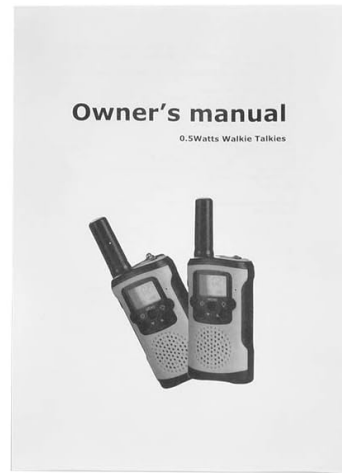 


Image: Package Contents

2. PRODUCT OVERVIEW

The Aikmi T-339 walkie talkies are designed for clear communication, featuring 22 channels, a built-in flashlight, VOX hands-free operation, and a keypad lock function. They offer a communication range of up to 3 miles in optimal conditions.

2.1 Components



Image: Walkie Talkie Components Diagram

- **Antenna:** For transmitting and receiving signals.
- **Light:** Built-in flashlight for illumination.
- **Earphone Jack:** For connecting an external earphone (not included).
- **Microphone:** For speaking into the device.
- **LCD Screen:** Displays channel, volume, battery status, and other indicators.
- **PTT (Push-to-Talk) Button:** Press and hold to transmit, release to receive.
- **Light On/Off Button:** Activates or deactivates the flashlight.
- **Power On/Off Button:** Turns the device on or off.
- **Up Button:** Navigates menus and increases values.
- **MENU Button:** Accesses menu options.
- **Down Button:** Navigates menus and decreases values.
- **Speaker:** For listening to incoming transmissions.

3. SETUP

3.1 Battery Installation

Each Aikmi T-339 walkie talkie requires 3 AAA batteries (not included) for operation. Ensure correct polarity when inserting batteries.

1. Locate the battery compartment on the back of the walkie talkie.
2. Press down on the clip and slide the back cover downwards to open the compartment.
3. Insert 3 AAA batteries, matching the (+) and (-) symbols inside the compartment.
4. Replace the back cover by sliding it upwards until it clicks into place.



Image: Battery Compartment

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on: Press and hold the **Power On/Off Button** until the LCD screen illuminates.
- To power off: Press and hold the **Power On/Off Button** until the LCD screen turns off.

4.2 Adjusting Volume

- Press the **Up Button** to increase the volume.
- Press the **Down Button** to decrease the volume.

4.3 Channel Selection

The walkie talkies operate on 22 available channels. For communication, both walkie talkies must be set to the same channel.

1. Press the **MENU Button** once. The channel number on the LCD screen will flash.
2. Use the **Up Button** or **Down Button** to select your desired channel (1-22).
3. Press the **MENU Button** again or wait a few seconds for the selection to be confirmed.

4.4 Transmitting and Receiving

- To transmit: Press and hold the **PTT Button**. Speak clearly into the microphone.
- To receive: Release the **PTT Button**. The walkie talkie will automatically receive transmissions on the selected channel.

4.5 VOX (Voice Operated Exchange) Function

The VOX function allows for hands-free communication. When activated, the walkie talkie will automatically transmit when it detects your voice.

1. Press the **MENU Button** multiple times until the VOX icon (usually 'VOX') appears on the LCD screen and flashes.
2. Use the **Up Button** or **Down Button** to select the VOX sensitivity level (e.g., OF for off, 1-3 for sensitivity levels).
3. Press the **MENU Button** again or wait a few seconds to confirm.

4.6 Flashlight Function

- To turn on the flashlight: Press the **Light On/Off Button**.
- To turn off the flashlight: Press the **Light On/Off Button** again.

4.7 Keypad Lock

The keypad lock prevents accidental changes to settings.

- To lock the keypad: Press and hold the **MENU Button** until a key icon appears on the LCD screen.
- To unlock the keypad: Press and hold the **MENU Button** again until the key icon disappears.

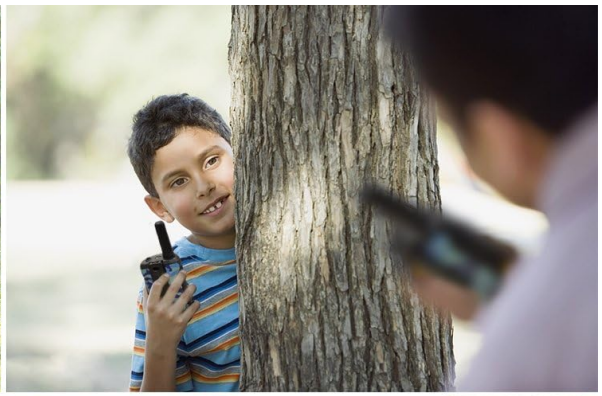 


Image: Walkie Talkies in Use

5. MAINTENANCE

- **Cleaning:** Wipe the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the devices in a cool, dry place.
- **Battery Care:** Replace all batteries at the same time. Do not mix old and new batteries or different types of batteries.
- **Water Resistance:** The product is indicated as waterproof. However, avoid submerging the device in water or exposing it to heavy rain for prolonged periods to ensure longevity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly installed.	Replace batteries or check polarity.

Problem	Possible Cause	Solution
Cannot transmit or receive	Different channels selected; out of range; low battery.	Ensure both walkie talkies are on the same channel. Move closer. Replace batteries.
Unclear sound or static	Interference; out of range; low battery.	Move to a different location to avoid interference. Move closer. Replace batteries.
Keypad is unresponsive	Keypad lock is activated.	Press and hold the MENU button to unlock the keypad.

7. SPECIFICATIONS

Feature	Detail
Model Number	T-339
Brand	Aikmi
Number of Channels	22
Talking Range Maximum	3 Miles (approx. 4.8 km)
Frequency Range	462-467 MHz
Power Source	3 AAA batteries (per unit)
Product Dimensions	2 x 1 x 5 inches (approx. 5.08 x 2.54 x 12.7 cm)
Item Weight	6.3 ounces (approx. 178.6 g)
Water Resistance Level	Waterproof
Recommended Age	4 years and up

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This product comes with a manufacturer warranty for 2 years from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please contact Aikmi customer support. Refer to the packaging or the official Aikmi website for the most current contact information.

