

[Manuals.plus](#) /

> [Aikmi](#) /

> Aikmi Kids Walkie Talkies User Manual

## Aikmi T-339

# Aikmi Kids Walkie Talkies User Manual

MODEL: T-339

Brand: Aikmi



Image: Aikmi Kids Walkie Talkies with included accessories.

## Introduction

Welcome to the user manual for your new Aikmi Kids Walkie Talkies. These durable and easy-to-use two-way radios are designed to provide clear communication and endless fun for children during outdoor adventures, camping, games, and more. With a long range and multiple channels, they are perfect for staying connected while exploring.




Image: Children enjoying outdoor activities with their walkie talkies.

## What's in the Box

- 2 x Aikmi Kids Walkie Talkies (Green Camo)
- 2 x Paracord Bracelets with Compass and Whistle
- 2 x Straps/Lanyards
- 1 x User Manual



 Old packaging



New packaging

*The content of the kids walkie talkies are the same as before, but the outer packaging has changed.*



*And cardboard boxes are recyclable, which is more conducive to environmental protection.*

PLEASE FEEL FREE TO CONTACT US IF YOU HAVE ANY QUESTIONS.



Image: All items included in the product package.

## Setup

- Battery Installation:** Each walkie talkie requires 3 AAA batteries (not included).
  - Remove the belt clip by pushing up on the release tab and sliding it off.
  - Gently pry open the battery compartment cover on the back of the unit.
  - Insert 3 AAA batteries, ensuring correct polarity (+/-).
  - Replace the battery compartment cover and reattach the belt clip.
- Attaching Lanyard:** If desired, thread the lanyard through the small loop located near the top of the walkie talkie, often underneath where the belt clip attaches.

GREAT GIFT FOR THAT  
ADVENTUROUS KIDS



RANGE UP TO  
**3 MILES**

**Handheld**  
Walkie talkie

Image: Detailed view of battery installation and belt clip attachment.

Your browser does not support the video tag.

Video: Official product video demonstrating setup and features of the walkie talkies.

## Operating Instructions

- Power On/Off:** Press and hold the **Power button** (*power icon*) for a few seconds to turn the unit on or off. The LCD screen will illuminate.
- Adjust Volume:** Use the **Up** (*up arrow*) and **Down** (*down arrow*) buttons to adjust the speaker volume.
- Change Channel:** Press the **MENU button** to enter channel selection mode. Use the **Up** and **Down** buttons to select one of the 22 available channels. Press **MENU** again to confirm your selection. Both walkie talkies must be on the same channel to communicate.
- Push-to-Talk (PTT):** To transmit your voice, press and hold the large **PTT button** on the side of the walkie talkie. Speak clearly into the microphone (located near the top of the unit). Release the PTT button to listen.
- Flashlight:** Press the **Light button** (*lightbulb icon*) to turn the built-in flashlight on or off.
- VOX Hands-Free:** The walkie talkies support VOX (Voice Operated Exchange) for hands-free

communication. Refer to the detailed user manual for activation and sensitivity settings.

7. **Key Lock:** To prevent accidental changes to settings, press and hold the **MENU button** until the key lock icon appears on the screen. Repeat to unlock.



Image: Diagram of walkie talkie controls and features.

## Maintenance

- **Cleaning:** Wipe the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Remove batteries if the units will not be used for an extended period to prevent leakage and damage.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.

## Troubleshooting

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
No power	Check if batteries are inserted correctly and are not depleted. Replace with fresh AAA batteries.
Cannot communicate with other unit	Ensure both walkie talkies are on the same channel. Check if the PTT button is being held down correctly during transmission. Ensure units are within range (up to 3 miles in open areas).
Poor sound quality / Static	Adjust volume. Change to a different channel to avoid interference. Ensure units are within optimal range and not obstructed by large structures.
Buttons unresponsive	Check if the Key Lock function is activated. Deactivate by holding the MENU button.

## Specifications

---

**Model Number:** T-339

**Brand:** Aikmi

**Number of Channels:** 22

**Talking Range Maximum:** 3 Miles (approximate, varies with terrain)

**Frequency Range:** 462.5625 MHz (UHF)

**Power Source:** 3 AAA batteries per unit (not included)

**Product Dimensions:** 2 x 1 x 5 inches; 8 ounces (per unit)

**Recommended Age:** 4 years and up

**Special Features:** Long Range, Lightweight, Built-in Flashlight, VOX Hands-Free, Key Lock

**Water Resistance Level:** Waterproof (Note: This is stated in specifications, but often for toys, it means splash-proof, not submersible. User discretion advised.)

## Warranty & Support

---

**Warranty:** Manufacturer warranty for 2 years from date of purchase.

**Support:** For any questions, troubleshooting assistance, or warranty claims, please refer to the contact information provided with your purchase or visit the official Aikmi website for customer support.

## Safety Information

---

- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years.
- Always supervise children during use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of batteries properly according to local regulations.