

[Manuals.plus](#) /

› [LOVEBOXXX](#) /

› LoveBoxxx Romantic Box for Couples - Instruction Manual

LOVEBOXXX E32583

LoveBoxxx Romantic Box for Couples - Instruction Manual

Brand: LOVEBOXXX | Model: E32583

INTRODUCTION

This instruction manual provides essential information for the safe and effective use, maintenance, and care of your LoveBoxxx Romantic Box for Couples. Please read this manual thoroughly before first use and retain it for future reference.

The LoveBoxxx Romantic Box for Couples is a set of adult toys designed for intimate experiences. The components are crafted from high-quality, comfortable, and medically safe plastic materials.

PRODUCT COMPONENTS

Your LoveBoxxx Romantic Box for Couples includes the following items:

- Clitoral Vibrator
- Vibrating Egg with Remote Control
- Vibrating Cock Ring
- Tickler
- Sexual Dice
- Luxurious Gift Box (for storage and presentation)
- Storage Bag (for discreet storage of toys)



Image: Overview of the LoveBoxxx Romantic Box contents, including the clitoral vibrator, vibrating egg with remote, vibrating cock ring, tickler, sexual dice, gift box, and storage bag.

SETUP AND FIRST USE

1. **Unpack Components:** Carefully remove all items from the gift box.
2. **Initial Cleaning:** Before first use, clean all toys thoroughly with warm water and a mild, toy-safe soap. Rinse completely and allow to air dry. Refer to the "Maintenance and Care" section for detailed cleaning instructions.
3. **Charging (if applicable):** For rechargeable vibrating toys, connect them to their respective charging cables. Ensure the charging indicator light (if present) is active. Charge fully before first use. Refer to individual toy instructions for specific charging times.
4. **Lubrication:** For optimal comfort and experience, it is recommended to use a water-based lubricant with all toys.



Image: The vibrating egg, which may require charging before use.

OPERATING INSTRUCTIONS

Clitoral Vibrator



Image: The clitoral vibrator.

- **Power On/Off:** Press and hold the power button (usually located at the base) for 2-3 seconds to turn the vibrator on or off.
- **Adjust Intensity:** Short presses of the power button or dedicated intensity buttons (if present) will cycle through vibration patterns or intensity levels.

Vibrating Egg with Remote Control



Image: The remote control for the vibrating egg.

- **Egg Power:** Ensure the vibrating egg is charged. Press and hold the power button on the egg itself (if available) or activate via the remote.
- **Remote Control:**
 - **Power Button:** Press and hold the power button on the remote to turn the egg on or off.
 - **Intensity/Pattern Buttons:** Use the '+' and '-' buttons or other designated buttons to adjust vibration intensity or cycle through patterns.

Vibrating Cock Ring



Image: The vibrating cock ring.

- **Activation:** Locate the power button on the cock ring. Press to turn on and cycle through vibration modes.
- **Placement:** Position the ring comfortably at the base of the penis.

Tickler



Image: The tickler.

- The tickler is a non-electronic accessory. Use it to explore sensations on various parts of the body.

Sexual Dice



Image: The sexual dice.

- The sexual dice are a game accessory. Roll the dice to determine actions or positions for playful interaction.

MAINTENANCE AND CARE

1. **Cleaning:** After each use, clean all toys with warm water and a mild, toy-safe soap. Rinse thoroughly to remove all soap residue. Avoid harsh chemicals or abrasive cleaners.
2. **Drying:** Pat dry with a lint-free cloth or allow to air dry completely before storage.
3. **Storage:** Store toys in a clean, dry place, away from direct sunlight and extreme temperatures. Use the provided storage bag for discreet and hygienic storage.
4. **Lubricants:** Only use water-based lubricants with these toys. Oil-based lubricants can damage the material over time.
5. **Charging:** Rechargeable toys should be charged as needed. Do not overcharge. Disconnect from charger once fully charged.



Image: The provided storage bag for discreet and hygienic storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vibrating toy does not turn on.	Battery is depleted.	Charge the toy fully using the provided charging cable.

Problem	Possible Cause	Solution
Vibrating toy stops working during use.	Battery is low.	Recharge the toy.
Remote control not responding.	Remote battery depleted or not paired.	Ensure the remote has power (if applicable). Re-pair the remote with the egg according to specific instructions (if pairing is required).
Reduced vibration intensity.	Low battery.	Charge the toy.
Toy feels sticky or damaged.	Use of oil-based lubricants or harsh cleaners.	Discontinue use if damaged. Always use water-based lubricants and mild, toy-safe soap for cleaning.

Specifications

Feature	Detail
Product Name	LoveBoxxx Romantic Box for Couples
Brand	LOVEBOXXX
Model Number	E32583
ASIN	B07DHX1HW1
Material	Plastic (Medically safe)
Product Dimensions (L x W x H)	26 x 16 x 26 cm (Box)
Product Net Weight	1.18 Kilograms (Total package)
Units	1 unit (set of 5 toys)
Color	Multi-color (Toys are black/rose gold, box is green, storage bag is grey)
International Article Code	08719497666775

Safety Information

- Always clean toys before and after each use to maintain hygiene.
- Use only water-based lubricants. Oil-based lubricants can degrade the material of the toys.
- Discontinue use immediately if you experience any discomfort, irritation, or allergic reaction.
- Do not use on broken or irritated skin.
- Keep out of reach of children.
- Do not immerse electronic components in water unless explicitly stated as waterproof.
- Consult a healthcare professional if you have any concerns about using these products.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the retailer's return policy or contact the manufacturer directly through their official channels. Keep your proof of purchase for any warranty claims.

Manufacturer: LoveBoxxx

For further assistance, please visit the [LOVEBOXXX brand page on Amazon](#).

© 2023 LOVEBOXXX. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question