

Roxy ERJWT03281

Roxy Messenger Activ Smart Watch ERJWT03281 User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Roxy Messenger Activ Smart Watch, model ERJWT03281. This analogue-digital smart watch offers a range of features including activity tracking, heart rate monitoring, tide prediction, and smartphone connectivity.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Roxy Messenger Activ Smart Watch
- USB Charging Cable
- Warranty Information

2. Charging the Device

Before first use, fully charge your smart watch. Connect the provided USB charging cable to the charging dock, then place the watch onto the dock, ensuring the charging pins align. Connect the USB end to a compatible power source (e.g., computer USB port or USB wall adapter).



Image: Roxy Messenger Activ Smart Watch with its dedicated charging dock and USB cable.



Image: The Roxy Messenger Activ Smart Watch placed on its charging dock, showing the connection point.

3. Smartphone Pairing

The Roxy Messenger Activ Smart Watch is compatible with Android and iOS devices. To enable smart features and receive notifications, download the official Roxy companion application from your smartphone's app store. Follow the in-app instructions to pair your watch via Bluetooth Smart Ready technology.

OPERATING

Basic Time Display

The watch features both analogue hands for traditional timekeeping and a digital display for additional information.

Smart Features

- **Activity Tracking:** Monitors daily steps, distance covered, and estimated calories burned.
- **Heart Rate Monitoring:** Provides continuous or on-demand heart rate readings.

- **Tide Prediction:** Access tide information for 300 locations worldwide directly on your watch.
- **Sunrise/Sunset:** Displays local sunrise and sunset times.
- **Sleep Analysis:** Tracks sleep patterns to provide insights into sleep quality.
- **Notifications:** Receive alerts for calls, messages, and other app notifications from your paired smartphone.

Refer to the companion application for detailed instructions on accessing and customizing these features.

Water Resistance

The watch has a water resistance rating of 10 ATM (100 meters), making it suitable for surfing, swimming, and snorkeling. It is **not** designed for scuba diving.

MAINTENANCE

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the case, crystal, or strap. Ensure the charging contacts are clean and dry before charging.

Battery Care

The battery life can last up to 3 weeks, depending on usage. To prolong battery life, avoid extreme temperatures and fully charge the watch regularly. If storing the watch for an extended period, ensure it has a partial charge.

Water Resistance Precautions

While water-resistant, avoid exposing the watch to hot water, steam, or sudden temperature changes, as this can compromise the seals. Do not operate buttons underwater.

TROUBLESHOOTING

Watch Not Turning On

- Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes.
- Check if the charging cable and dock are properly connected and free of debris.

Connectivity Issues

- Verify Bluetooth is enabled on your smartphone.
- Ensure the watch is within range of your smartphone.
- Restart both your watch and smartphone, then attempt to re-pair through the companion app.

Inaccurate Readings (Heart Rate, Steps)

- Ensure the watch is worn snugly on your wrist, but not uncomfortably tight.
- Clean the sensor on the back of the watch.
- Calibrate the device through the companion application if available.

SPECIFICATIONS

Feature	Detail
Model Number	ERJWT03281

Case Material	Solid marine grade stainless steel
Case Diameter	42 mm
Case Thickness	14 mm
Weight	96 g
Crystal	Reinforced mineral crystal
Band Material	Soft and UV-resistant silicone strap
Buckle	Marine grade stainless steel
Water Resistance	10 ATM (100 m)
Movement	Analogue-Digital Smart movement with date
Connectivity	Bluetooth Smart Ready
Compatibility	Android and iOS
Battery Life	Up to 3 weeks (depending on usage)

WARRANTY AND SUPPORT

Warranty Information

Your Roxy Messenger Activ Smart Watch comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Roxy website or contact their customer service department. Contact details can typically be found on the manufacturer's website or in the warranty documentation included with your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question