

[Manuals.plus](#) /

› [Master & Dynamic](#) /

› Master & Dynamic MW50+ Wireless Bluetooth Headphones User Manual

Master & Dynamic MW50+

Master & Dynamic MW50+ Wireless Bluetooth Headphones

User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Master & Dynamic MW50+ Wireless Bluetooth Headphones. It covers product features, setup, operation, maintenance, and technical specifications to ensure optimal use of your device. Please read this manual thoroughly before using the headphones.

PACKAGE CONTENTS

 
Verify that all items listed below are present in your package:

- MW50+ Headphones
- Interchangeable On-Ear Pads
- Interchangeable Over-Ear Pads
- Leather Ear Pad Case
- Canvas Headphone Pouch
- USB-C Charging Cable
- 1.25m Standard 3.5mm Audio Cable


In The Box



Headphones



On-Ear Ear Pads

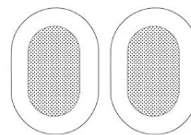

Over-Ear Ear Pads



Leather Ear Pad Case



Canvas Headphone Pouch



USB-C Charging Cable



1.25m Standard 3.5mm Cable

Figure 1: Included accessories with the MW50+ Headphones.

PRODUCT OVERVIEW

The Master & Dynamic MW50+ headphones are designed for versatile audio experiences, offering both on-ear and over-ear configurations. They feature premium materials and advanced audio technology.





Figure 2: Front view of MW50+ Headphones.



Figure 3: Angled view of MW50+ Headphones.

SETUP

Charging the Headphones

Before initial use, fully charge your MW50+ headphones. Connect the supplied USB-C charging cable to the headphone's charging port and to a USB power source. The LED indicator will show charging status.

Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the power button until the LED indicator flashes blue, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "MW50+" from the list of devices.
5. Once connected, the LED indicator will turn solid blue.

Earpad Installation and Removal

The MW50+ headphones feature interchangeable ear pads, allowing you to switch between on-ear and over-ear styles. The ear pads attach magnetically.

1. To remove an ear pad, gently pull it away from the earcup.
2. To install an ear pad, align it with the earcup and allow the magnets to snap it into place. Ensure it is securely attached.

Your browser does not support the video tag.

Video 1: Demonstrates the process of switching ear pads on the MW50+ headphones.



Figure 4: On-ear (left) and over-ear (right) pads.





Figure 5: Earpad removal process.

OPERATION

Controls

The MW50+ headphones feature intuitive controls located on the earcups:

- **Power Button:** Press and hold to power on/off. Press to check battery status.
- **Volume Up/Down:** Adjusts audio volume.
- **Multi-function Button:**
 - Press once to Play/Pause audio or Answer/End calls.
 - Press twice to skip to the next track.
 - Press three times to go to the previous track.
 - Press and hold to activate voice assistant.

Wearing the Headphones

Adjust the headband for a comfortable and secure fit. Ensure the earcups fully cover your ears (over-ear) or rest comfortably on your ears (on-ear) for optimal sound isolation and audio performance.

MAINTENANCE

To maintain the performance and longevity of your MW50+ headphones:

- Clean the ear pads and headband with a soft, dry cloth.
- Avoid exposing the headphones to extreme temperatures, humidity, or liquids.
- Store the headphones in the provided canvas pouch or leather ear pad case when not in use.
- Do not attempt to disassemble or modify the headphones, as this will void the warranty.

TROUBLESHOOTING

Problem	Solution
Headphones do not power on.	Ensure the headphones are charged. Connect to a power source using the USB-C cable.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (flashing blue LED). Turn off and on Bluetooth on your device. Move closer to the device.
No sound or low volume.	Check volume levels on both headphones and connected device. Ensure headphones are properly paired. If using wired connection, ensure cable is fully inserted.
Sound quality is poor.	Ensure ear pads are correctly installed and sealed. Check for interference from other wireless devices. Try moving closer to the audio source.
Battery drains quickly.	Ensure headphones are fully charged. Reduce listening volume. Avoid extreme temperatures.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	MASTER & DYNAMIC
Model Number	MW50S1+
Connectivity Technology	Bluetooth
Bluetooth Version	5.0
Bluetooth Range	30 Meters
Ear Placement	Over Ear & On-Ear (Interchangeable)
Impedance	32 Ohms
Noise Control	Sound Isolation
Battery Life	Up to 16 Hours
Audio Driver Type	Dynamic Driver
Frequency Response	30000 Hz
Material	Leather (Premium grain cowhide, lambskin)
Weight	0.21 Kilograms
Additional Features	Microphone Included, Media Control

WARRANTY AND SUPPORT

The Master & Dynamic MW50+ headphones come with a **1 Year Limited Warranty**. For detailed warranty terms, service, or technical support, please visit the official Master & Dynamic website or contact their customer service department. Keep your proof of purchase for warranty claims. For further assistance, you may visit the [Master & Dynamic Brand Store](#).

© 2024 Master & Dynamic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DJ18KY8>

More documents and user manuals: <https://manuals.plus/>