

[manuals.plus](#) /

› [myTouchSmart](#) /

› [myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch User Manual](#)

## myTouchSmart 39845

# myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch User Manual

Comprehensive guide for setting up, operating, and maintaining your myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch, compatible with Amazon Alexa and Google Assistant.

## INTRODUCTION

---

The myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch provides convenient control over your outdoor lighting and other devices. This weather-resistant smart plug integrates with your existing 2.4GHz Wi-Fi network, allowing for remote operation, scheduling, and voice control through compatible smart home assistants like Amazon Alexa and Google Assistant. This manual will guide you through the installation, operation, and maintenance of your device.



▼ **Wi-Fi** ▲

Image: The myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch, a black, weather-resistant device with a grounded plug and a single outlet, designed for outdoor use.

## PRODUCT FEATURES

- **Voice Commands:** Compatible with Amazon Alexa and Google Assistant for hands-free control without a hub.
- **Universal Wi-Fi:** Utilizes your 2.4GHz Wi-Fi network for scheduling and ON/OFF operation from any location with internet access.
- **User-Friendly App:** The myTouchSmart app, available on Apple App Store and Google Play, enables remote operation of lights and landscape features.
- **Easy Setup:** Features one-touch presets, personalized ON/OFF times, and custom countdown options for flexible programming.
- **Tool-Free Installation:** Plugs into any outdoor or indoor grounded outlet, requiring no wiring.
- **Weather-Resistant Design:** Suitable for outdoor use, protecting against elements.





Image: A collage showing the myTouchSmart Wi-Fi Smart Plug in various outdoor settings, including seasonal lighting, decks and patios, and landscape lighting, highlighting its versatility.

## PACKAGE CONTENTS

The myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch package typically includes:

- 1 x myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch
- User Manual (this document)

Please check the packaging for any additional components or accessories.

## SAFETY INFORMATION

Before using your myTouchSmart 39845, please read and understand all safety instructions. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the device in water or expose it to extreme weather conditions beyond its weather-resistant rating.
- Ensure the device is plugged into a grounded outlet.
- Do not exceed the maximum electrical ratings of the device (15 Amps, 120 Volts AC).
- Keep children away from the device and electrical outlets.
- Unplug the device from the outlet when not in use or before cleaning.
- Do not attempt to disassemble or modify the device. There are no user-serviceable parts inside.
- Operate the device within the specified temperature range (32°F to 102°F).

## SETUP

### 1. Download the myTouchSmart App

To control your smart plug, you need to download the myTouchSmart app. Search for "myTouchSmart" in the Apple App Store (for iOS devices) or Google Play Store (for Android devices).



myTOUCH  
SMART  
▼ Wi-Fi ▲

 
1

Download app from the Apple® App Store or Google Play by searching "myTouchSmart"

2

Create account. Log-in to pair new or control existing myTouchSmart Wi-Fi devices.

\*Be sure to read and agree to the terms of service.

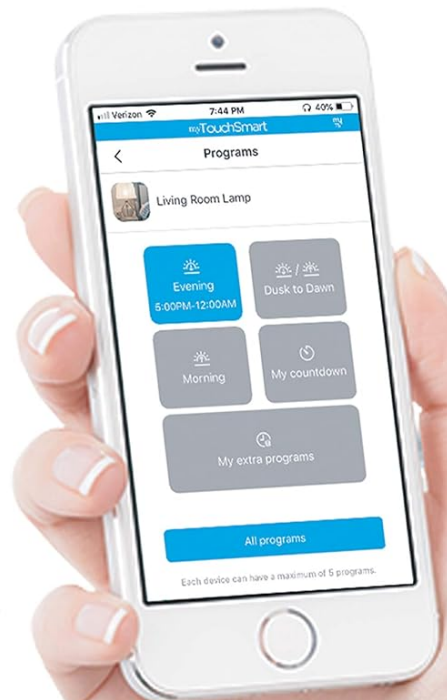

# NO HUB REQUIRED.

\*Internet & Wi-Fi Router Required

## 2. Create an Account


Open the myTouchSmart app after installation. You will be prompted to create a new account or log in if you already have one. Follow the on-screen instructions to complete the account creation process. Ensure you read and agree to the terms of service.

## 3. Pairing Steps

Once logged in, follow these steps to pair your myTouchSmart Outdoor Plug-in Light Switch:

1. **Find New Device:** In the myTouchSmart app, tap "Find New Device" to initiate the connection process for your new Wi-Fi device.
2. **Wi-Fi Connection:** Select your 2.4GHz Wi-Fi network from the list and enter your Wi-Fi password. The device requires a 2.4GHz network for connection.
3. **Plug in Device:** Plug the myTouchSmart Wi-Fi Smart Plug into your desired outdoor or indoor grounded outlet. The blue LED on the device will flash rapidly, indicating it's in pairing mode. If the LED is not flashing rapidly, press and hold the "myTS" button on the device for 10 seconds to reset it.

# PAIRING STEPS

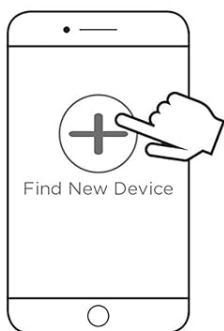


## FIND NEW DEVICE

Tap "Find New Device" in myTS app to connect your new Wi-Fi device.



## WI-FI CONNECTION

Select your Wi-Fi network and type your Wi-Fi password to connect and begin your search.

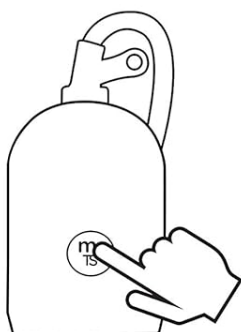

## PLUG IN DEVICE

Plug myTS Wi-Fi Smart Plug into desired outlet. The blue LED will flash rapidly.

If blue LED is not flashing rapidly, hold "myTS" button for 10 seconds to reset the device.

myTOUCH  
SMART  
▼ Wi-Fi ▲

1

2

3



Image: Visual representation of the three pairing steps: finding a new device in the app, entering Wi-Fi credentials, and plugging in the device while observing the flashing LED.

## Product Overview Video



Video: An official overview of myTouchSmart Wi-Fi Smart Controls, demonstrating how to schedule and control home lighting and devices from anywhere using the myTouchSmart app, highlighting features like manual ON/OFF, custom presets, personalized settings, and countdown features. It also shows the app interface for device control and grouping.

## OPERATING INSTRUCTIONS

---

### App Control

Once paired, you can control your myTouchSmart plug directly from the app. The app allows you to:

- **Manual ON/OFF:** Toggle the power of the connected device directly from the app interface.
- **Customizable Names and Images:** Assign unique names and images to each device for easy identification.
- **Grouping:** Group multiple myTouchSmart devices to control them simultaneously with a single command.

# PROGRAMS

## Evening/Morning

Schedule on/off times to match your daily routine

## Dusk to Dawn

Schedule on/off times to adjust to sunset/sunrise times in your area

## Countdown

Set device to turn off using a custom countdown up to 24 hours

## Extra Program

Set an additional on/off time that fits your schedule!

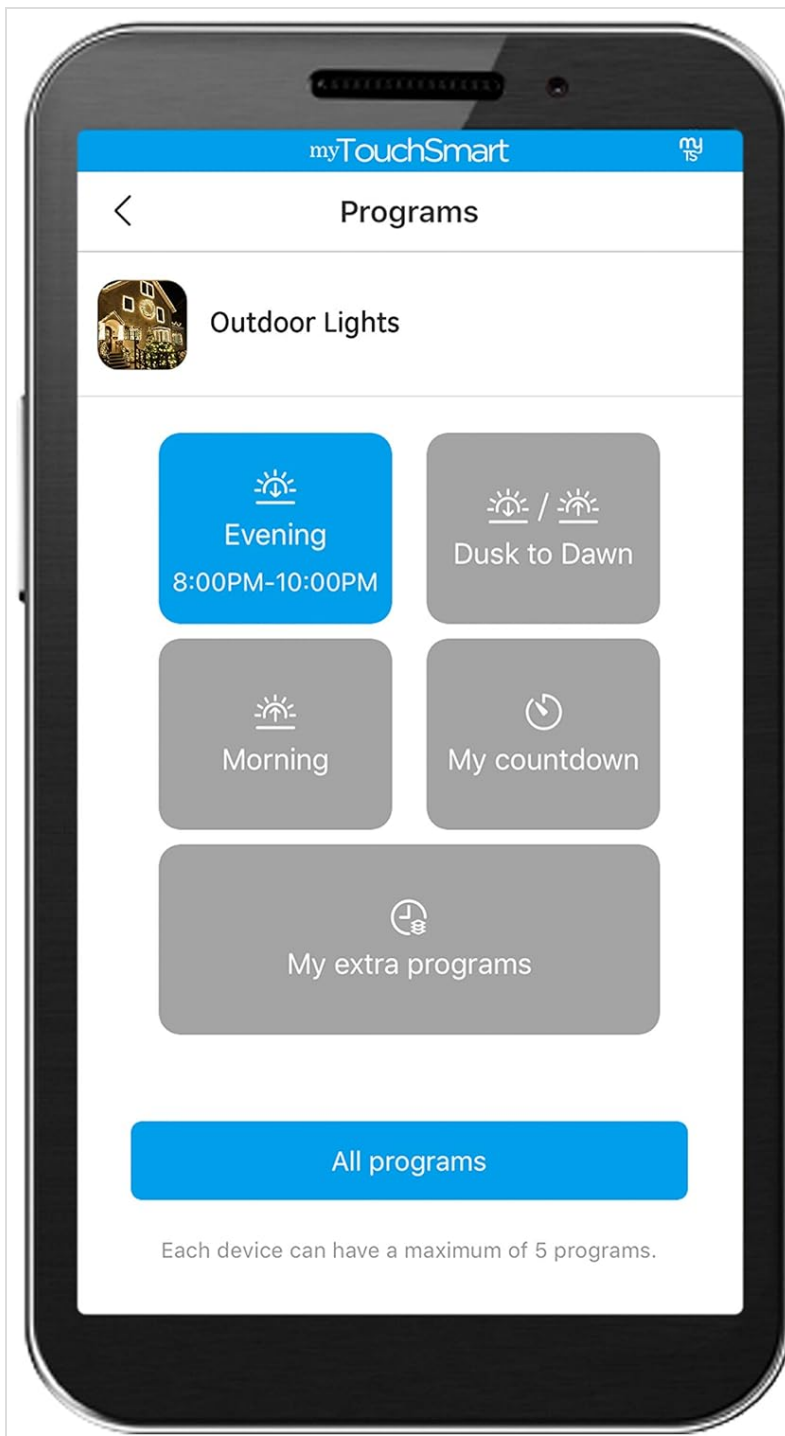 


Image: A screenshot of the myTouchSmart app showing program settings, including options for Evening/Morning schedules, Dusk to Dawn, Countdown, and Extra Programs, demonstrating the flexibility of scheduling.

## Voice Control

The myTouchSmart 39845 is compatible with Amazon Alexa and Google Assistant, enabling voice-activated control. To set up voice control:

1. Ensure your myTouchSmart device is successfully paired with the app and connected to your Wi-Fi network.
2. Open the Amazon Alexa app or Google Home app on your smartphone or tablet.
3. Follow the instructions within the Alexa or Google Home app to link your myTouchSmart account.
4. Once linked, you can use voice commands such as "Alexa, turn on the patio lights" or "Hey Google, turn off the landscape lights."

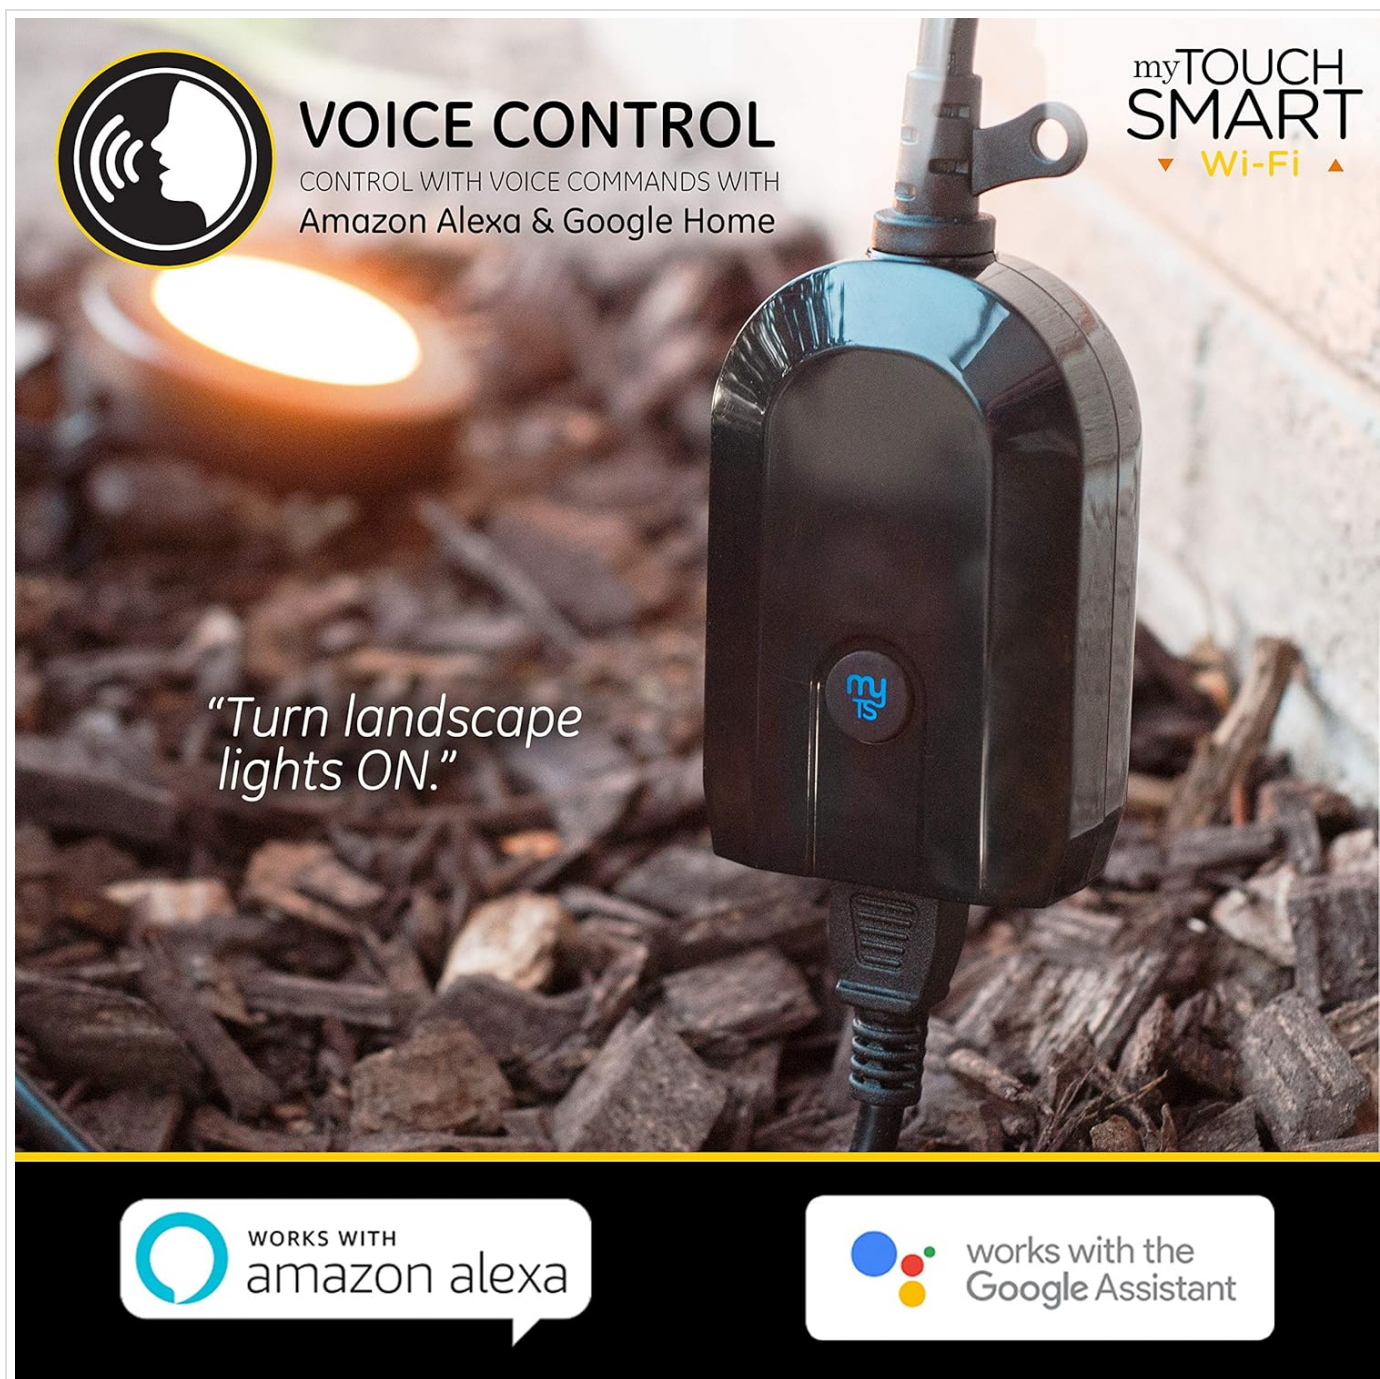


Image: The myTouchSmart Smart Plug shown with icons for Amazon Alexa and Google Assistant, illustrating its voice control capabilities.  
A text bubble indicates a voice command: "Turn landscape lights ON."

## Scheduling and Programs

The myTouchSmart app allows you to create various programs to automate your devices:

- **Evening/Morning:** Schedule specific ON/OFF times to match your daily routine.
- **Dusk to Dawn:** Automatically adjust ON/OFF times based on local sunset/sunrise times.
- **Countdown:** Set the device to turn off after a custom countdown, up to 24 hours.
- **Extra Program:** Add additional ON/OFF times to further customize your schedule.

Each device can have a maximum of 5 programs assigned.

## MAINTENANCE

To ensure the longevity and proper functioning of your myTouchSmart 39845 WiFi Smart Outdoor Plug-in Light Switch, follow these maintenance guidelines:



- **Cleaning:** Disconnect the device from power before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use harsh chemicals or abrasive cleaners.
- **Environmental Protection:** While weather-resistant, avoid prolonged exposure to extreme conditions such as heavy snow, ice, or direct water submersion. Ensure the outlet is protected from direct rain or splashing.
- **Storage:** If storing the device for an extended period, unplug it and keep it in a cool, dry place.
- **Regular Checks:** Periodically inspect the plug and cord for any signs of damage or wear. Do not use if damaged.



Image: The myTouchSmart Smart Plug mounted on an outdoor wall, demonstrating its weather-resistant design and the use of its integrated mounting bracket for easy installation near an available outlet.

## TROUBLESHOOTING

If you encounter issues with your myTouchSmart 39845, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Device not connecting to Wi-Fi.	<ul style="list-style-type: none"> <li>◦ Ensure your Wi-Fi network is 2.4GHz. The device does not support 5GHz networks.</li> <li>◦ Check your Wi-Fi password for accuracy.</li> <li>◦ Move the device closer to your Wi-Fi router to improve signal strength.</li> <li>◦ Reset the device by holding the "myTS" button for 10 seconds until the blue LED flashes rapidly, then attempt pairing again.</li> <li>◦ Ensure your router's Wi-Fi name (SSID) and password do not contain special characters that might cause connectivity issues.</li> </ul>
Device loses connection after a power outage.	<ul style="list-style-type: none"> <li>◦ After a power outage, the device may need to re-establish its connection. Wait a few minutes.</li> <li>◦ If it doesn't reconnect automatically, try unplugging and re-plugging the device.</li> <li>◦ If issues persist, you may need to re-pair the device through the app.</li> </ul>
Voice commands not working.	<ul style="list-style-type: none"> <li>◦ Ensure your myTouchSmart account is correctly linked to your Amazon Alexa or Google Home app.</li> <li>◦ Check your internet connection.</li> <li>◦ Verify the device name used in your voice command matches the name set in the myTouchSmart app and linked smart assistant app.</li> </ul>
Schedules are not activating.	<ul style="list-style-type: none"> <li>◦ Confirm that the schedules are correctly set up and enabled within the myTouchSmart app.</li> <li>◦ Check the device's internet connection.</li> <li>◦ Ensure the device's internal clock is synchronized (usually automatic when connected to Wi-Fi).</li> </ul>

## SPECIFICATIONS

Attribute	Value
Brand	myTouchSmart
Model Number	39845
Operation Mode	OFF-NONE-ON
Current Rating	15 Amps
Operating Voltage	120 Volts (AC)
Contact Type	Plug-in
Connector Type	Plug In
Item Dimensions (L x W x H)	2.5 x 5.6 x 8.2 inches

Attribute	Value
Item Weight	7.2 ounces
Circuit Type	1-way
Mounting Type	Plug-In Mount
Actuator Type	Plug-in
Contact Material	Nickel
International Protection Rating	Not IP Rated (Weather-Resistant for outdoor use)
Lower Temperature Rating	32 Degrees Fahrenheit
Upper Temperature Rating	102 Degrees Fahrenheit
Controller Type	Google Assistant, Amazon Alexa
Control Method	Voice, App
Connectivity Protocol	Wi-Fi (2.4GHz)
Color	Black
UPC	030878398459





Image: A diagram illustrating the dimensions of the myTouchSmart Smart Plug, including its length, width, height, and the length of its power cord, along with the location of the mounting bracket and pair/manual control button.







## WARRANTY AND SUPPORT

myTouchSmart products are designed for reliability and performance. For specific warranty details, please refer to the warranty information included with your product packaging or visit the official myTouchSmart website.

For further assistance, technical support, or frequently asked questions (FAQ), you can access the "Contact us" and "FAQ" sections within the myTouchSmart app. These resources provide valuable information and direct contact options for support.

- **In-App Support:** Access FAQ, instructions, and contact information directly through the myTouchSmart app.
- **Online Resources:** Visit the myTouchSmart official website for additional support and product information.

## Related Documents - 39845

	<p><a href="#">myTouchSmart Wi-Fi Smart Devices Setup and Integration Guide</a></p> <p>Comprehensive guide for setting up myTouchSmart Wi-Fi smart plugs and switches, including app integration, voice assistant compatibility with Alexa and Google Assistant, and product details.</p>
	<p><a href="#">myTouchSmart Wi-Fi Smart Devices: App Guide and Setup</a></p> <p>Comprehensive guide to setting up and using myTouchSmart Wi-Fi smart devices with the myTS app, including voice control integration with Amazon Alexa and Google Assistant.</p>
	<p><a href="#">myTouchSmart Wi-Fi Smart Devices Setup and Features Guide</a></p> <p>A comprehensive guide to setting up and using myTouchSmart Wi-Fi smart devices, covering app features, voice control integration with Amazon Alexa and Google Assistant, and step-by-step installation instructions for smart plugs, dimmers, switches, and receptacles.</p>
	<p><a href="#">myTouchSmart Wi-Fi Smart Devices: Setup Guide and Features</a></p> <p>Comprehensive guide to setting up and using myTouchSmart Wi-Fi smart switches, plugs, and outlets. Learn about app control, voice integration with Alexa and Google Assistant, and troubleshooting.</p>
	<p><a href="#">myTouchSmart Wi-Fi Smart Devices Setup Guide</a></p> <p>A comprehensive guide for setting up myTouchSmart Wi-Fi smart plugs and switches, covering app installation, device pairing with Alexa and Google Assistant, and troubleshooting, along with FCC compliance information and product specifications.</p>
	<p><a href="#">myTouchSmart Wi-Fi Smart Switch Installation and User Guide</a></p> <p>A comprehensive guide to installing and using the myTouchSmart Wi-Fi Smart Switch, including setup, app integration with Amazon Alexa and Google Assistant, and safety information.</p>