

[Manuals.plus](#) /

› [NUOMI](#) /

› NUOMI SD/SDHC Memory Card Case Holder (15-Pack) Instruction Manual

NUOMI 8541643731

NUOMI SD/SDHC Memory Card Case Holder (15-Pack) Instruction Manual

Model: 8541643731

INTRODUCTION

Thank you for choosing the NUOMI SD/SDHC Memory Card Case Holder. This manual provides essential information for the proper use, care, and maintenance of your new memory card cases. These clear plastic cases are designed to protect your standard SD and SDHC memory cards from dust, scratches, and physical damage, ensuring your valuable data remains safe and organized.



Image: An assortment of clear plastic SD card cases, some open and some closed, displayed on a wooden surface. This illustrates the product's appearance and quantity.

PRODUCT FEATURES

- **Quantity:** 15 individual clear plastic cases.
- **Compatibility:** Designed for standard SD and SDHC memory cards.
- **Protection:** Shields cards from dust, dirt, and minor impacts.
- **Visibility:** Clear design allows for easy identification of stored cards.
- **Closure:** Secure, lightweight, and durable snap-latch mechanism.
- **Portability:** Compact size for easy carrying in pockets or bags.

SETUP

The NUOMI SD/SDHC Memory Card Cases require no assembly. They are ready for immediate use upon removal from

packaging.

1. Unpack the cases from their protective packaging.
2. Inspect each case for any signs of damage. If any case is damaged, please refer to the Warranty and Support section.

OPERATING INSTRUCTIONS

Follow these steps to properly store and retrieve your SD/SDHC memory cards.

1. **Opening the Case:** Gently lift the small latch on the front edge of the case to release the lid. The lid will hinge open.
2. **Inserting an SD Card:** With the case open, align your standard SD or SDHC memory card with the internal guides. Carefully slide the card into the designated slot until it sits securely. Ensure the card is fully seated to prevent movement.



Image: A person's hands demonstrating the insertion of an SD card into an open NUOMI clear plastic case. This shows the correct orientation and method for placing the card.

3. **Closing the Case:** Gently press the lid down until you hear or feel a soft click, indicating the latch has engaged and

the case is securely closed. Verify the case is fully closed before storage or transport.

4. **Removing an SD Card:** Open the case as described in step 1. Gently grasp the edges of the SD card and pull it straight out from the slot. Avoid bending or forcing the card.
5. **Transporting Cases:** These cases are designed for portability. Place them in a bag, pocket, or storage container. The secure latch helps prevent accidental opening during transit.



Image: A person demonstrating how to store a clear plastic SD card case, containing a memory card, into a travel bag. This highlights the product's portability.

MAINTENANCE AND CARE

To ensure the longevity and effectiveness of your NUOMI SD/SDHC Memory Card Cases, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the cases with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the plastic.
- **Storage:** Store cases in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Overfilling:** Do not attempt to force multiple cards into a single case, as this can damage both the cards and

the case.

- **Handle with Care:** While durable, avoid dropping or subjecting the cases to excessive force to prevent cracking or damage to the latch mechanism.

TROUBLESHOOTING

If you encounter any issues with your memory card cases, refer to the following common solutions:

Problem	Possible Cause	Solution
Case does not close securely.	◦ SD card not fully seated. ◦ Debris in the latch mechanism. ◦ Lid or latch mechanism is misaligned or damaged.	◦ Ensure the SD card is pushed all the way into its slot. ◦ Check for and remove any small particles obstructing the latch. ◦ Gently press the case together firmly when closing. If the issue persists, the case may be damaged.
SD card feels loose inside the closed case.	◦ Card not properly aligned with internal guides. ◦ Case is designed for standard SD/SDHC cards; other card types may not fit snugly.	◦ Re-open the case and re-insert the SD card, ensuring it aligns with the internal guides. ◦ Confirm you are using a standard SD or SDHC card.

SPECIFICATIONS

PRODUCT SIZES



Image: A detailed diagram illustrating the external and internal dimensions of the NUOMI SD card case in both centimeters and inches, providing precise measurements for users.

Attribute	Detail
Product Name	NUOMI SD/SDHC Memory Card Case Holder
Model Number	8541643731
Material	PP plastic
Color	Clear transparent
Quantity	15 Pieces
Compatibility	Standard SD and SDHC Memory Cards
External Dimensions (approx.)	4.8 cm (1.9 in) x 3.9 cm (1.5 in) x 0.7 cm (0.3 in)

Attribute	Detail
Internal Dimensions (approx.)	3.2 cm (1.3 in) x 2.5 cm (1 in)
Item Weight (per case, approx.)	Less than 1.41 ounces (total for 15 cases is 1.41 ounces)
Special Features	Lightweight, Secure Closure

WARRANTY AND SUPPORT

For any questions, concerns, or issues not covered in this manual, please contact NUOMI customer support through the retailer's platform where the product was purchased. Please retain your proof of purchase for any warranty claims. NUOMI is committed to providing quality products. If you experience any manufacturing defects, please reach out to us for assistance.

