

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Easyricambi](#) /

› Easyricambi Kit 2 Oven Hinges Plus 2 Roller Holders (C00028041, C00028042, KCF3692) Instruction Manual

Easyricambi C00028041, C00028042, KCF3692

Easyricambi Kit 2 Oven Hinges Plus 2 Roller Holders (C00028041, C00028042, KCF3692) Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the installation and maintenance of the Easyricambi Kit, which includes two oven door hinges and two roller holders. This kit is designed as a replacement part for various oven models, including those from NARDI and ONOFRI, corresponding to part numbers C00028041, C00028042, and KCF3692. Please read all instructions carefully before proceeding with installation.

2. SAFETY INFORMATION

- Always disconnect the oven from the main power supply before attempting any installation or maintenance. Failure to do so can result in electric shock or injury.
- Wear appropriate personal protective equipment, such as gloves, to prevent cuts or abrasions.
- If you are unsure about any step, consult a qualified technician.
- Keep small parts away from children.
- Ensure the oven door is properly supported during hinge replacement to prevent it from falling.

3. PRODUCT OVERVIEW

The Easyricambi kit contains the following components:

- 2 x Oven Door Hinges (Part numbers C00028041, KCF3692)
- 2 x Roller Holders (Part number C00028042)

These components are designed to restore proper function to your oven door, ensuring smooth opening and closing.



Figure 1: Easyricambi Oven Hinges and Roller Holders. The image displays two oven door hinges and two roller holders. The hinges are shown with approximate dimensions: 156 mm (height) and 170 mm (width). The roller holders are shown with approximate dimensions: 90 mm (height) and 115 mm (width). These measurements are crucial for verifying compatibility.

4. INSTALLATION INSTRUCTIONS

Replacing oven door hinges and roller holders requires careful attention. Follow these steps:

1. **Preparation:** Ensure the oven is completely cool and disconnected from the power supply. Open the oven door fully.
2. **Remove Oven Door:** Depending on your oven model, you may need to remove the oven door. Many oven doors can be lifted off their hinges when fully open or at a specific angle. Consult your oven's specific user manual for door removal instructions.
3. **Access Hinges:** Once the door is removed (or if hinges are accessible with the door attached), locate the existing hinges and roller holders. They are typically secured with screws.
4. **Remove Old Components:** Carefully unscrew and remove the old hinges and roller holders. Note their orientation and position for correct installation of the new parts.
5. **Install New Roller Holders:** Attach the new Easyricambi roller holders (C00028042) to the oven frame using the

original screws or suitable replacements. Ensure they are securely fastened and correctly oriented.

- 6. Install New Hinges:** Attach the new Easyricambi oven door hinges (C00028041, KCF3692) to the oven door. Make sure they are aligned properly and secured tightly with screws.
- 7. Reattach Oven Door:** Carefully reattach the oven door to the oven frame, aligning the hinges with the roller holders. This step often requires two people to ensure the door is handled safely and correctly.
- 8. Test Operation:** Once the door is reattached, gently open and close it several times to ensure smooth operation and proper alignment. The door should close completely and securely.
- 9. Reconnect Power:** Reconnect the oven to the power supply.

Note: Some oven models may require specific tools or procedures. Always refer to your oven's manufacturer manual for detailed instructions specific to your appliance.

5. OPERATION

After successful installation, the oven door should operate smoothly and securely. The new hinges and roller holders will ensure the door opens and closes with appropriate tension, preventing it from slamming shut or falling open unexpectedly. Always ensure the door is fully closed during oven operation to maintain proper temperature and energy efficiency.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Easyricambi oven hinges and roller holders:

- Regular Cleaning:** Periodically clean any grease or debris that may accumulate around the hinge mechanisms. Use a damp cloth and mild detergent. Avoid abrasive cleaners.
- Inspection:** Occasionally inspect the hinges and roller holders for any signs of wear, damage, or loose screws. Tighten any loose screws as needed.
- Lubrication:** The hinges are designed for long-term use without lubrication. Avoid applying oils or greases, as these can attract dust and debris, potentially hindering operation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven door does not close completely.	Hinges or roller holders are misaligned or not fully seated.	Re-check installation steps. Ensure hinges are correctly aligned with roller holders and all screws are tightened.
Oven door feels stiff or difficult to open/close.	Debris in hinge mechanism; incorrect installation.	Clean hinges. Verify correct installation and alignment. Do not lubricate.
Door makes squeaking noises.	Friction from debris or slight misalignment.	Clean hinges thoroughly. Ensure all components are properly seated and tightened.

If problems persist after following these troubleshooting steps, please contact customer support or a qualified technician.

8. SPECIFICATIONS

- Product Type:** Oven Door Hinge and Roller Holder Kit
- Brand:** Easyricambi

- **Part Numbers:** C00028041, C00028042, KCF3692
- **Compatibility:** Designed for various oven models, including NARDI and ONOFRI. Refer to your oven's manual for specific part compatibility.
- **Material:** Metal alloy (as depicted in product images)
- **Hinge Dimensions (approximate):** Height 156 mm, Width 170 mm (as shown in Figure 1)
- **Roller Holder Dimensions (approximate):** Height 90 mm, Width 115 mm (as shown in Figure 1)
- **First Available Date:** 6 June 2018

9. WARRANTY AND SUPPORT

For any questions regarding installation, compatibility, or product performance, please contact the seller, eRicambi s.r.l., directly through the Amazon platform. Information regarding returns and refunds is subject to Amazon's return policy, which typically allows for returns within 14 days of receipt for eligible items.

Seller: [eRicambi s.r.l.](#)

