

Energizer E301315800

Energizer Weatheready 360 LED Water-Resistant Lantern Instruction Manual

Model: E301315800

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Energizer Weatheready 360 LED Water-Resistant Lantern. Designed for reliability, this lantern offers 360-degree illumination, making it suitable for various situations including camping, power outages, and general area lighting. Its durable, water-resistant construction ensures performance in diverse conditions.

Key features include:

- Bright 360-degree LED illumination with up to 500 lumens output.
- Multiple lighting modes (High and Low intensity).
- Highly visible, glow-in-the-dark power switch for easy access.
- Durable and water-resistant (IPX4) construction.
- Extended runtime, up to 650 hours on low mode.



Figure 1: Front view of the Energizer Weatherready 360 LED Lantern, showing the main body, handle, and power switch.

2. SETUP

2.1 Battery Installation

The Energizer Weatherready Lantern requires 3 AA batteries (not included) for operation. Ensure correct polarity when inserting batteries.

1. Locate the battery compartment cover at the base of the lantern.
2. Twist the cover counter-clockwise to unlock and remove it.
3. Insert 3 AA batteries according to the polarity indicators (+/-) inside the compartment.

4. Replace the battery compartment cover and twist clockwise to secure it. Ensure the cover is fully sealed to maintain water resistance.



Figure 2: Angled view of the lantern, highlighting its compact design and handle.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Mode Selection

The lantern features a single power button that also cycles through the lighting modes.

- **To Turn On (High Mode):** Press the power button once. The lantern will illuminate at its highest brightness setting (up to 500 lumens).

- **To Switch to Low Mode:** While the lantern is on High mode, press the power button a second time. The brightness will reduce, offering extended battery life (up to 650 hours).
- **To Turn Off:** While the lantern is on Low mode, press the power button a third time. The lantern will turn off.
- The power button is designed to glow in the dark for easy location in low-light conditions.



Figure 3: The lantern provides portable illumination, ideal for walking or moving around in dark environments.

4. MAINTENANCE

4.1 Cleaning

To clean the lantern, wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or internal components. Ensure the battery compartment is sealed before cleaning.

4.2 Battery Replacement and Storage

- Replace batteries when the light output becomes dim or inconsistent. Always replace all batteries at the same time with new ones of the same type and brand.
- For prolonged storage (more than 30 days), remove the batteries to prevent leakage and potential damage to the lantern.
- Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures.

4.3 Water Resistance

The lantern is rated IPX4 water-resistant, meaning it is protected against splashing water from any direction. It is not designed for submersion. Ensure the battery compartment cover is securely fastened to maintain water resistance.



Figure 4: The lantern demonstrating its water-resistant capabilities, suitable for use in light rain or wet conditions.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Batteries are dead or low. Batteries are inserted incorrectly. Battery compartment cover is not fully secured.	Replace with new AA batteries. Check battery polarity (+/-). Ensure the battery cover is twisted clockwise until fully secured.
Light is dim or flickers.	Batteries are low. Poor battery contact.	Replace with new AA batteries. Remove and reinsert batteries, ensuring good contact with terminals.

Problem	Possible Cause	Solution
Water inside the battery compartment.	Battery compartment cover not properly sealed.	Immediately remove batteries and allow compartment to dry completely. Ensure cover is securely fastened before next use.



Figure 5: The lantern provides essential light for emergency situations, such as a car repair at night or in adverse weather.

6. SPECIFICATIONS

Feature	Detail
Model Number	E301315800
Light Source	LED
Brightness (High Mode)	Up to 500 Lumens
Power Source	3 x AA Batteries (not included)
Battery Life (Low Mode)	Up to 650 hours
Water Resistance Rating	IPX4 (Splash-proof)
Dimensions (L x W x H)	10.4 x 15.9 x 28.2 cm (4.1 x 6.3 x 11.1 inches)
Weight (without batteries)	540 grams (1.19 lbs)
Material	Kunststoff (Plastic)



Figure 6: The lantern provides ample light for various outdoor activities, such as preparing food in the dark.

7. WARRANTY AND SUPPORT

Energizer products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Energizer website. If you encounter any issues not covered in the troubleshooting section, or require further assistance, please contact Energizer customer support.

Contact information can typically be found on the product packaging or the official Energizer website.

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question