



Manuals.plus /

› LINAK /

› LINAK DPF1C Desk Panel Instruction Manual

## LINAK DPF1C

# LINAK DPF1C Desk Panel Instruction Manual

## 1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your LINAK DPF1C Desk Panel. The DPF1C is a control unit designed for height-adjustable desks within the LINAK Deskline series, featuring an LED display and memory functions for convenient desk height adjustment.

Please read this manual carefully before using the product to ensure proper function and safety. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

The LINAK DPF1C Desk Panel is an intuitive control unit for electric height-adjustable desks. It features a clear LED display that shows the current desk height in inches, and buttons for adjusting the desk up or down. Additionally, it includes memory buttons to store and recall preferred desk heights.



Image of the LINAK DPF1C Desk Panel, showing its compact design, LED display for height indication, and control buttons for adjustment and memory functions.

#### Key Features:

- LED display showing desk height in inches.
- Up to 3 programmable memory positions.
- Intuitive up/down control buttons.
- RJ45 jack for easy connection to LINAK control boxes.
- Includes a 90-degree mounting bracket for flexible installation.

### 3. SETUP

#### 3.1 Mounting the Desk Panel

1. Identify a suitable location on your desk for the DPF1C Desk Panel. Ensure it is easily accessible for operation.
2. Use the included 90-degree mounting bracket to secure the panel. The bracket allows for versatile placement, such as under the desk edge or on the desk surface.
3. Fasten the bracket using appropriate screws (not included, typically provided with the desk frame) to ensure a stable installation.
4. Slide the DPF1C Desk Panel onto the mounted bracket until it clicks securely into place.

#### 3.2 Connecting the Desk Panel

1. Locate the RJ45 port on the back of the DPF1C Desk Panel.
2. Take the provided 62-inch cable. Connect one end of the cable to the RJ45 port on the desk panel.
3. Connect the other end of the cable to the corresponding RJ45 port on your LINAK control box

(typically located under the desk surface). Ensure the connection is firm.

4. Once connected, the desk panel should power on, and the LED display may show an initial value or prompt for calibration.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Height Adjustment

- To raise the desk, press and hold the **UP** button (usually indicated by an upward arrow). Release the button when the desired height is reached.
- To lower the desk, press and hold the **DOWN** button (usually indicated by a downward arrow). Release the button when the desired height is reached.
- The LED display will show the current desk height in inches as you adjust.

### 4.2 Setting Memory Positions

The DPF1C Desk Panel allows you to store up to three preferred desk heights for quick recall.

1. Adjust the desk to your desired height using the UP/DOWN buttons.
2. Press the **SET** button (often marked with 'M' or a similar symbol). The display may flash or show 'S'.
3. Within a few seconds, press one of the memory buttons (e.g., '1', '2', or '3') to save the current height to that position. The display may confirm the save (e.g., 'S1' for memory 1).
4. Repeat this process for other memory positions as needed.

### 4.3 Recalling Memory Positions

- To move the desk to a saved memory position, simply press the corresponding memory button (e.g., '1', '2', or '3').
- The desk will automatically move to the stored height. You can stop the movement at any time by pressing any button.

## 5. MAINTENANCE

The LINAK DPF1C Desk Panel requires minimal maintenance.

- **Cleaning:** Use a soft, dry, or slightly damp cloth to clean the surface of the desk panel. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the display or casing.
- **Inspection:** Periodically check the cable for any signs of damage or wear. Ensure all connections are secure.
- **Environment:** Keep the desk panel away from excessive moisture, direct sunlight, and extreme temperatures.

## 6. TROUBLESHOOTING

If you encounter issues with your DPF1C Desk Panel, refer to the following common problems and solutions:

- **Desk does not move:**
  - Check if the power cable to the control box is securely plugged into a working power outlet.
  - Ensure the RJ45 cable connecting the desk panel to the control box is firmly inserted at both ends.

- If the desk has an anti-collision feature, check for any obstructions under or around the desk. Remove any obstacles and try again.
  - Perform a reset (refer to your desk frame's specific manual for reset procedures, often involving holding the DOWN button until the lowest position is reached and then released).
- **Display shows an error code (e.g., 'E01', 'E02'):**
    - Error codes typically indicate a specific issue with the desk system. Consult your desk frame's manual for a list of error codes and their meanings.
    - Often, a power cycle (unplugging the desk for 30 seconds and plugging it back in) can resolve temporary errors.
- **Memory positions are not saving or recalling correctly:**
    - Ensure you are following the correct procedure for setting memory positions (adjust, press SET, then press memory button within the time limit).
    - If the issue persists, try resetting the desk system as described above and then re-program the memory positions.

If these steps do not resolve the issue, please contact customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	DPF1C00-012016
Brand	LINAK
Manufacturer	ETABLES
Connectivity	RJ45 Jack
Cable Length	62 Inches
Memory Positions	Up to 3
Display Type	LED in Inches
Mounting	90-degree mounting bracket included

## 8. WARRANTY INFORMATION

LINAK products are manufactured to high-quality standards. For specific warranty terms and conditions applicable to your DPF1C Desk Panel, please refer to the warranty documentation provided with your complete desk system or contact your LINAK dealer or the point of purchase. Warranty coverage typically includes defects in materials and workmanship under normal use.

## 9. CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need technical support, please contact your LINAK dealer or the retailer from whom you purchased the product. You may also visit the official LINAK website for additional resources and contact information.

