



[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach 10 Quart Stay or Go Slow Cooker (Model 33195) Instruction Manual

Hamilton Beach 33195

Hamilton Beach 10 Quart Stay or Go Slow Cooker (Model 33195) Instruction Manual

Model: 33195 | Brand: Hamilton Beach

1. IMPORTANT SAFEGUARDS

- Read all instructions before using the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated crock.
- The stoneware crock is designed for use only in this appliance. It must never be used on a stovetop or in an oven.

- Do not place a hot slow cooker on a wet or cold surface.

2. PRODUCT OVERVIEW

The Hamilton Beach 10 Quart Stay or Go Slow Cooker is designed for convenient, large-capacity slow cooking. Its extra-large size is ideal for family meals and entertaining, capable of holding a 10 lb. turkey or a 12 lb. roast. The unit features a clip-tight sealed lid to prevent spills during transport and full-grip handles for easy carrying. Simple controls allow for effortless meal preparation with three heat settings: Low, High, and Warm.



Image: The Hamilton Beach 10 Quart Stay or Go Slow Cooker, a large black oval appliance with a clear glass lid, shown on a kitchen counter.

3. SETUP

3.1 Unpacking and Initial Cleaning

1. Remove all packaging materials and any labels from the slow cooker.
2. Wash the stoneware crock and glass lid in hot, soapy water. Rinse thoroughly and dry. Alternatively, the removable stoneware crock and glass lid are dishwasher safe.
3. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.

3.2 Placement

- Place the slow cooker on a dry, level, heat-resistant surface, away from the edge of the counter.
- Ensure there is adequate ventilation around the appliance.

4. OPERATING INSTRUCTIONS

4.1 Controls and Settings

The Hamilton Beach Slow Cooker features a simple dial control with three temperature settings and an off position:

- **OFF:** Turns the appliance off.
- **KEEP WARM:** Maintains food at a serving temperature after cooking is complete.
- **LOW:** For slow cooking over a longer period.
- **HIGH:** For faster slow cooking.



Image: A person serving chili from the slow cooker, highlighting the dial with 'Keep Warm', 'Low', and 'High' settings.

4.2 Cooking Process

1. Place the stoneware crock into the heating base.
2. Add your ingredients to the stoneware crock. Do not overfill; leave at least 1 inch (2.5 cm) from

the top rim to allow for steam.

3. Place the glass lid securely on the crock.
4. Plug the slow cooker into a standard electrical outlet.
5. Turn the control dial to the desired setting (LOW or HIGH).
6. Cook for the recommended time according to your recipe.
7. Once cooking is complete, you may switch the dial to KEEP WARM until ready to serve.
8. To turn off, rotate the dial to OFF and unplug the unit.

4.3 Stay or Go Portable Feature

This slow cooker is designed for portability, making it easy to transport meals without spills.

- The lid clips tightly to the slow cooker handles to reduce messy spills when transporting food.
- The full-grip handles make it easy to lift and hold when carrying to the table or to gatherings.



Image: The Hamilton Beach Slow Cooker with its lid securely clipped, ready for transport in the back of a car, alongside other picnic items.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the slow cooker and allow it to cool completely before cleaning.

- The removable stoneware crock and glass lid are dishwasher safe for easy cleanup.
- To clean the heating base, wipe with a damp cloth and dry thoroughly. Do not immerse the heating base in water or any other liquid.
- Do not use abrasive cleaners or scouring pads on any part of the slow cooker.

Fast and easy cleanup

Removable stoneware crock
and glass lid are dishwasher safe



Image: The stoneware crock and glass lid of the slow cooker are shown separated from the heating base, illustrating their removable nature for easy cleaning.

5.2 Storage

- Ensure all parts are clean and dry before storing.
- Store the slow cooker in a cool, dry place.
- Due to its 10-quart capacity, ensure you have adequate storage space.

6. TROUBLESHOOTING

If your Hamilton Beach Slow Cooker is not operating as expected, please check the following:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet and the control dial is set to a cooking temperature (LOW or HIGH), not OFF or KEEP WARM.
- **Food not cooking properly:** Verify that the lid is properly seated on the crock. Ensure the correct temperature setting (LOW or HIGH) and cooking time are being used according to your recipe. Avoid frequently lifting the lid, as this can extend cooking times.
- **Lid not sealing tightly:** Check that the lid clips are properly engaged with the handles. Ensure

there is no food debris preventing a proper seal.

7. SPECIFICATIONS

Feature	Detail
Brand	Hamilton Beach
Model Number	33195
Capacity	10 Quarts
Wattage	450 watts
Voltage	110 Volts
Product Dimensions (D x W x H)	12.5"D x 15.75"W x 11.5"H
Item Weight	15.66 Pounds
Material	Glass, Stoneware
Control Type	Knob
Number of Settings	3 (Warm, Low, High)
Dishwasher Safe Components	Stoneware Crock, Glass Lid

Hamilton Beach®



Stay or Go® 10 Quart Slow Cooker

Image: A diagram showing the dimensions of the Hamilton Beach 10 Quart Stay or Go Slow Cooker: 18.5 inches wide, 12.2 inches deep, and 11.8 inches high.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Hamilton Beach Slow Cooker (Model 33195) comes with a **One (1) Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, assistance, or to register your product, please visit the official Hamilton Beach website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.