

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yamaha](#) /

› [Yamaha P45 88-Key Weighted Digital Piano Home Bundle Instruction Manual](#)

## Yamaha P45LXB

# Yamaha P45 88-Key Weighted Digital Piano Home Bundle

INSTRUCTION MANUAL

Model: P45LXB

## INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your Yamaha P45 88-Key Weighted Digital Piano Home Bundle. Please read this manual thoroughly to ensure safe and optimal use of your instrument.



*The Yamaha P45 88-Key Weighted Digital Piano Home Bundle, including the digital piano, wooden furniture stand, and padded bench.*

## WHAT'S IN THE BOX

Your Yamaha P45 Home Bundle includes the following components:

- Yamaha P45 88-Key Weighted Digital Piano
- Wooden Furniture Stand (L85)
- Padded Collapsible Keyboard Bench (PKBB1)
- Sustain Pedal
- Power Supply (PA-150 power adapter)
- Music Rest

## SETUP

### Assembly of the Wooden Furniture Stand


Carefully unpack all components. Assemble the wooden furniture stand according to the instructions provided in the stand's manual. Ensure all screws are securely fastened for stability. The digital piano unit then rests securely on top of the assembled stand.

## Connecting Components

1. **Power Supply:** Connect the PA-150 power adapter to the DC IN 12V port on the rear of the digital piano and then to a standard electrical outlet.
2. **Sustain Pedal:** Plug the sustain pedal into the dedicated SUSTAIN port on the rear panel.
3. **Headphones:** For private practice, connect standard headphones to the HEADPHONES jack.
4. **Music Rest:** Insert the music rest into the designated slots on the top panel of the piano.



*Rear view of the Yamaha P45 Digital Piano, highlighting the various connectivity ports including DC IN, Headphones, and Sustain Pedal.*

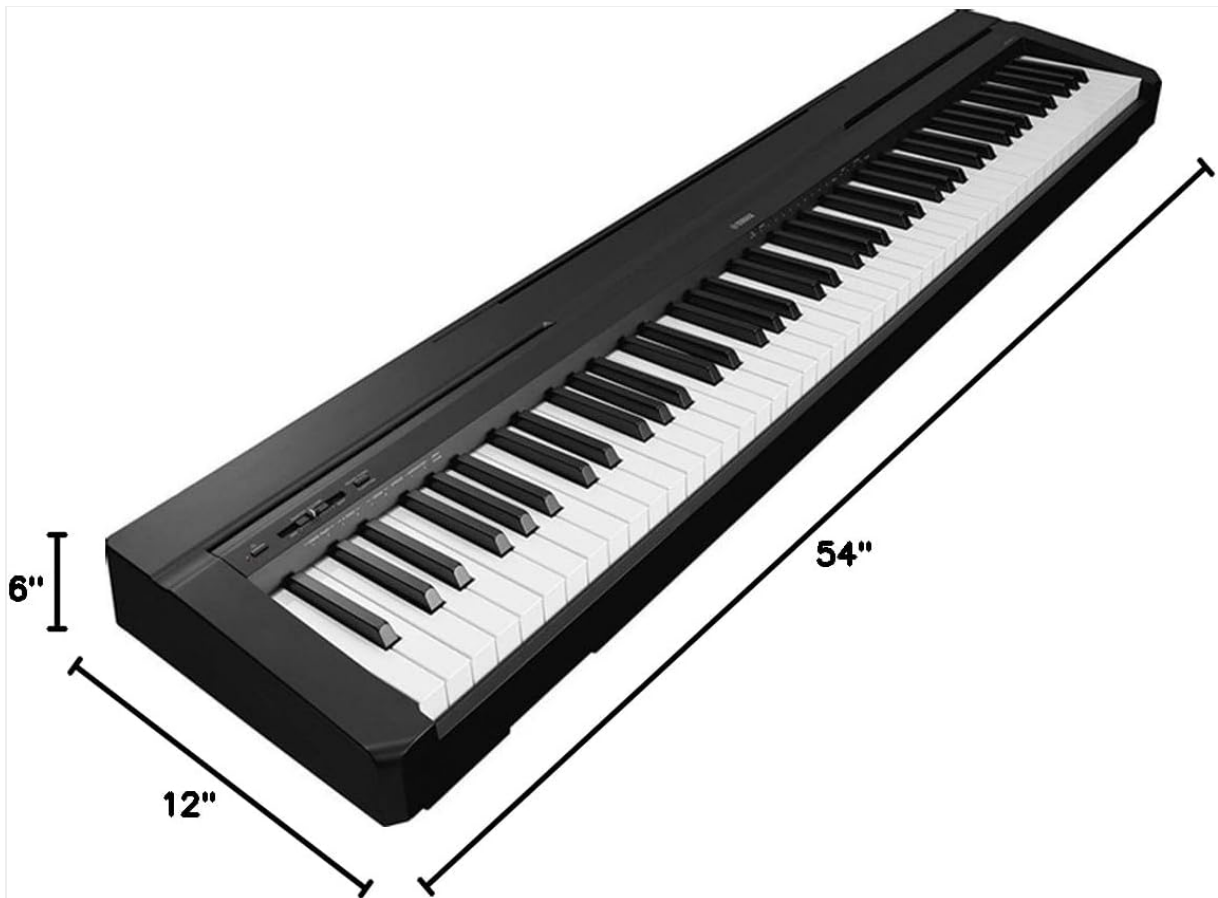

*Diagram illustrating the dimensions of the Yamaha P45 Digital Piano: 12 inches deep, 54 inches wide, and 6 inches high.*

## OPERATING INSTRUCTIONS

### Power On/Off and Volume

Locate the power button and master volume slider on the top left panel of the piano. Press the power button to turn the instrument on or off. Adjust the master volume slider to your desired listening level.

### Voice Selection

The Yamaha P45 features 10 preset voices. To select a voice, press and hold the 'GRAND PIANO/FUNCTION' button, then press one of the keys from A0 to A1 (the lowest octave) corresponding to the desired voice. The available voices include Grand Piano (2 variations), Electric Piano (2 variations),

Organ (2 variations), Strings, Harpsichord, and Vibraphone.

### Weighted Action Keys

The 88-key Graded Hammer Standard (GHS) keyboard provides a realistic acoustic piano feel, with heavier touch in the lower register and lighter touch in the higher register. This touch sensitivity can be adjusted (Hard/Medium/Soft/Fixed) via the function settings.

### Metronome and Tempo

Activate the built-in metronome by pressing the 'METRONOME' button. Adjust the tempo using the '+' and '-' buttons. The tempo range is 32 to 280 beats per minute.

### Connectivity (USB TO HOST)

The USB TO HOST port allows connection to a computer or mobile device for use with various educational, music creation, or entertainment applications. This enables MIDI data transfer.



*Top view of the Yamaha P45 Digital Piano, showcasing the 88 weighted keys and the control panel for power, volume, and function selection.*

## MAINTENANCE

---

To ensure the longevity and optimal performance of your digital piano, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface of the piano and stand with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or polishes that may damage the finish.
- **Storage:** Store the instrument in a stable environment, away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** When moving the piano, ensure it is properly supported to prevent damage to the unit or the stand.

## TROUBLESHOOTING

---

If you encounter any issues with your Yamaha P45 Digital Piano, consider the following common solutions:

- **No Sound:** Check if the power is on and the volume is turned up. Ensure headphones are not plugged in if you intend to use the internal speakers. Verify all cables are securely connected.
- **Keys Not Responding:** Ensure the instrument is powered on. If specific keys are unresponsive, consult a qualified technician.
- **Distorted Sound:** Lower the volume. Check for any interference from other electronic devices.

For persistent issues, please refer to the full user manual or contact Yamaha customer support.

## SPECIFICATIONS

---

Feature	Specification
Number of Keys	88
Key Type	Graded Hammer Standard (GHS) Weighted Action
Touch Sensitivity	Hard/Medium/Soft/Fixed
Piano Sound	AMW Stereo Sampling
Polyphony (Max.)	64 notes
Preset Voices	10
Effects	Reverb (four types)
Functions	Dual/Layers, Duo
Metronome	Yes (Tempo Range: 32-280)
Transpose	-6 to 0, 0 to +6
Tuning	414.8 - 440.0 - 446.8 Hz
Connectivity	DC IN 12V, Headphones (Standard), Sustain Pedal, USB TO HOST
Power Consumption	6 W (using PA-150 power adapter)
Product Dimensions	12"D x 54"W x 6"H
Item Weight	70.9 Pounds (approximate for bundle)
Color	Black

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Yamaha website. Protection plans may be available for extended coverage.

## ADDITIONAL RESOURCES

No official seller videos are available for this product. Please refer to the written instructions and diagrams for comprehensive guidance.