



Manuals.plus /

› GOTHAM STEEL /

› Gotham Steel Air Fryer XL 3.8 Liter Instruction Manual - Model 2048

GOTHAM STEEL 2048

Gotham Steel Air Fryer XL 3.8 Liter Instruction Manual

Model: 2048

1. INTRODUCTION

The Gotham Steel Air Fryer XL 3.8 Liter is designed to provide a healthier method for preparing your favorite fried foods. Utilizing rapid air technology, this appliance circulates superheated air to cook food, resulting in a crispy exterior and tender interior with significantly less oil compared to traditional frying methods.

This air fryer features a nonstick copper coating for easy food release and simplified cleaning. Its versatile design allows for various cooking tasks beyond frying, including roasting and baking.



Figure 1: Gotham Steel Air Fryer XL 3.8 Liter with crispy fried food.

2. SAFETY INFORMATION

- Always place the air fryer on a stable, heat-resistant surface.
- Ensure adequate ventilation around the appliance during operation. Do not block air vents.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep hands and face clear of hot air vents when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Allow the appliance to cool completely before handling or cleaning parts.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the detachable drawer and frying basket with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.

3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface, ensuring at least 4 inches of space from walls or other appliances to allow for proper air circulation.
4. **Assemble:** Insert the frying basket into the detachable drawer, then slide the drawer back into the main unit until it clicks securely into place.
5. **Power:** Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your desired food items into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Set Temperature:** Use the adjustable temperature control dial to select the desired cooking temperature, up to 400°F.
3. **Set Timer:** Turn the timer dial to set the required cooking time. The air fryer will automatically shut off when the timer reaches zero.
4. **Cooking:** The air fryer will begin heating once the timer is set. The rapid air technology will circulate hot air to cook your food.
5. **Shaking (Optional):** For some foods, such as French fries, shaking the basket halfway through the cooking process can promote more even browning. Carefully pull out the drawer, shake the contents, and reinsert. The air fryer will resume cooking.
6. **Completion:** Once the timer sounds, carefully pull out the drawer and remove the cooked food.

Cooking Guide / Presets

The top of the air fryer features a convenient cooking guide with recommended temperatures and times for various food types. These are general guidelines and may need adjustment based on food quantity and desired crispness.

- **Steak:** 350°F (180°C) for 15-20 minutes
- **French Fries:** 400°F (200°C) for 15-22 minutes
- **Chicken:** 350°F (180°C) for 18-25 minutes
- **Fish:** 350°F (180°C) for 8-14 minutes
- **Cupcakes:** 400°F (200°C) for 15-18 minutes



**CIRCULATES
AIR TO SPEED
COOKING**

**HALOGEN
TRIPLE COOKING
POWER**

**CONVECTION
DIRECTLY HEATS
THE SURFACE**

**INFRARED
HEAT
COOKS FOOD
FROM INSIDE OUT**

**SETTINGS
TEN OPTIONS**

**CAPACITY
2.5 QTS / 3.8 LTR**

Figure 2: Control panel with integrated cooking guide.

Rapid Air Technology

The Gotham Steel Air Fryer utilizes Rapid Air Technology, which circulates hot air with speed and precision. This ensures even cooking and creates a crispy texture without the need for excessive oil.

**RAPID AIR
TECHNOLOGY
CIRCULATES
HOT AIR WITH
SPEED AND
PRECISION**

**EASY
CLEANUP
DISH
WASHER
SAFE**



**NON-STICK
DETACHABLE
DRAWER
AND BASKET**

Figure 3: Illustration of Rapid Air Technology in action.

Official Product Videos

Your browser does not support the video tag.

Video 1: Overview of the Gotham Steel Air Fryer's features and benefits.

Your browser does not support the video tag.

Video 2: Demonstration of the Gotham Steel Air Fryer in use.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Gotham Steel Air Fryer. The nonstick copper coating facilitates easy cleaning.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Detachable Parts:** The detachable drawer and frying basket are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or

immerse the main unit in water.

4. **Interior:** The interior can be wiped with a damp cloth. For stubborn residue, use a mild detergent and a soft brush.
5. **Fat Draining Design:** The perforated air basket is designed to drain excess fats and oils, contributing to healthier cooking and easier cleanup.

6. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the drawer is fully inserted and clicked into place.
- **Food Not Cooking Evenly:** Do not overfill the basket. Shake the basket contents halfway through cooking. Adjust temperature or time as needed.
- **White Smoke from Appliance:** This may indicate that fatty ingredients are cooking. Ensure the basket and drawer are clean and free of excess grease from previous use.
- **Timer Numbers Wearing Off:** Some users have reported this issue. While it does not affect functionality, it is a known cosmetic concern.

7. SPECIFICATIONS

Feature	Detail
Brand	GOTHAM STEEL
Model Number	2048
Capacity	3.8 Liters (4 Quarts)
Product Dimensions	18"D x 14"W x 14"H
Item Weight	4.18 Kilograms (9.2 pounds)
Color	Black
Material	Aluminum (Interior), Alloy Steel (Outer)
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Wattage	1000 watts
Voltage	110 Volts
Special Feature	Programmable
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket, Drawer)
Air Frying Technology	Rapid Air Technology

8. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the contact details provided in your product packaging or visit the official GOTHAM STEEL website. Keep your purchase receipt as proof of purchase for warranty claims.