

Manuals+


[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crayola](#) /

› [Crayola Triple The Fun Art Studio Instruction Manual](#)

Crayola 5082-03

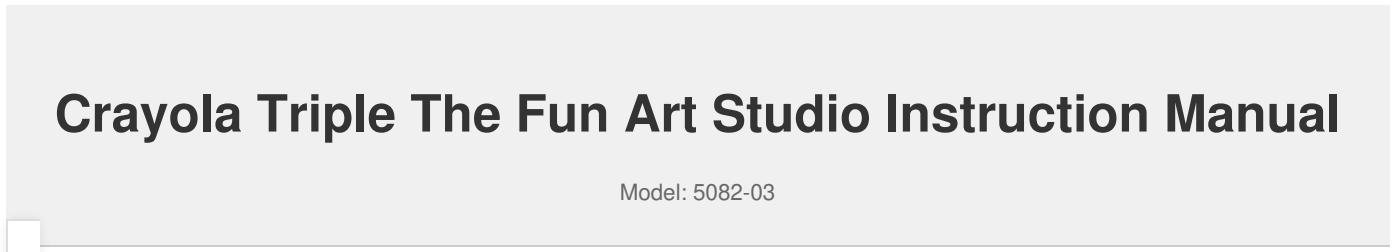

The image shows the front cover of the 'Crayola Triple The Fun Art Studio Instruction Manual'. The cover is white with a grey header section. The title 'Crayola Triple The Fun Art Studio Instruction Manual' is printed in a large, bold, dark grey sans-serif font. Below the title, the model number 'Model: 5082-03' is printed in a smaller, grey font. The rest of the cover is blank white space.

INTRODUCTION

The Crayola Triple The Fun Art Studio is a versatile art station designed for young artists. It features a magnetic whiteboard, a chalkboard, and an activity desk with a stool, providing multiple creative options. This manual provides essential information for setup, operation, maintenance, and safety to ensure a fun and safe experience.

SAFETY INFORMATION

This table was made for **INDOOR** use. **DO NOT** attempt to use or expose the unit outdoors. The board is weather sensitive; any wetness or excessive dampness will ruin the board. **DO NOT** use any Spray or Dry-Erase cleaners on the board, as this may cause damage. Treat the board surface with care; **DO NOT** use sharp pointed objects on the drawing surface. Scratching the surface will cause permanent damage. Completely erase the board surfaces before storing easel for an extended period of time. Eraser can be used for chalkboard surfaces. If there is some hard-to-erase ink/chalk left on the board or chalkboard surface, use a slightly damp sponge (or paper towel) and wipe the board clean. Any excessive water may damage the board. Chalkboard must be treated seasoned prior to use. To season: Hold Crayola® Anti-Dust® or school chalk on the flat side (not the point side) and using broad flat strokes, coat the board both horizontally then vertically, making sure to cover the entire board surface. Wipe off the chalk with a slightly damp sponge (or paper towel). Crayola® Anti-Dust® or school chalk (calcium carbonate based) is recommended for use on the chalkboard surface. **DO NOT** use Crayola® Sidewalk Chalk or other 'street chalk' as it contains abrasives that will damage the board.

WHAT'S IN THE Box

- Crayola Triple The Fun Art Studio playset
- 1 Stool

Note: Additional art supplies such as markers, crayons, and chalk are sold separately unless otherwise specified on product packaging.

SETUP

The Crayola Triple The Fun Art Studio includes assembly instructions within its packaging. Please refer to these

instructions for detailed, step-by-step guidance on assembling the easel, activity desk, and stool. Ensure all components are securely fastened before use.



Image: The Crayola Triple The Fun Art Studio configured as an activity desk with a child-sized stool. The desk surface is blue, and the legs are yellow and blue. A red tray for art supplies is visible at the back of the desk.

OPERATING INSTRUCTIONS

Converting Between Easel and Desk Modes (Qwikflip® Design)

The Art Studio features a Qwikflip® design, allowing easy conversion between an upright easel and a flat activity desk. To convert, carefully release the locking mechanism (refer to specific assembly instructions for exact location) and pivot the drawing surface to the desired position. Ensure it locks securely into place for stability.



Image: A young child seated on the blue and yellow stool, coloring on the blue activity desk surface of the Crayola Art Studio. Art supplies are in the red tray behind the desk.





Image: A young child standing at the Crayola Art Studio in easel mode, drawing on the magnetic whiteboard surface. The easel is blue and yellow, with a red tray for art supplies.



Image: The Crayola Triple The Fun Art Studio in easel mode, showing the magnetic whiteboard surface with colorful magnetic letters and butterfly decorations. A red tray holds art supplies below the board.

Using the Magnetic Whiteboard

The whiteboard surface is magnetic and suitable for dry-erase markers. Use dry-erase markers for drawing and writing directly on the surface. Magnetic letters, numbers, or other magnetic accessories can be placed on the board for interactive learning and play. A clip at the top allows for securing paper for drawing or painting.



Image: A pile of colorful magnetic letters and numbers, along with a black eraser, on a white background, representing accessories for the magnetic whiteboard.

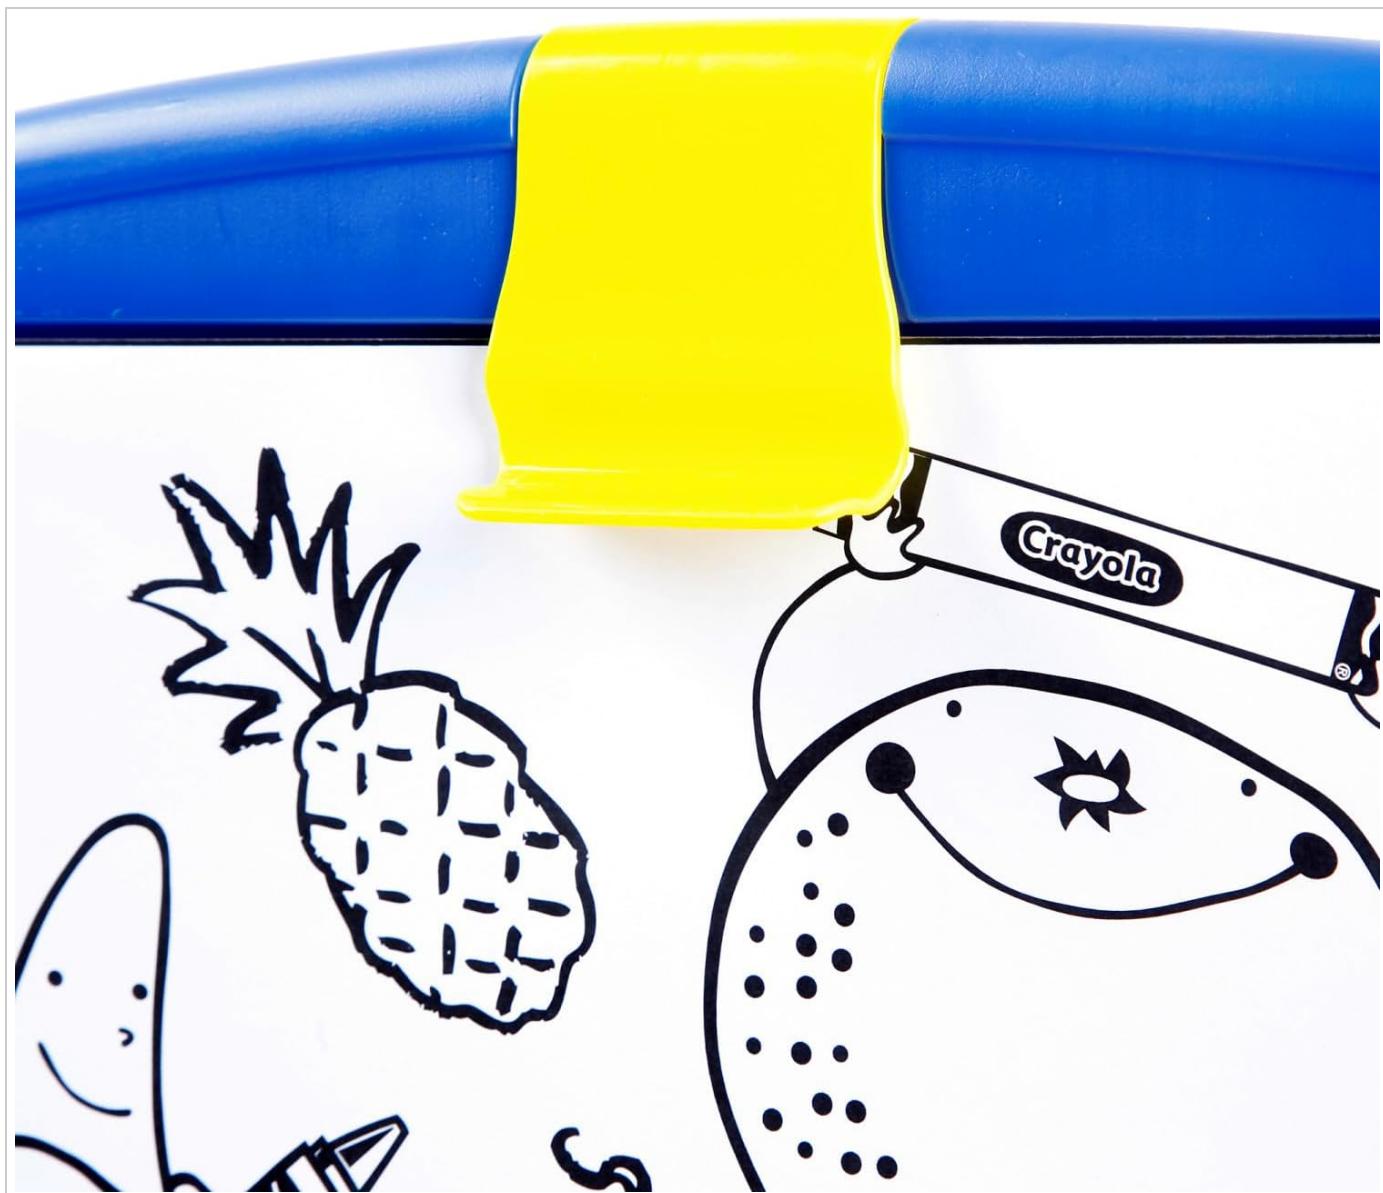


Image: A close-up of the yellow clip at the top of the easel, holding a piece of paper with a drawing. The Crayola logo is visible on the paper.

Using the Chalkboard

The reverse side of the drawing surface is a chalkboard. Use Crayola® Anti-Dust® or school chalk (calcium carbonate based) for best results. **DO NOT** use Crayola® Sidewalk Chalk or other 'street chalk' as it contains abrasives that will damage the board. Refer to the "Maintenance and Care" section for instructions on seasoning the chalkboard prior to first use.

Activity Desk and Stool

In desk mode, the flat surface provides a comfortable area for drawing, coloring, or other activities. The included stool is designed for young children to sit comfortably while engaging with the desk. The integrated storage tray keeps art supplies organized and within reach.



Image: A young girl sitting on the blue and yellow stool, engaged in coloring on a piece of paper placed on the blue activity desk of the Crayola Art Studio.



Image: Two children, a boy and a girl, happily drawing on opposite sides of the Crayola Triple The Fun Art Studio in easel mode. The girl is on the whiteboard side, and the boy is on the chalkboard side.

Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing the features and versatility of the Crayola Triple-the-Fun Art Studio, demonstrating its conversion from easel to desk and use by children.

MAINTENANCE AND CARE

This table was made for **INDOOR** use. **DO NOT** attempt to use or expose the unit outdoors. The board is weather sensitive; any wetness or excessive dampness will ruin the board. **DO NOT** use any Spray or Dry-Erase cleaners on the board, as this may cause damage. Treat the board surface with care; **DO NOT** use sharp pointed objects on the drawing

surface. Scratching the surface will cause permanent damage. Completely erase the board surfaces before storing easel for an extended period of time. Eraser can be used for chalkboard surfaces. If there is some hard-to-erase ink/chalk left on the board or chalkboard surface, use a slightly damp sponge (or paper towel) and wipe the board clean. Any excessive water may damage the board. Chalkboard must be treated seasoned prior to use. To season: Hold Crayola® Anti-Dust® or school chalk on the flat side (not the point side) and using broad flat strokes, coat the board both horizontally then vertically, making sure to cover the entire board surface. Wipe off the chalk with a slightly damp sponge (or paper towel). Crayola® Anti-Dust® or school chalk (calcium carbonate based) is recommended for use on the chalkboard surface. **DO NOT** use Crayola® Sidewalk Chalk or other 'street chalk' as it contains abrasives that will damage the board.

TROUBLESHOOTING

If you encounter any issues with your Crayola Triple The Fun Art Studio, please review the assembly instructions to ensure all parts are correctly installed. For persistent problems, refer to the manufacturer's contact information for support.

SPECIFICATIONS

Feature	Detail
Item Dimensions (L x W x H)	18.3 x 17.7 x 32.9 inches
Material	Plastic
Item Weight	7.7 pounds
Model Number	5082-03
Recommended Age	3 years and up
Special Feature	Includes 1 stool, Qwikflip® Design
UPC	833186009877

WARRANTY AND SUPPORT

For warranty information or customer support, please contact Grow'n Up INC, the manufacturer, directly. Contact details can typically be found on the product packaging or their official website.