

Andoer PEI0926439588854SH

Andoer NP-F970 Battery Plate Instruction Manual

Model: PEI0926439588854SH

1. OVERVIEW

The Andoer NP-F970 Battery Plate is designed to be used with Neweer dual-channel and four-channel battery chargers. This plate allows for the secure connection of various NP-F series batteries, including NP-F550, F750, F950, NP-FM50, FM500H, and QM71, to power your camera equipment. It features a robust design for reliable performance and includes an indicator to monitor battery charge status.



Figure 1: Two Andoer NP-F970 Battery Plates

2. PACKAGE CONTENTS

Upon opening the package, ensure all items are present:

- 2 x Andoer NP-F970 Battery Plates

Note: Batteries and charger are not included with the battery plates.



Figure 2: Andoer NP-F970 Battery Plate in packaging

3. SETUP

To prepare your Andoer NP-F970 Battery Plates for use, follow these steps:

1. **Identify Compatible Charger:** Ensure you have a Neweer dual-channel or four-channel battery charger designed for NP-F series batteries.
2. **Attach Battery Plate:** Align the battery plate with the designated slot on your compatible charger. Gently slide the plate into place until it clicks securely. Repeat for the second plate if using a dual-channel charger.

3. **Insert Battery:** Insert a compatible NP-F series battery (e.g., NP-F550, F750, F950, NP-FM50, FM500H, QM71) into the battery plate. Ensure it is firmly seated.



Figure 3: Battery Plates installed on a charger

4. OPERATING INSTRUCTIONS

Once the battery plates are installed and batteries are inserted, the charger will begin its operation. The plates are designed to work seamlessly with the charger's existing functions.

- **Charge Monitoring:** The battery plates allow the charger to display the exact charge level of the inserted batteries, helping you predict when charging will complete.
- **Battery Removal:** To remove a battery, gently press the release button (if present on your battery or charger) and slide the battery out of the plate.



Figure 4: Close-up of a single battery plate

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your battery plates:

- **Cleaning:** Use a soft, dry cloth to clean the battery plates. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the battery plates in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Inspection:** Periodically inspect the connection points for any signs of wear or damage.

6. TROUBLESHOOTING

If you encounter issues with your Andoer NP-F970 Battery Plates, refer to the following common solutions:

- **Battery Not Charging:**
 - Ensure the battery plate is correctly installed on the charger.
 - Verify the battery is properly seated in the plate and making good contact.
 - Check if the charger itself is powered on and functioning correctly.
 - Confirm the battery is compatible with the plate and charger.
- **Charge Indicator Malfunction:**
 - This function relies on the charger. Ensure the charger's display is working.
 - Remove and re-insert the battery to reset the connection.
- **Plate Not Fitting Securely:**
 - Double-check that the plate type (NP-F970) matches the charger's specifications.

- Inspect for any obstructions or damage to the plate or charger slot.

If problems persist, contact Andoer customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.94 x 2.76 x 0.71 inches
Item Weight	0.529 ounces (15 Grams)
Compatible Battery Types	NP-F550, F750, F950, NP-FM50, FM500H, QM71, etc.
Output Voltage (Charger Dependent)	8.4 Volts
Input Voltage (Charger Dependent)	240 Volts
Model Number	PEI0926439588854SH
ASIN	B07DLQD1M4
UPC	635946894392

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or visit the official Andoer website. You may also contact Andoer customer service directly for assistance with your NP-F970 Battery Plates.