

[manuals.plus](#) /› [WINFLIKE](#) /› **WINFLIKE Universal TV Remote Control BN59-01199F Instruction Manual for Samsung Smart TVs**

WINFLIKE BN59-01199F

WINFLIKE Universal TV Remote Control BN59-01199F Instruction Manual

Model: BN59-01199F | Brand: WINFLIKE

INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE Universal TV Remote Control, model BN59-01199F. This remote is designed as a direct replacement for various Samsung Smart TV models, offering immediate functionality without the need for complex programming or pairing. Simply install batteries to begin use.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible Samsung TVs.





Image Description: A view of the remote control's back, showing the open battery compartment ready for two AAA batteries. The battery cover is shown detached next to it, illustrating the installation process.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Samsung Smart TVs. No programming or pairing is required. Point the remote directly at your television and press the desired function button.



Image Description: A clear, angled view of the WINFLIKE BN59-01199F remote control, highlighting all buttons and their labels for easy identification.

Key Functions:

- **Power (Red Button):** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Volume Up/Down (+/- VOL):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes TV channels sequentially.
- **Mute:** Silences the TV audio.
- **Source:** Selects input sources (HDMI, AV, etc.).

- **Menu:** Accesses the TV's main menu.
- **Smart Hub:** Opens the Samsung Smart Hub for apps and streaming services.
- **Guide:** Displays the electronic program guide.
- **Info:** Shows information about the current program.
- **Directional Pad (Up, Down, Left, Right, Enter):** Navigates menus and selects options.
- **Return:** Goes back to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Colored Buttons (A, B, C, D):** Functionality varies by TV model and application, often used for specific features or interactive services.
- **E-Manual:** Accesses the TV's electronic manual.
- **Sports:** Quick access to sports-related content (if supported by TV).
- **CC (Closed Caption):** Toggles closed captions.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.

COMPATIBILITY

This WINFLIKE remote control (model BN59-01199F) is compatible with a wide range of Samsung Smart TV models. It is designed to replace original remotes such as BN59-01199K, BN59-01199L, BN59-01199G, and BN59-01199S. Below is a list of some compatible Samsung TV models:

- UN32J4500AF, UN32J4500AFXZA, UN32J5205AF, UN32J5205AFXZA, UN32J525DAF, UN32J525DAFXZA
- UN40J5200AF, UN40J5200AFXZA, UN40J520DAF, UN40J520DAFXZA, UN40J6200AF, UN40J6200AFXZA, UN40JU6400FXZA, UN40JU650DF, UN40JU640DAFXZA, UN40JU640DFXZA
- UN43J5200AF, UN43J5200AFXZA, UN43J520DAF, UN43J520DAFXZA, UN43JU640DF, UN43JU640DFXZA
- UN48J5200AF, UN48J5200AFXZA, UN48J5201AF, UN48J5201AFXZA, UN48J520DAF, UN48J520DAFXZA, UN48J6200AF, UN48J6200AFXZA, UN48J620DAF, UN48J620DAFXZA, UN48JU6400F, UN48JU6400FXZA, UN48JU640DF, UN48JU640DFXZA
- UN50J5200AF, UN50J5200AFXZA, UN50J520DAF, UN50J520DAFXZA, UN50J520DFXZA, UN50J6200AF, UN50J6200AFXZA, UN50J620DAF, UN50J620DAFXZA
- UN55J6200AF, UN55J6200AFXZA, UN55J6201AF, UN55J6201AFXZA, UN55J620DAF, UN55J620DAFXZA, UN55JU6400F, UN55JU6400FXZA, UN55JU640DF, UN55JU640DFXZA
- UN60J6200AF, UN60J6200AFXZA, UN60J620DAF, UN60J620DAFXZA, UN60JU6400F, UN60JU6400FXZA
- UN65J6200AF, UN65J6200AFXZA, UN65J620DAF, UN65J620DAFXZA, UN65JU6400F, UN65JU6400FXZA, UN65JU640DAFXZA, UN65JU640DF, UN65JU640DFXZA

This list is not exhaustive. If your Samsung TV model is not listed, but uses one of the original remote models (BN59-01199K, BN59-01199L, BN59-01199G, BN59-01199S), this remote may still be compatible.

SPECIFICATIONS

Feature	Detail
Model Number	BN59-01199F

Feature	Detail
Brand	WINFLIKE
Connectivity Technology	Infrared
Compatible Devices	Television (Samsung Smart TVs)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.5 inches
Item Weight	2 ounces
Special Feature	Ergonomic, Universal (for specified Samsung models)

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed with the correct polarity (+/-). Replace old batteries with new AAA batteries.
- **Intermittent response:** Check for any obstructions between the remote control and the TV's infrared receiver. Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Specific buttons not working:** While this remote is designed for broad compatibility, some advanced functions or smart features may vary in behavior depending on your specific Samsung TV model. Refer to your TV's original manual for specific feature compatibility.

WARRANTY AND SUPPORT

This product is designed for reliability and ease of use. For any issues or questions regarding your WINFLIKE Universal TV Remote Control, please contact the seller directly for assistance. While specific warranty details are not provided in this manual, customer support is available to help resolve any operational concerns. For further assistance, please refer to the contact information provided at the point of purchase.