

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Samsonite](#) /
- › [Samsonite Travel Garment Bag \(Model 106373/1041\) User Manual](#)

Samsonite 106373/1041

Samsonite Travel Garment Bag User Manual

Model: 106373/1041

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Samsonite Travel Garment Bag, Model 106373/1041. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.





Figure 1: Samsonite Travel Garment Bag in use, demonstrating its compact and portable design when carried over the shoulder.

SETUP

Your Samsonite Travel Garment Bag is designed for immediate use. Follow these steps to prepare it for travel:

1. **Unpack:** Remove the garment bag from its packaging.
2. **Unfold:** Lay the bag flat on a clean surface. Unclip any external buckles and unzip the main compartment to fully open the bag.
3. **Hang Garments:** Place your garments on hangers and secure them inside the main compartment using the internal hanging mechanism.
4. **Utilize Pockets:** Distribute smaller items, accessories, and toiletries into the various internal and

external pockets.

5. **Fold and Secure:** Carefully fold the garment bag according to its design (e.g., tri-fold). Secure external buckles and zippers to keep the bag compact and protected.





Figure 2: The garment bag fully unfolded, showcasing the main compartment for hanging clothes and various internal pockets for organization.

OPERATION

The Samsonite Travel Garment Bag offers several features for convenient travel:

- **Garment Protection:** The main compartment is designed to keep suits, dresses, and other formal wear wrinkle-free during transit.
- **Padded Compartments:** Utilize the dedicated padded compartment for laptops or tablets to ensure their safety.
- **RFID Protected Pocket:** Store passports, credit cards, and other sensitive items in the RFID-protected pocket to prevent electronic theft.
- **Easy Pass System:** The Easy Pass system allows electronic devices to remain inside the bag while charging. A dedicated power bank pocket is provided for this purpose.
- **External Pockets:** The top zipped service pocket and other external pockets provide quick access to essential items like travel documents or small accessories.
- **Carrying Options:** Use the integrated top handle for hand carrying or attach a shoulder strap (if included) for hands-free transport. The bag also features a smart sleeve to slide over a luggage handle for easier transport with wheeled luggage.





Figure 3: The garment bag in its folded state, showing the side profile and securing buckles, ready for transport.

MAINTENANCE

To ensure the longevity and appearance of your garment bag, follow these maintenance guidelines:

- **Cleaning:** For general cleaning, wipe the exterior with a damp cloth and mild soap. Do not machine wash or submerge the bag in water.

- **Spot Cleaning:** For stubborn stains, use a specialized fabric cleaner suitable for ballistic nylon, testing on an inconspicuous area first.
- **Drying:** Allow the bag to air dry completely before storing. Do not use direct heat sources.
- **Storage:** Store the garment bag in a cool, dry place away from direct sunlight when not in use.
- **Zipper Care:** Periodically check zippers for debris and lubricate with a zipper lubricant if they become stiff.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Zippers are stiff or stuck.	Dirt, debris, or lack of lubrication.	Clean the zipper teeth with a small brush. Apply a zipper lubricant (e.g., wax or silicone spray).
Garments are wrinkled upon arrival.	Overpacking, improper folding, or heavy items pressing on clothes.	Ensure garments are properly hung and folded. Avoid overpacking.
Bag appears dirty or stained.	Exposure to dirt, spills, or general wear.	Refer to the "Maintenance" section for cleaning instructions.

SPECIFICATIONS

- **Model Number:** 106373/1041
- **Product Dimensions:** 21.65 x 7.87 x 15.75 inches (55 x 20 x 40 cm)
- **Weight:** 3.53 Pounds (1.6 kg)
- **Material:** Ballistic Nylon
- **Color:** Black
- **Manufacturer:** SAMSONITE
- **ASIN:** B07DM159HF



Figure 4: Rear view of the garment bag, highlighting the smart sleeve designed to fit over the handle of a larger rolling suitcase for combined travel.

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the official Samsonite website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Samsonite Official Website: www.samsonite.com

Customer Service: Refer to the website for regional contact details.