

Manuals.plus /

- › Bosch /
- › Bosch Microwave Glass Turntable Tray Instruction Manual

Bosch 00792452

Bosch Microwave Glass Turntable Tray Instruction Manual

Model: 00792452

INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of your Bosch 00792452 Microwave Glass Turntable Tray. This genuine Original Equipment Manufacturer (OEM) part is designed to ensure optimal performance and compatibility with specified Bosch microwave and convection oven models.



Image: The Bosch 00792452 Microwave Glass Turntable Tray, a clear circular glass plate.

COMPATIBILITY AND SETUP

Before installing the new turntable tray, it is crucial to verify compatibility with your specific microwave model. Many replacement parts may appear similar but are not interchangeable. Always confirm your microwave's model number against the list of compatible models provided below or in your appliance's original documentation.



Does your part fit?

Many replacement parts look the same but won't fit your model.

Don't be fooled!

Check your model number before you buy.

Image: A visual reminder to check part compatibility, featuring a stop sign and text "Does your part fit? Check your model number before you buy."

Installation Steps:

1. **Unplug the Microwave:** For safety, always disconnect the microwave oven from the power outlet before performing any maintenance or installation.
2. **Remove Old Turntable (if applicable):** Carefully lift out the old or broken turntable tray and the turntable support ring/roller guide from the microwave cavity.
3. **Clean Microwave Cavity:** Wipe down the inside of the microwave, especially the area where the turntable support rests, to remove any food debris or spills.
4. **Place Turntable Support:** Ensure the turntable support ring/roller guide is correctly positioned in the center of the

microwave cavity. The rollers should be clean and move freely.

5. **Install New Turntable Tray:** Carefully place the new Bosch 00792452 glass turntable tray onto the turntable support. Ensure the center hub of the tray aligns properly with the coupler in the microwave cavity. The tray should sit flat and rotate smoothly when gently spun by hand.
6. **Reconnect Power:** Plug the microwave oven back into the power outlet.
7. **Test Functionality:** Place a microwave-safe container with a small amount of water on the turntable and run the microwave for 30 seconds to ensure the turntable rotates correctly.

Compatible Models:

This turntable tray is compatible with the following Bosch microwave and convection oven models:

- HMB57152UC/01, HMB57152UC/04, HBL57M52UC/01
- HMB50152UC/01, HMB50152UC/02, HMB50152UC/03, HMB50152UC/04, HMB50152UC/05, HMB50152UC/06, HMB50152UC/07
- HMB50162UC/01, HMB50162UC/02, HMB50162UC/03, HMB50162UC/04, HMB50162UC/05
- HMV5052U/01, HMV5052U/02, HMV5053U/01
- HMV8052U/01, HMV8052U/02, HMV8053U/01
- HMVP052U/01, HMVP052U/02, HMVP053U/01, HMVP053U/02

Note: This list may not be exhaustive. Always refer to your appliance's specific model number.

OPERATING INSTRUCTIONS

The Bosch glass turntable tray is designed to rotate food evenly during microwave cooking, ensuring consistent heating. To operate:

1. Place food or a microwave-safe dish containing food directly onto the center of the glass turntable tray.
2. Ensure the dish does not obstruct the rotation of the tray.
3. Close the microwave door and select your desired cooking settings.
4. The turntable will automatically rotate during the cooking cycle.

Do not operate the microwave without the turntable tray and its support properly in place, as this can damage the appliance.

MAINTENANCE AND CARE

Regular cleaning of the turntable tray and its support will help maintain hygiene and ensure smooth operation.

- **Daily Cleaning:** After each use, wipe the turntable tray with a damp cloth to remove any food splatters.
- **Deep Cleaning:** For stubborn stains or spills, the glass turntable tray can be removed and washed by hand with warm, soapy water. It is also typically dishwasher-safe, but refer to your microwave's main instruction manual for specific care instructions.
- **Turntable Support:** Periodically clean the turntable support ring and the area beneath it to prevent debris buildup that could impede rotation.
- **Handling:** Handle the glass tray with care to prevent chipping or breakage. Avoid dropping it or placing heavy, unbalanced items on it.

TROUBLESHOOTING

If you encounter issues with your turntable tray, consider the following common solutions:

- **Turntable Not Rotating:**

- Ensure the turntable tray is correctly seated on the turntable support and the center hub is aligned with the motor coupler.
- Check if the turntable support ring/roller guide is clean and free of debris.
- Verify that the microwave is plugged in and receiving power.
- If the issue persists, the microwave's turntable motor or coupler may be faulty, requiring professional service.

- **Tray Wobbles or Makes Noise:**

- Ensure the turntable tray is clean and free of food particles on its underside or on the support rollers.
- Check for any damage to the turntable support ring or the glass tray itself. A cracked or chipped tray should be replaced.
- Ensure the items placed on the tray are centered and balanced.

- **Food Not Heating Evenly:**

- Confirm the turntable is rotating during cooking. If not, refer to "Turntable Not Rotating" above.
- Ensure the food container is appropriate for microwave use and allows for proper heat distribution.

SPECIFICATIONS

Part Number:	00792452
Replaces Part Numbers:	00775125, 00792452
Material:	Glass
Overall Diameter:	Approximately 14 1/8 inches (35.88 cm)
Turntable Track Diameter:	10 1/4 inches (26.03 cm)
Manufacturer:	Bosch

WARRANTY AND SUPPORT

As a genuine Original Equipment Manufacturer (OEM) part, this Bosch turntable tray is manufactured to high standards. For specific warranty information regarding replacement parts, please refer to the documentation that came with your original Bosch appliance or contact Bosch customer support directly.

For further assistance or to inquire about other genuine Bosch parts, please visit the official Bosch Home Appliances website or contact their customer service line. Always provide your appliance's full model number and serial number when seeking support.

You can find more information and support on the [Bosch Store on Amazon](#).

