

[manuals.plus](#) /

› [Fisher & Paykel](#) /

› [Fisher & Paykel DD24DAX9 N Series 7 Contemporary Double DishDrawer™ Dishwasher User Manual](#)

Fisher & Paykel DD24DAX9

Fisher & Paykel DD24DAX9 N Series 7 Contemporary Double DishDrawer™ Dishwasher User Manual

Model: DD24DAX9 | Brand: Fisher & Paykel

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Fisher & Paykel DD24DAX9 N Series 7 Contemporary Double DishDrawer™ Dishwasher. Designed for modern kitchens, this appliance offers flexible washing solutions with its independent drawers and quiet operation.

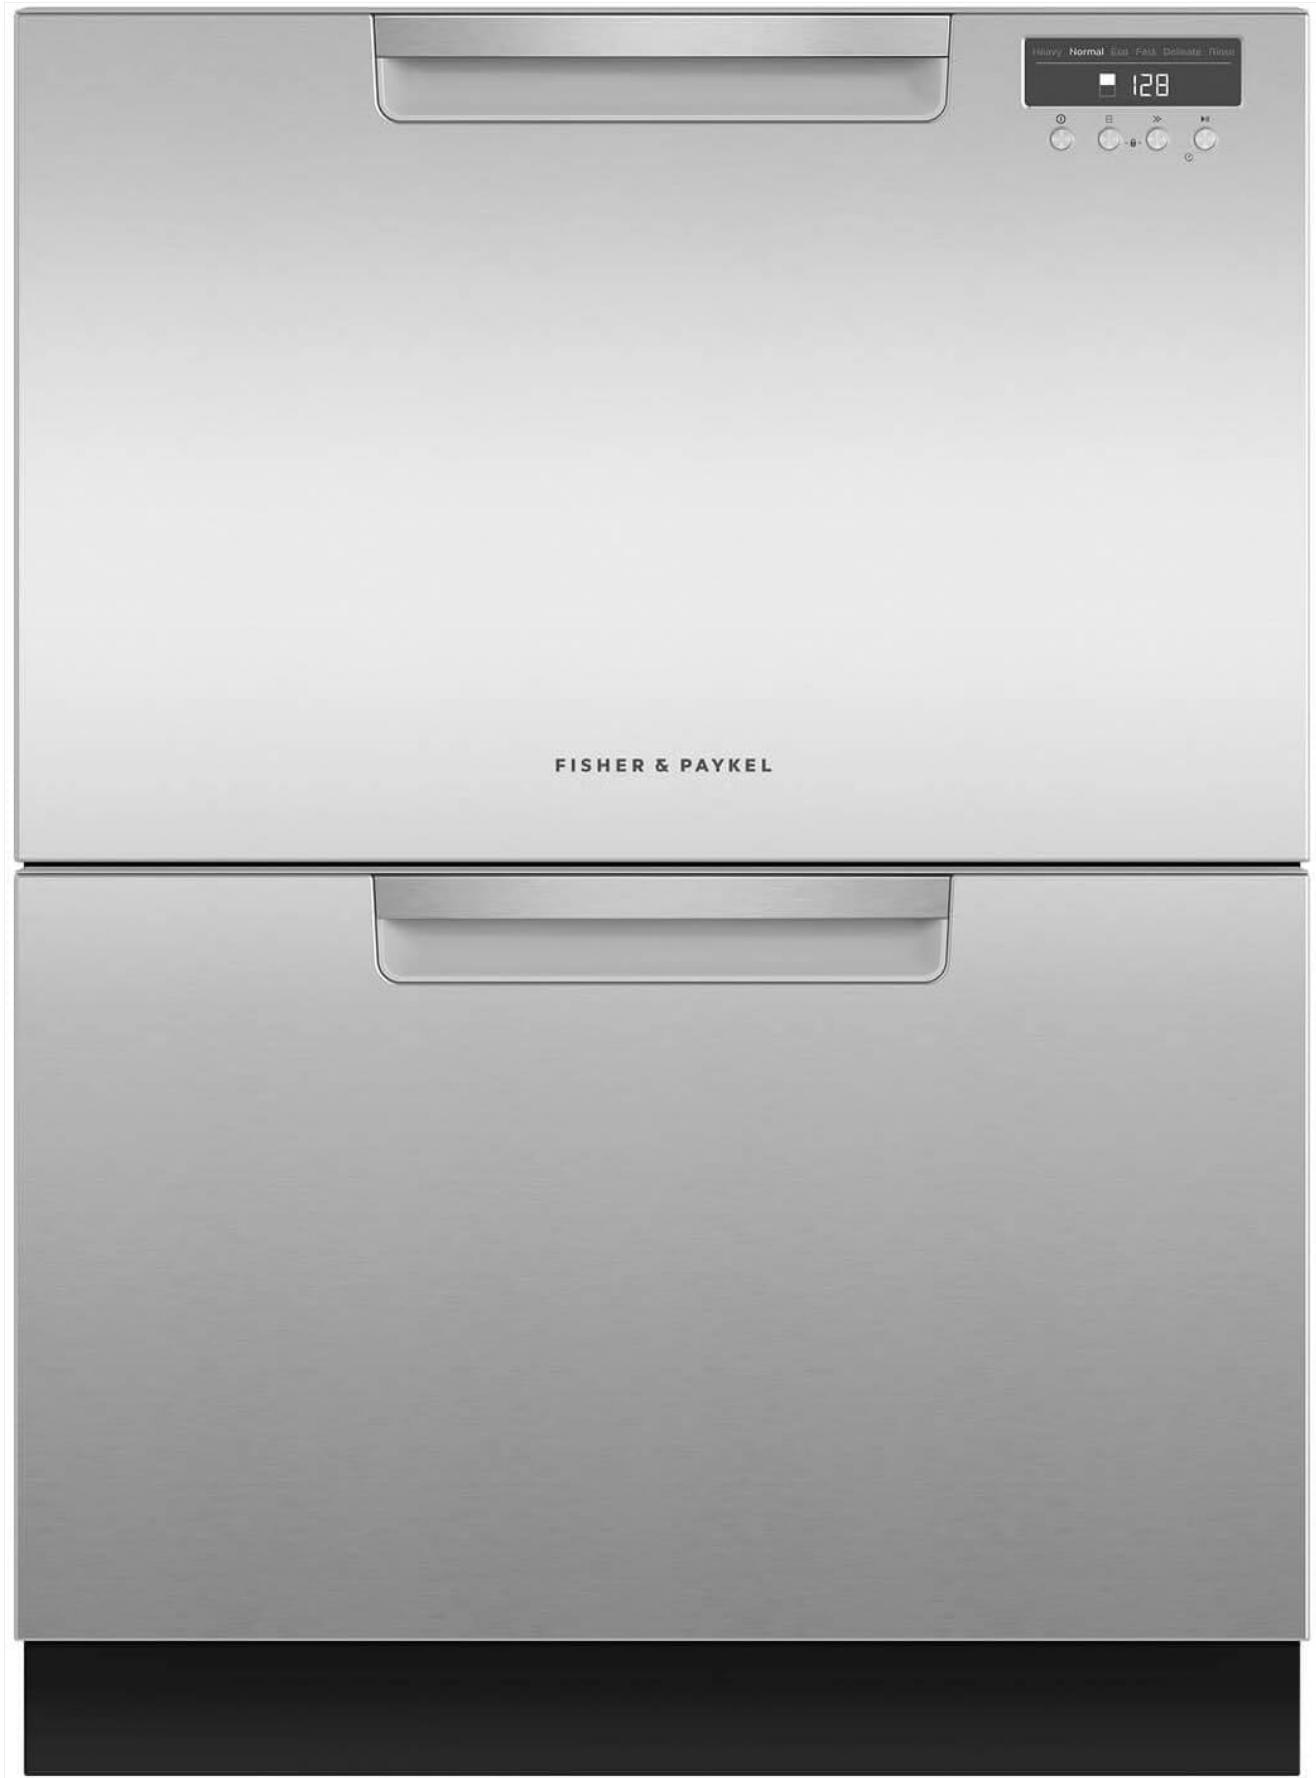


Figure 1: Front view of the Fisher & Paykel DD24DAX9 N Series 7 Double DishDrawer™ Dishwasher.

2. SAFETY INFORMATION

Please read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the dishwasher is properly grounded. Do not operate with a damaged power cord.
- **Water Connections:** Verify all water connections are secure to prevent leaks.
- **Child Safety:** Keep children away from the dishwasher when it is operating. Do not allow them to play with the controls.
- **Proper Use:** Use only detergents and rinse aids recommended for automatic dishwashers. Do not wash plastic items unless marked 'dishwasher safe'.
- **California Proposition 65 Warning:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

3. SETUP

The Fisher & Paykel DD24DAX9 is designed for built-in installation. Proper installation is crucial for optimal performance and safety. It is recommended that installation be performed by a qualified technician.

3.1. Unpacking and Placement

- Carefully remove all packaging materials.
- Position the dishwasher in the designated cabinet space, ensuring adequate clearance for plumbing and electrical connections.

3.2. Plumbing Connections

- Connect the water supply hose to a hot water line with a shut-off valve.
- Connect the drain hose to the sink drain or garbage disposal, ensuring proper air gap installation to prevent backflow.

3.3. Electrical Connection

- The dishwasher operates on 120 Volts. Ensure the electrical supply meets the appliance requirements.
- Connect the power cord to a dedicated, grounded electrical outlet.

For detailed diagrams and step-by-step instructions, please refer to the comprehensive installation guide provided with your appliance or consult the official Fisher & Paykel website.

4. OPERATING INSTRUCTIONS

The Double DishDrawer™ design allows for flexible loading and independent operation of each drawer.

4.1. Loading the Dishwasher

- Pull out a drawer completely.
- Place dishes, bowls, and cups in the racks. The racks are designed to accommodate various sizes.
- Utilize the adjustable racks and fold-down tines to fit larger items like pots and pans.
- Place cutlery in the included cutlery basket.



Figure 2: Example of a fully loaded upper drawer, demonstrating efficient space utilization.



Figure 3: Easy loading of dishes into the ergonomic drawer design.

4.2. Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of powder or liquid dishwasher detergent.
- Fill the rinse aid dispenser as needed.
- *Note:* This dishwasher is optimized for powder or liquid detergent. Some users report better results with these types over pods.

4.3. Selecting a Wash Cycle

Close the drawer firmly. The control panel is located on the top edge of the drawer. Use the cycle selection button to scroll through the available wash programs:

- **Heavy:** For heavily soiled pots, pans, and dishes.
- **Medium:** For normal daily loads.

- **Eco:** An energy-efficient cycle for normally soiled dishes.
- **Fast:** For lightly soiled dishes that need a quick wash.
- **Delicate:** Gentle wash for fragile items like glassware.
- **Rinse:** For rinsing dishes that will be washed later.

Additional options like 'Extra Dry', 'Quick', and 'Sanitize' can be selected to customize your wash.



Figure 4: Control panel displaying wash cycle options and remaining time.

4.4. Starting a Wash

After selecting your desired cycle and options, press the 'Start' button. The dishwasher will begin its cycle. The display will show the remaining time.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

5.1. Cleaning the Filters

Periodically check and clean the filters located at the bottom of each drawer to remove food particles and debris. Refer to the full manual for detailed filter cleaning instructions.

5.2. Exterior Cleaning

Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners that can scratch the surface.

5.3. Interior Cleaning

Run a dishwasher cleaning cycle with a specialized cleaner or a cup of white vinegar to remove mineral buildup and odors.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, try the following common solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged filters, insufficient detergent.	Reload dishes correctly, clean filters, use appropriate detergent amount.
White spots on glassware	Hard water, insufficient rinse aid.	Increase rinse aid, consider a water softener if hard water is an issue.
Dishwasher not starting	Door not fully closed, power supply issue, cycle not selected.	Ensure door is latched, check power, select a wash cycle.
Unusual noise	Items obstructing spray arm, foreign object in pump.	Rearrange items, inspect and remove any obstructions.

For more complex issues or persistent problems, refer to the detailed troubleshooting section in your full user manual or contact customer support.

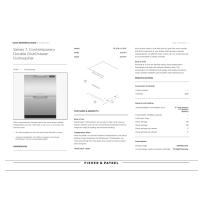
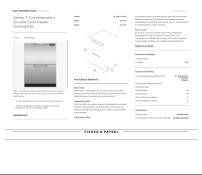
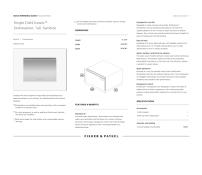
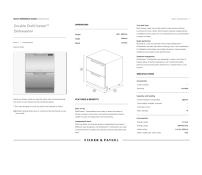
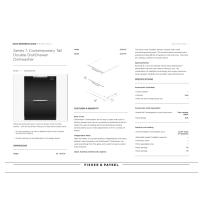
7. SPECIFICATIONS

Feature	Specification
Brand	Fisher & Paykel
Model Name	SERIES 7 DD24DAX9 N
Form Factor	Freestanding
Installation Type	Built-In
Product Dimensions	16"D x 21"W x 24"H (40.64 cm D x 53.34 cm W x 60.96 cm H)
Item Weight	35 Pounds (15.88 kg)
Voltage	120 Volts
Annual Energy Consumption	144 Kilowatt Hours
Water Consumption	34 Gallons (128.7 Liters)
Noise Level	43 Decibels
Number of Settings	6
Cycle Options	Heavy, Medium, Eco, Fast, Delicate, Rinse
Special Feature	Adjustable Height
Material Type	Stainless Steel
Included Components	Cutlery Basket
Certification	ADA, Energy Star
UPC	822843815968

8. WARRANTY & SUPPORT

Your Fisher & Paykel DishDrawer™ Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including coverage details and duration. For technical assistance, service requests, or to purchase genuine replacement parts, please contact Fisher & Paykel Customer Support. Contact information can be found on the official Fisher & Paykel website or in your product documentation.

Related Documents - DD24DAX9

	<p><u>Fisher & Paykel Series 7 Contemporary Double DishDrawer Dishwasher DD24DAX9N Quick Reference Guide</u></p> <p>Quick reference guide for the Fisher & Paykel Series 7 Contemporary Double DishDrawer Dishwasher (Model DD24DAX9N). Features, specifications, dimensions, power requirements, wash programs, and support information.</p>
	<p><u>Fisher & Paykel Series 7 Contemporary Double DishDrawer Dishwasher Quick Reference Guide</u></p> <p>A quick reference guide for the Fisher & Paykel Series 7 Contemporary Double DishDrawer Dishwasher, detailing features, benefits, specifications, dimensions, and performance metrics.</p>
	<p><u>Fisher & Paykel Series 7 Contemporary Double Dish Drawer Dishwasher Quick Reference Guide</u></p> <p>Quick reference guide for the Fisher & Paykel Series 7 Contemporary Double Dish Drawer Dishwasher (DD24DAX9 N), detailing dimensions, features, benefits, specifications, and performance.</p>
	<p><u>Fisher & Paykel Single DishDrawer Dishwasher DD24ST4NX9 - Quick Reference Guide</u></p> <p>Detailed quick reference guide for the Fisher & Paykel Single DishDrawer™ Dishwasher, Tall, Sanitize (DD24ST4NX9). Covers dimensions, features, wash programs, specifications, and customer support information.</p>
	<p><u>Fisher & Paykel Double DishDrawer Dishwasher DD60DAX9 Quick Reference Guide</u></p> <p>Quick reference guide for the Fisher & Paykel Double DishDrawer™ Dishwasher (Model DD60DAX9), detailing dimensions, features, specifications, controls, and wash programs. Includes support information.</p>
	<p><u>Fisher & Paykel Series 7 Tall Double DishDrawer Dishwasher - Quick Reference Guide & Specifications</u></p> <p>Quick reference guide for the Fisher & Paykel Series 7 Contemporary Tall Double DishDrawer Dishwasher, detailing features, benefits, specifications, dimensions, performance, and energy consumption.</p>