



Manuals.plus /

› **Timberland** /

› Timberland Analog Orange Dial Men's Watch TBL.15378JS/02AS User Manual

Timberland TBL.15378JS/02AS

Timberland Analog Orange Dial Men's Watch

MODEL: TBL.15378JS/02AS

Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your Timberland Analog Orange Dial Men's Watch, Model TBL.15378JS/02AS. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.



Image: The Timberland Analog Orange Dial Men's Watch, Model TBL.15378JS/02AS, displayed on a wrist, showcasing its design and fit.

Setup

1. Setting the Time

Your watch features a Quartz movement with an analog display. To set the time:

1. Pull the crown (the small knob on the side of the watch case) out to the first position.

2. Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

2. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure the strap is securely attached and the buckle functions correctly. The watch is powered by a Quartz movement and should begin running once the crown is pushed in, assuming the battery is active.

Operating the Watch

This watch is designed for straightforward timekeeping. It features an analog display for easy reading of hours, minutes, and seconds.

Water Resistance

The watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet to prevent water ingress.



Image: A detailed view of the watch face, highlighting the orange dial, hands, and case details.

Maintenance

Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals. Clean with a slightly damp cloth and allow to air dry.

Battery Replacement

The watch is powered by a Quartz movement. When the watch stops or the hands move erratically, it may indicate a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance. The watch uses a SR626SW (377) battery.

Troubleshooting

If you encounter issues with your watch, consider the following:

- **Watch Not Running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.

- **Incorrect Time:** Reset the time as described in the 'Setup' section.
- **Water Inside Watch:** If condensation or water appears inside the watch, immediately take it to a professional for inspection and repair to prevent further damage.

For issues not resolved by these steps, please contact Timberland customer support or an authorized service center.

Specifications

Feature	Specification
Model Number	TBL.15378JS/02AS
Dial Color	Orange
Case Shape	Round
Dial Glass Material	Mineral
Band Color	Black
Band Material	Leather
Movement Type	Quartz
Display Type	Analog
Case Material	Brass
Case Diameter	40 Millimetres
Case Thickness	13 Millimetres
Water Resistance Depth	50 Metres
Item Weight	68 Grams
Battery Type	SR626SW (377)

Warranty and Support

Warranty Information

Your Timberland watch comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the strap or battery.

Customer Support

For warranty claims, service, or further assistance, please refer to the contact information provided with your purchase documentation or visit the official Timberland website for authorized service centers.

