

Domo DO9182KR

DOMO DO9182KR Kitchen Machine Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use can lead to injury or damage to the appliance.

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving parts during operation to prevent injury and damage to the appliance.
- Never operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only original accessories and spare parts.
- Do not use the appliance outdoors.
- Place the appliance on a stable, flat, and dry surface.

2. PRODUCT OVERVIEW

The DOMO DO9182KR Kitchen Machine is a versatile appliance designed for various food preparation tasks, featuring a powerful 1000W motor and an 8-speed control knob. It comes with a 4.5-liter stainless steel mixing bowl and multiple attachments.

Main Unit and Components



Image: The DOMO DO9182KR Kitchen Machine, showing the main motor unit, stainless steel mixing bowl, and splash guard. The control knob and attachment ports are visible.

Included Accessories

- **Mixing Bowl:** 4.5-liter stainless steel bowl with handle.
- **Splash Guard:** Transparent cover to prevent splattering during operation.
- **Dough Hook:** For kneading heavy doughs like bread or pizza dough.
- **Balloon Whisk:** For whipping cream, egg whites, and light batters.
- **Beater:** For mixing cakes, cookies, and other medium-consistency batters.
- **Blender:** Glass jug attachment for blending liquids, smoothies, and sauces.
- **Vegetable Cutter:** Attachment with various drums for grating, slicing, and shredding vegetables.
- **Meat Grinder:** Attachment for grinding meat.



Image: Close-up view of the three primary mixing attachments: the balloon whisk, the dough hook, and the flat beater.



Image: The glass blender jug with its lid and blade assembly, designed to attach to the top port of the kitchen machine.



Image: Disassembled components of the meat grinder attachment, including the main body, tray, pusher, and various grinding plates.



Image: The main housing of the vegetable cutter attachment along with three different stainless steel drums for various cutting tasks.

3. SETUP AND ASSEMBLY

3.1 Initial Cleaning

1. Before first use, wash the mixing bowl, splash guard, and all attachments (dough hook, whisk, beater, blender jug, vegetable cutter parts, meat grinder parts) in warm soapy water.
2. Rinse thoroughly and dry all parts completely.
3. Wipe the motor unit with a damp cloth. Do not immerse it in water.

3.2 Assembling the Mixing Bowl and Attachments

1. Place the kitchen machine on a stable, flat, and dry surface.
2. To lift the motor head, press the release button located on the side of the unit and gently lift the head until it locks into place.
3. Place the stainless steel mixing bowl into its base, turning it clockwise until it is securely locked.
4. Select the desired attachment (dough hook, whisk, or beater). Align the attachment with the shaft and push upwards, then turn slightly to lock it into place.
5. Lower the motor head by pressing the release button again and gently pushing the head down until it clicks into its operating position.
6. Attach the splash guard by placing it over the bowl and rotating it until it fits securely.



Image: The kitchen machine with its head tilted upwards, illustrating the attachment point for the whisk, beater, or dough hook, and the empty mixing bowl.

3.3 Assembling Optional Attachments (Blender, Vegetable Cutter, Meat Grinder)

These attachments connect to specific ports on the motor unit. Refer to the individual attachment manuals for detailed assembly instructions if provided.

- **Blender:** Remove the cover from the top port of the motor unit. Place the assembled blender jug onto the port and turn to lock.



Image: The DOMO DO9182KR Kitchen Machine with the glass blender jug securely attached to the top port of the motor unit.

- **Meat Grinder:** Remove the cover from the front port of the motor unit. Insert the assembled meat grinder attachment and secure it.



Image: The DOMO DO9182KR Kitchen Machine with the meat grinder attachment installed on the front port, ready for use.

- **Vegetable Cutter:** Remove the cover from the front port of the motor unit. Insert the assembled vegetable cutter attachment with the desired drum and secure it.



Image: The DOMO DO9182KR Kitchen Machine with the vegetable cutter attachment installed on the front port, showing a grating drum.

4. OPERATING INSTRUCTIONS

4.1 General Operation

1. Ensure the appliance is correctly assembled and the motor head is locked down.
2. Plug the power cord into a suitable electrical outlet (230V).
3. Add ingredients to the mixing bowl or attachment.
4. Turn the speed control knob to the desired setting (1-8). Start with a lower speed and gradually increase if needed.
5. After use, turn the speed control knob to 'P' (Pulse) or '0' (Off) and unplug the appliance.

4.2 Using the Mixing Attachments

- **Dough Hook:** Use for heavy mixtures such as bread dough, pizza dough, or pasta dough. Recommended speeds: 1-3.



Image: The kitchen machine in operation, kneading dough in the stainless steel bowl using the dough hook attachment.

- **Balloon Whisk:** Ideal for whipping egg whites, cream, meringues, and light batters. Recommended speeds: 6-8.



Image: The kitchen machine actively whipping cream in the mixing bowl using the balloon whisk attachment.

- **Beater:** Suitable for medium-heavy mixtures like cake batter, cookie dough, or mashed potatoes. Recommended speeds: 3-5.



Image: The kitchen machine mixing a yellow batter in the bowl using the flat beater attachment.

4.3 Using the Blender Attachment

1. Ensure the blender jug is securely attached to the top port.
2. Add ingredients to the blender jug. Do not exceed the maximum fill line.
3. Secure the lid on the blender jug.
4. Select a speed setting (typically 4-8 for blending) or use the 'P' (Pulse) function for short bursts.
5. After blending, turn the knob to '0' and unplug before removing the jug.

4.4 Using the Meat Grinder Attachment

1. Ensure the meat grinder is securely attached to the front port.
2. Prepare meat by cutting it into small pieces that fit into the feed tube.
3. Place a bowl under the grinder outlet to collect the ground meat.

4. Turn the speed knob to a low to medium setting (e.g., 2-4).
5. Feed meat into the tube using the pusher. Never use your fingers.
6. After grinding, turn the knob to '0' and unplug before disassembling.

4.5 Using the Vegetable Cutter Attachment

1. Ensure the vegetable cutter is securely attached to the front port with the desired cutting drum inserted.
2. Place a bowl under the cutter outlet to collect the processed vegetables.
3. Turn the speed knob to a medium setting (e.g., 3-5).
4. Feed vegetables into the tube using the pusher. Never use your fingers.
5. After use, turn the knob to '0' and unplug before disassembling.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your kitchen machine.

5.1 General Cleaning

1. Always unplug the appliance before cleaning.
2. Wipe the motor unit with a damp cloth. Do not use abrasive cleaners or immerse in water.
3. The stainless steel mixing bowl, splash guard, dough hook, balloon whisk, and beater are dishwasher safe. Alternatively, wash them in warm soapy water, rinse, and dry thoroughly.
4. The blender jug and its components should be disassembled and washed in warm soapy water, then rinsed and dried.
5. Disassemble the meat grinder and vegetable cutter attachments completely. Wash all parts in warm soapy water, rinse, and dry immediately to prevent corrosion, especially for metal parts.

5.2 Storage

Store the appliance and its accessories in a clean, dry place, out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your DOMO DO9182KR Kitchen Machine, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; motor head not locked down; speed knob not set.	Ensure power cord is securely plugged in. Check that the motor head is fully lowered and locked. Turn the speed knob to a setting other than '0'.
Attachments not rotating.	Attachment not correctly installed.	Remove and re-install the attachment, ensuring it clicks into place.
Unusual noise during operation.	Overload; improper assembly; foreign object.	Reduce the load. Check all parts for correct assembly. Unplug and inspect for any foreign objects. If noise persists, discontinue use and contact support.

Problem	Possible Cause	Solution
Motor stops during operation.	Overload protection activated.	Turn off the appliance, unplug it, and let it cool down for at least 30 minutes. Reduce the amount of ingredients before restarting.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Domo
Model	DO9182KR
Power	1000 Watts
Voltage	230 Volts
Capacity (Mixing Bowl)	4.5 Liters
Number of Speeds	8
Control Type	Knob
Color	Black/Silver
Material	Stainless Steel (Bowl), Plastic/Metal (Housing/Attachments)
Product Dimensions (D x W x H)	27 cm x 39.5 cm x 33.5 cm
Item Weight	8.85 Kilograms
Power Cord Length	120 cm
Dishwasher Safe Parts	Mixing Bowl, Splash Guard, Dough Hook, Balloon Whisk, Beater

8. WARRANTY AND SUPPORT

This DOMO appliance is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or warranty inquiries, please contact your retailer or the official DOMO customer service in your region. Contact details can typically be found on the DOMO website or on your product packaging.

You may also visit the official DOMO website for more information:www.domo-elektro.be



[pdf] User Manual Instructions

DO9182KR DOMO 26 oct 2023 — Lees aandachtig alle instructies bewaar deze handleiding voor latere raadpleging Lisez attentivement les instructions gardez le mode d emploi pour instruction manual domo elektro be nl amfile file 1173 product 1852 |||

DO9182KR Handleiding Keukenrobot Mode d emploi Robot de cuisine
Gebrauchsanleitung Kchenmaschine Instruction booklet Stand mixer Manual de
instrucciones Robot de cocina Nvod k pouzit Kuchysk robot sada Nvod na pouzitie
Kuchynsk robot - sada PRODUCT OF Lees aandachtig alle instructie...

lang:nl score:52 filesize: 3.29 M page_count: 76 document date: 2023-10-19




[pdf] User Manual Instructions

DOMO DO9182KR Black 817890 Manual domo do9182kr zwart manuals coolblue nl 3a |||

DO9182KR Handleiding Keukenrobot Mode d emploi Robot de cuisine
Gebrauchsanleitung Kchenmaschine Instruction booklet Stand mixer Manual de
instrucciones Robot de cocina Nvod k pouzit Kuchysk robot sada Nvod na pouzitie
Kuchynsk robot - sada PRODUCT OF Lees aandachtig alle instructie...

lang:nl score:51 filesize: 2.68 M page_count: 68 document date: 2017-09-15

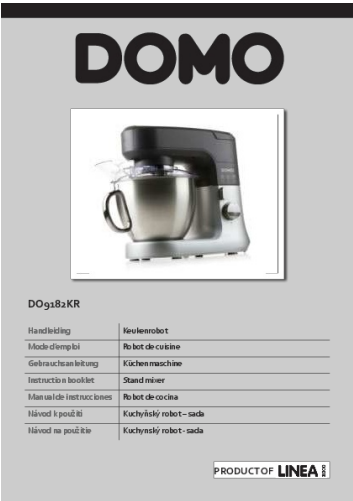

[DOMO DO9182KR Keukenrobot Handleiding](#)

Handleiding voor de DOMO DO9182KR keukenrobot. Bevat instructies voor montage, gebruik, veiligheid, reiniging en onderhoud van dit veelzijdige keukenapparaat.

lang:nl score:50 filesize: 2.93 M page_count: 68 document date: 2021-04-20



[\[pdf\]](#) User Manual Instructions

Mode d'emploi DOMO BLACK DO9182KR chez Vanden Borre comparez et achetez facilement ! M FR

DO9182KR data vandenborre be manual |||

Downloaded from www.vandenborre.be **DO9182KR** Handleiding Keukenrobot Mode d'emploi Robot de cuisine Gebrauchsanleitung Kchenmaschine Instruction booklet Stand mixer Manual de instrucciones Robot de cocina Nvod k pouziti Kuchysk robot sada Nvod na pouzitie Kuchynsk robot - sada PRODUCT ...


lang:nl score:44 filesize: 3.62 M page_count: 68 document date: 2018-05-09



[DOMO DO9182KR Keukenrobot Handleiding en Gebruiksaanwijzing](#)

Officiële handleiding voor de DOMO DO9182KR keukenrobot. Bevat gedetailleerde instructies voor montage, veilig gebruik, reiniging, onderhoud en alle functies van dit veelzijdige keukenapparaat.

lang:nl score:37 filesize: 839.53 K page_count: 68 document date: 2025-09-01

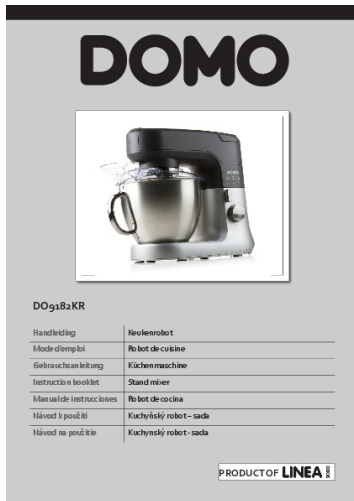

[\[pdf\]](#) User Manual Instructions

Universal Küchenmaschine 1000 Watt 4 5 L Edelstahl Rührschüssel DO9182KR 913593 80959399 766D

41A2 9CF9 8C423BF9F79D westfalia versand at media 68 c3 e3 1669695175 |||

DO9182KR Handleiding Keukenrobot Mode d emploi Robot de cuisine

Gebrauchsanleitung Kchenmaschine Instruction booklet Stand mixer Manual de

instrucciones Robot de cocina Nvod k pouzit Kuchysk robot sada Nvod na použitie

Kuchynsk robot - sada PRODUCT OF Lees aandachtig alle instructie...

lang:nl **score:27** filesize: 2.71 M page_count: 68 document date: 2018-05-09



[\[pdf\]](#)

Télécharger la fiche produit DOMO DO9182KR Robot pâtissier Villatech 1000114170 c villatech fr media

|||

DO9182KR VEGETABLE SLICER STANDMIXER 4,5 L MEAT GRINDER

Keukenrobot Robot de cuisine BALLOON WHISK / BEATER / DOUGH HOOK --

Vermogen: 1000 W -- Geluidsarm -- Mengkom van 4,5 L uit geborsteld roestvrijstaal

met transparant antispattdeksel met vulopening -- Volledig metalen

versnellingsysteem...

lang:fr **score:25** filesize: 592.11 K page_count: 1 document date: 2020-07-31



[\[pdf\]](#)

ELECTROPEM véronique lizano Télécharger la fiche technique Robot patissier DOMO DO9182KR 4934

excedent electromenager fr modules storecommander import docTechniques |||

27 rue Victor Schoelcher - 68200 MULHOUSE TI. 33 0 3 89 60 75 70 E-mail :

commercial@slk-electro.fr **DO9182KR** ROBOT DE CUISINE 1000 W Bol de 4,5 l en

acier inoxydable brossé. Couverture anti claboussures avec orifice de remplissage.

Système d'engrenages en mtal. Contrôle de vitesse 8 niveaux. M...

lang:fr **score:24** filesize: 651.69 K page_count: 1 document date: 2018-01-12

DOMO



DO9182KR

Handleiding	Keukenrobot
Mode d'emploi	Robot de cuisine
Gebrauchsanleitung	Küchenmaschine
Instructions booklet	Stand mixer
Manual de instrucciones	Robot de cocina
Návod k použití	Kuchyňský robot - sada
Návod na použitie	Kuchyňský robot - sada

PRODUCT OF LINEA

[\[pdf\]](#) User Manual Instructions

6486534 westfalia eu service dat down datei id

DO9182KR Handleiding Keukenrobot Mode d emploi Robot de cuisine

Gebrauchsanleitung Kchenmaschine Instruction booklet Stand mixer Manual de

instrucciones Robot de cocina Nvod k pouzit Kuchysk robot sada Nvod na pouzitie

Kuchynsk robot - sada PRODUCT OF Lees aandachtig alle instructie...

lang:nl **score:20** filesize: 2.71 M page_count: 68 document date: 2018-05-09