

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [MITSUBISHI](#) /
- > [Mitsubishi Electric Mr Slim E1209C426 Replacement Air Conditioner Remote Controller Instruction Manual](#)

MITSUBISHI E1209C426

Instruction Manual

MITSUBISHI ELECTRIC MR SLIM E1209C426 REPLACEMENT AIR CONDITIONER REMOTE CONTROLLER

1. Introduction

This manual provides detailed instructions for the proper use and maintenance of your Mitsubishi Electric Mr Slim E1209C426 Replacement Air Conditioner Remote Controller. This genuine Mitsubishi Electric original replacement part is designed to work seamlessly with compatible Mitsubishi Electric indoor units, ensuring optimal control over your air conditioning system.

Compatible indoor unit models include: MSZ-GE06NA, MSZ-GE09NA, MSZ-GE12NA, MSZ-GE15NA, MSZ-GE18NA, MSZ-GE06NA-8, MSZ-GE09NA-8, MSZ-GE12NA-8, MSZ-GE15NA-8, MSZ-GE18NA-8.

2. Product Overview



Figure 1: Front view of the E1209C426 Remote Controller. This image displays the remote's layout, including the LCD screen at the top, followed by the main power button, temperature adjustment buttons, and various function buttons such as MODE, FAN, VANE,

SMART SET, START, STOP, and TIME controls. The remote is white with clearly labeled buttons.

The E1209C426 remote controller features an ergonomic design for comfortable handling and intuitive operation. Key components include:

- **LCD Display:** Shows current settings, temperature, mode, fan speed, and timer status.
- **ON/OFF Button:** Powers the air conditioning unit on or off.
- **Temperature Adjustment Buttons (TOO WARM / TOO COOL):** Used to increase or decrease the desired temperature setting.
- **MODE Button:** Cycles through operating modes (e.g., Auto, Cool, Dry, Heat, Fan).
- **FAN Button:** Adjusts the fan speed.
- **VANE Button:** Controls the airflow direction or swing function of the indoor unit.
- **START/STOP Buttons:** Used for setting timer operations.
- **TIME Buttons (Up/Down Arrows):** Adjusts timer settings.
- **SMART SET Button:** Activates or deactivates pre-programmed comfort settings.
- **RESET CLOCK Button:** Resets the internal clock of the remote.

3. Setup

3.1. Battery Installation

The remote controller requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote controller.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two new AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Upon successful battery installation, the LCD display should illuminate, indicating the remote is ready for use. No pairing is typically required for this genuine replacement remote; it should function immediately with compatible Mitsubishi Electric indoor units.

4. Operating Instructions

Ensure there is a clear line of sight between the remote controller and the indoor unit's receiver for proper communication.

4.1. Power On/Off

- Press the **ON/OFF** button once to turn the air conditioning unit on or off.

4.2. Adjusting Temperature

- Press the **TOO WARM** button to increase the set temperature.
- Press the **TOO COOL** button to decrease the set temperature.

4.3. Selecting Operating Mode

- Press the **MODE** button repeatedly to cycle through available operating modes (e.g., Auto, Cool, Dry, Heat, Fan). The selected mode will be displayed on the LCD.

4.4. Adjusting Fan Speed

- Press the **FAN** button repeatedly to adjust the fan speed (e.g., Low, Medium, High, Auto).

4.5. Controlling Airflow (VANE)

- Press the **VANE** button to adjust the vertical airflow direction or activate the swing function.

4.6. Timer Operations

- Press the **START** button to set a start timer. Use the **TIME** arrows to adjust the desired start time.
- Press the **STOP** button to set a stop timer. Use the **TIME** arrows to adjust the desired stop time.
- Confirm timer settings by pressing the respective START or STOP button again.

4.7. SMART SET Function

- Press the **SMART SET** button to activate or deactivate a pre-programmed comfort setting. Refer to your air conditioning unit's main manual for details on configuring this feature.

4.8. Resetting Clock

- Use a thin, pointed object (like a paperclip) to gently press the **RESET CLOCK** button to reset the remote's internal clock.

5. Maintenance

5.1. Battery Replacement

Replace batteries when the display becomes dim or the remote's response is sluggish. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning the Remote Controller

Wipe the remote controller with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface or internal components.

5.3. Storage

If the remote controller will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the unit.

6. Troubleshooting

Problem	Possible Cause	Solution
Remote not responding / Unit not reacting.	Dead or low batteries. Obstruction between remote and unit. Remote out of range.	Replace batteries with new AAA batteries. Remove any obstructions. Move closer to the indoor unit.
LCD display is dim or blank.	Low batteries.	Replace batteries.
Unit responds intermittently.	Weak battery signal or interference.	Replace batteries. Ensure no strong light sources (e.g., direct sunlight) are interfering with the receiver.

If problems persist after attempting these solutions, please contact Mitsubishi Electric customer support or a qualified service technician.

7. Specifications

Feature	Detail
Model Number	E1209C426
Brand	MITSUBISHI ELECTRIC
Product Dimensions	6.31 x 2.31 x 0.75 inches
Item Weight	3.2 ounces
Batteries Required	2 AAA batteries
Color	White
Special Feature	Ergonomic
Max Number of Supported Devices	1
Compatible Devices	Mitsubishi Electric indoor units: MSZ-GE06NA, MSZ-GE09NA, MSZ-GE12NA, MSZ-GE15NA, MSZ-GE18NA, MSZ-GE06NA-8, MSZ-GE09NA-8, MSZ-GE12NA-8, MSZ-GE15NA-8, MSZ-GE18NA-8

8. Warranty and Support

As a genuine Mitsubishi Electric original replacement part, this remote controller is manufactured to high-quality standards. For specific warranty information regarding this product, please refer to the documentation provided with your original air conditioning unit or contact Mitsubishi Electric customer service directly.

For technical support or inquiries, please visit the official Mitsubishi Electric website or contact their authorized service centers. Ensure you have your product model number (E1209C426) and the model number of your indoor air conditioning unit readily available when seeking support.

Note: This remote is a direct replacement and does not require complex setup or programming beyond battery installation for compatible units.