

## Necchi NCV10A

# Necchi NCV10A Overlock and Coverstitch Machine Instruction Manual

Model: NCV10A

## 1. INTRODUCTION AND OVERVIEW

---

The Necchi NCV10A is a versatile semi-automatic electric sewing machine designed for both overlock and coverstitch functions. This combo machine is capable of performing perfect coverstitch and chain stitch operations using 3, 4, or 5 threads and 1, 2, or 3 needles. It also functions as an overlock machine with 2, 3, 4, or 5 threads and 1, 2, or 3 needles. Its adjustable differential feed and stitch length allow it to adapt to various fabric types. This manual provides essential information for the safe and efficient operation, setup, and maintenance of your Necchi NCV10A machine.

## 2. SAFETY INSTRUCTIONS

---

### WARNING:

- Always operate the product in environments free from humidity.
- This appliance is not suitable for use by children under 8 years of age. Adult supervision is required for any use by children.
- Before cleaning, servicing, or when not in use, always unplug the machine from the power outlet.
- Keep fingers away from all moving parts, especially the needle and cutting blades.
- Use only accessories recommended by the manufacturer.

## 3. PRODUCT FEATURES

---

The Necchi NCV10A machine offers a range of features to enhance your sewing experience:

- **Versatile Stitching:** Capable of 2, 3, 4, or 5-thread sewing.
- **20 Sewing Programs:** A wide selection of stitch options for various projects.
- **Adjustable Cut Width:** Cut width can be adjusted from 4 mm to 7 mm.

- **Adjustable Stitch Length:** Stitch length can be set from 0.5 mm to 4 mm.
- **Differential Feed Control:** Transport differential adjustable from 0.5 to 2.5 for managing different fabric types and preventing stretching or puckering.
- **Presser Foot Pressure Adjustment:** Allows for optimal fabric feeding.
- **Knife Disengagement:** The cutting knife can be disengaged when not needed.
- **Integrated Thread Cutter:** For convenient thread trimming.
- **Easy Access:** Features an opening hook cover and a side cover that opens for easy access to the cutting devices and simplified color-coded threading.

## 4. SETUP

---

### 4.1 Unpacking and Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat surface with adequate lighting. Ensure there is enough space around the machine for comfortable operation and fabric handling.

### 4.2 Power Connection

Connect the foot pedal to the machine. Plug the power cord into a suitable electrical outlet. Ensure the power switch is in the 'OFF' position before connecting.

### 4.3 Spool and Threading Setup

The Necchi NCV10A features a color-coded threading system for ease of use. Refer to the machine's internal diagrams and the image below for guidance on placing thread spools and initial threading.



**Figure 1:** Top view of the Necchi NCV10A machine, illustrating the placement of thread spools on the spool pins and the initial path through the thread guides. This view is crucial for understanding the threading process.

Follow the color-coded guides carefully to thread each needle and looper. Incorrect threading is a common cause of stitching issues.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

Locate the power switch, usually on the side or front of the machine, and switch it to the 'ON' position to begin operation. Switch to 'OFF' when finished or when making adjustments.

### 5.2 Stitch Selection and Adjustments

The Necchi NCV10A offers 20 different sewing programs. These programs, along with their recommended settings for stitch length, cut width, and differential feed, are often indicated on the machine's body. Adjust the dials for stitch length, cut width, and differential feed according to your chosen program and fabric type.



**Figure 2:** Front view of the Necchi NCV10A machine, displaying the various stitch diagrams and the corresponding adjustment dials for stitch length, differential feed, and tension. This visual aid helps in selecting and fine-tuning stitch settings.

### 5.3 Knife Engagement/Disengagement

For overlock stitches, the cutting knife is typically engaged to trim the fabric edge. For coverstitch or when you do not wish to trim, the knife can be disengaged. Refer to your machine's specific instructions for the lever or button controlling the knife.

### 5.4 Using the Thread Cutter

After completing a seam, use the integrated thread cutter, usually located on the side of the machine, to quickly and cleanly cut threads.

## 6. MAINTENANCE

### 6.1 Cleaning

Regular cleaning is essential for optimal performance. Use a small brush to remove lint and dust from the feed dogs, needle plate area, and looper mechanisms. The side cover and hook cover can be opened for easier access to internal components for cleaning.

### 6.2 Lubrication

Consult your machine's specific lubrication points if indicated in a more detailed manual. Generally, a few

drops of sewing machine oil on moving metal parts can help maintain smooth operation. Avoid over-oiling.

### 6.3 Needle Replacement

Replace needles regularly, especially if they become bent, dull, or if you experience skipped stitches. Always use the correct type and size of needles recommended for your Necchi NCV10A machine.

## 7. TROUBLESHOOTING

If you encounter issues with your Necchi NCV10A, consider the following common troubleshooting steps:

- **Skipped Stitches:** Check if the needle is bent or dull, ensure it is inserted correctly, and verify that the machine is threaded properly.
- **Thread Breakage:** Re-thread the machine carefully, check for correct tension settings, ensure the thread is not snagging, and inspect for burrs on thread guides.
- **Uneven Stitches/Fabric Puckering:** Adjust the differential feed, check tension settings, and ensure the presser foot pressure is appropriate for your fabric.
- **Machine Not Starting:** Ensure the power cord is securely plugged in, the power switch is 'ON', and the foot pedal is properly connected.

For persistent issues, contact customer support or a qualified service technician.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Necchi
Model Number	NCV10A
Color	White
Dimensions (L x W x H)	35.5 x 33 x 32.5 cm
Weight	8 Kilograms
Material	Die-cast aluminum interior, ABS shell
Power Source	Electric Cable
Automatic Stop Function	No
Spare Parts Availability	10 Years (EU)

## 9. WARRANTY AND SUPPORT

Your Necchi NCV10A machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the duration and coverage details. For technical support, spare parts, or service inquiries, please contact your authorized Necchi dealer or the manufacturer's customer service department. Keep your proof of purchase for warranty claims.

