

[Manuals.plus](#) /

› [Rowenta](#) /

› Rowenta DW8270 Pro Master X-CEL Steam Iron User Manual

Rowenta DW8270 Pro Master Xcel

Rowenta DW8270 Pro Master X-CEL Steam Iron User Manual

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Rowenta DW8270 Pro Master X-CEL Steam Iron. Designed for professional-quality results, this 1750-watt iron features a 200-gram steam boost and a patented Microsteam 400HD Profile soleplate for optimal ironing efficiency. Please read all instructions carefully before using the appliance and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage of your electrical outlet matches the voltage specified on the appliance.
- Do not leave the iron unattended while it is connected to the power supply or while it is hot.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron, cord, or plug in water or any other liquid.
- Unplug the iron from the electrical outlet before filling with water, emptying, or cleaning, and after each use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose.
- The soleplate and steam emitted are very hot and can cause burns. Handle with care.
- Place the iron on a stable, heat-resistant surface when resting.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Rowenta Pro Master X-CEL Steam Iron.



This image displays the Rowenta DW8270 Pro Master X-CEL Steam Iron from an angled perspective, highlighting its ergonomic handle, control buttons, and the sleek design of the soleplate. The power cord is visible at the rear.



This image shows a side view of the iron, emphasizing its profile and the transparent water tank, which allows for easy

monitoring of the water level. The metallic heatshield is also visible.





This image provides a close-up view of the patented Microsteam 400HD Profile soleplate, showcasing the numerous steam holes designed for even steam distribution and efficient gliding. The precision tip is also highlighted.





This image displays the top view of the iron, detailing the control panel including the temperature dial, steam settings, spray button, and the water filling inlet. The 'Made in Germany' inscription is also visible.

SETUP

Before First Use

1. Remove any labels or protective covers from the soleplate.
2. It is recommended to iron an old piece of fabric for a few minutes to eliminate any manufacturing residue from the soleplate.

Filling the Water Tank

1. Ensure the iron is unplugged from the electrical outlet.
2. Open the water tank inlet cover.
3. Fill the water tank with tap water up to the 'MAX' level indicator. Do not overfill.
4. Close the water tank inlet cover securely.

OPERATING INSTRUCTIONS

Temperature Control

1. Plug the iron into a suitable electrical outlet.
2. Turn the temperature dial to the desired setting according to the fabric type. Refer to the garment care label for guidance.
3. The indicator light will illuminate while the iron is heating and turn off when the selected temperature is reached.

Steam Ironing

1. Ensure the water tank is filled.
2. Set the temperature dial to a steam-compatible setting (usually indicated by steam symbols on the dial).
3. Once the iron reaches the set temperature, adjust the steam control to the desired steam output.
4. For a powerful burst of steam (200g), press the steam shot button. This is effective for stubborn wrinkles.

Dry Ironing

1. Ensure the water tank is empty or the steam control is set to the 'dry' position.
2. Set the temperature dial to the appropriate setting for your fabric.
3. Proceed with ironing as usual.

Vertical Steaming

1. Hang the garment on a hanger.
2. Set the iron to a high temperature with maximum steam.
3. Hold the iron vertically a few centimeters away from the fabric and press the steam shot button repeatedly to release steam.

Spray Function

1. Press the spray button to emit a fine mist of water onto the fabric, which helps to dampen and smooth out wrinkles.

Automatic Shut-off

For safety, the Rowenta DW8270 Pro Master X-CEL Steam Iron is equipped with a 3-way automatic shut-off system. The iron will automatically turn off after 8 minutes if left vertically, or after 30 seconds if left face down or on its side. The indicator light will flash to signal that the iron has entered auto shut-off mode. To restart, simply move the iron.

MAINTENANCE AND CARE

Cleaning the Soleplate

1. Ensure the iron is unplugged and completely cool before cleaning.
2. Wipe the stainless-steel soleplate with a damp cloth and a non-abrasive cleaner if necessary.
3. Do not use abrasive pads, scouring powders, or harsh chemicals as these can damage the soleplate.

Storage

1. After use, unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Store the iron in an upright position to prevent damage to the soleplate.
4. Wrap the power cord loosely around the cord wrap area if available, or secure it without tight coiling.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet issue; auto shut-off activated.	Check power connection; test outlet; move iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry'.	Fill water tank; set temperature higher; adjust steam control.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; anti-drip system working.	Increase temperature; do not overfill; allow iron to heat fully before steaming.

Problem	Possible Cause	Solution
Soleplate is dirty.	Starch or fabric residue buildup.	Clean soleplate with a damp cloth and non-abrasive cleaner when cool.

SPECIFICATIONS

Brand: Rowenta

Model Name: Pro Master Xcel

Special Feature: Auto Shutoff

Color: White

Recommended Uses: Steam Iron, Wrinkles

Base Material: Stainless Steel

Voltage: 230 Volts

Manufacturer: Rowenta US Web Site

UPC: 014501165069

Item Weight: 3.87 pounds

Package Dimensions: 12.72 x 7.52 x 5.75 inches

Date First Available: March 15, 2019

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Rowenta website. You may also contact Rowenta customer service directly for assistance with any product-related inquiries.