

SHYMERY CR2032

SHYMERY Flameless Votive Candles User Manual

Brand: SHYMERY | Model: CR2032

1. INTRODUCTION

Thank you for choosing SHYMERY Flameless Votive Candles. These innovative LED candles are designed to provide the warm, inviting glow of traditional candles without the associated risks of open flames, smoke, or dripping wax. Perfect for enhancing the ambiance of any setting, from intimate dinners to large celebrations, these candles are safe, long-lasting, and easy to use.

Each candle is crafted to mimic the appearance and flickering effect of a real flame, offering a realistic and bright illumination. With a long battery life, they are an ideal decorative solution for various occasions.

2. PRODUCT OVERVIEW

The SHYMERY Flameless Votive Candles come in a pack of 24, each measuring approximately $\Phi 1.5'' \times 1.7''$. They feature a warm white LED light that simulates a natural flickering flame. Made from durable plastic, these candles are designed for indoor use and offer a worry-free decorative experience.



Figure 2.1: SHYMERY Flameless Votive Candles, 24-Pack.

Key Features:

- **Realistic and Bright:** Designed to replicate the appearance of real candles with wavy edges and a soft, flickering light for an authentic experience.
- **Long Lasting Lighting Time:** Equipped with a 240mAh large capacity CR2032 battery, providing up to 200 hours of continuous operation.
- **Warm & Romantic:** Emits a romantic warm yellow light, creating a cozy and inviting atmosphere for any occasion.
- **Versatile Use:** Ideal for restaurants, home decor, garden weddings, parties, holiday decorations, and more.
- **Safe:** No fire hazard, smoke, or messy wax, making them safe for use around children and pets.



Figure 2.2: Product Dimensions and Key Features.

3. SETUP

Your SHYMERY Flameless Votive Candles are designed for immediate use. Follow these simple steps to get started:

1. **Unpack:** Carefully remove all candles from their packaging.
2. **Activate Battery:** Each candle comes with a pre-installed CR2032 battery. To activate, locate the small black plastic tab at the bottom of the candle. Gently pull and remove this tab. This connects the battery circuit.
3. **Power On:** Locate the small black ON/OFF switch on the bottom of the candle, next to the battery compartment. Slide the switch to the 'ON' position. The candle will immediately light up and begin to flicker.
4. **Placement:** Place the candles in your desired location. They fit perfectly in most votive holders and can be arranged on tables, shelves, windowsills, or within decorative displays.



Figure 3.1: Candles placed in decorative holders.

4. OPERATING INSTRUCTIONS

Operating your SHYMERY Flameless Votive Candles is straightforward:

- **Turning On:** Slide the switch on the bottom of the candle to the 'ON' position. The LED light will illuminate with a warm, flickering effect.
- **Turning Off:** To conserve battery life, slide the switch on the bottom of the candle to the 'OFF' position when not in use.



Figure 4.1: Candles providing ambient lighting.

5. MAINTENANCE

To ensure the longevity and optimal performance of your SHYMERY Flameless Votive Candles, follow these maintenance guidelines:

- **Battery Replacement:** The candles are powered by CR2032 batteries. When the light dims or stops flickering, it's time to replace the battery. To do so, slide the battery compartment cover open (if applicable) or gently pry out the old battery using a small tool. Insert a new CR2032 battery with the positive (+) side facing up.
- **Cleaning:** Wipe the candles with a soft, dry cloth to remove dust or smudges. Do not use abrasive cleaners or immerse them in water.

- **Storage:** Store candles in a cool, dry place when not in use. If storing for an extended period, remove the batteries to prevent leakage and corrosion.

6. TROUBLESHOOTING

If you encounter any issues with your SHYMERY Flameless Votive Candles, please refer to the following common troubleshooting tips:

- **Candle Not Lighting:**
 - Ensure the ON/OFF switch on the bottom is in the 'ON' position.
 - Check if the clear plastic battery tab has been completely removed.
 - Verify the battery is correctly inserted with the positive (+) side facing up.
 - Replace the CR2032 battery with a new one.
- **Light is Dim or Flickering Irregularly:**
 - This usually indicates a low battery. Replace the CR2032 battery.

If the problem persists after trying these steps, please contact customer service for further assistance.

7. SPECIFICATIONS

Attribute	Value
Brand	SHYMERY
Model Number	CR2032
Product Dimensions	1.5"D x 1.5"W x 1.7"H
Item Weight	13.9 Grams (0.49 ounces)
Light Source Type	LED
Light Color	Warm White
Power Source	Battery Powered (1 CR2032 battery included)
Battery Life	Up to 200 hours
Material	Acrylonitrile Butadiene Styrene (Plastic)
Switch Type	Push Button (ON/OFF switch on bottom)
Indoor/Outdoor Usage	Indoor
Number of Pieces	24

8. WARRANTY & SUPPORT

SHYMERY stands behind the quality of its products. Your Flameless Votive Candles come with a worry-free 6-month warranty.

If you have any questions, concerns, or problems with your product, please do not hesitate to contact our professional customer service team. We are committed to solving your problem within 24 hours.

For support, please refer to the contact information provided on your product packaging or the retailer's website.

© 2025 SHYMERY. All rights reserved.